


# CABLE, SHIFT

## REMOVAL


## REMOVAL

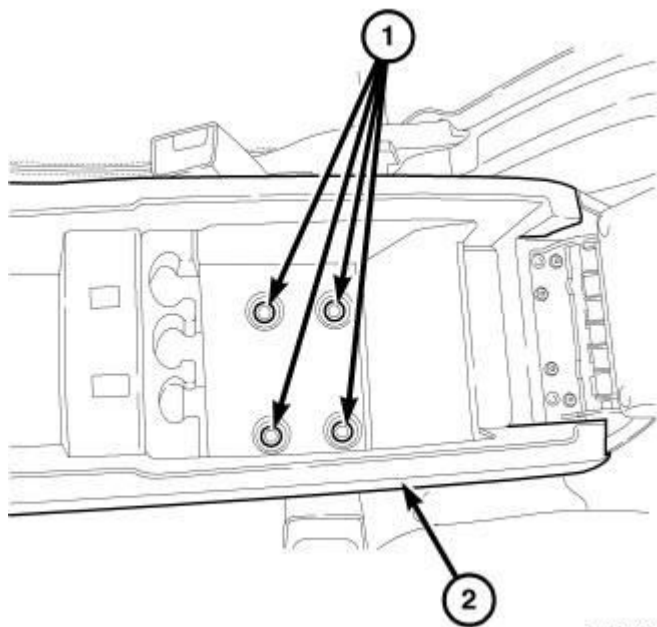

81d368f0

**Fig. 403: CENTER CONSOLE**  
Courtesy of CHRYSLER LLC

1. Disconnect battery negative cable.
2. Remove the center console. Refer to **Body/Interior/CONSOLE, Center - Removal** .

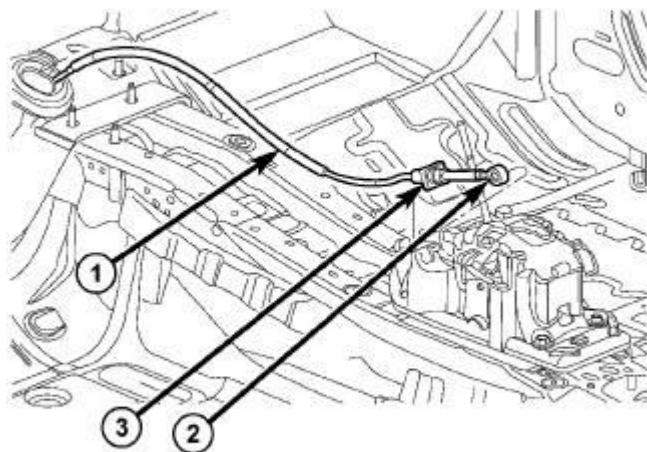

81a380a3


**Fig. 404: SHIFT CABLE AT SHIFTER**

Courtesy of CHRYSLER LLC

3. Disconnect and remove gearshift cable (2, 3) from shift mechanism.
4. Remove the air bag module and the dynamics sensor . Refer to **Restraints/MODULE, Occupant Restraint Controller - Removal** .
5. Remove the shift cable at the transmission and pull cable through.

## INSTALLATION

### INSTALLATION

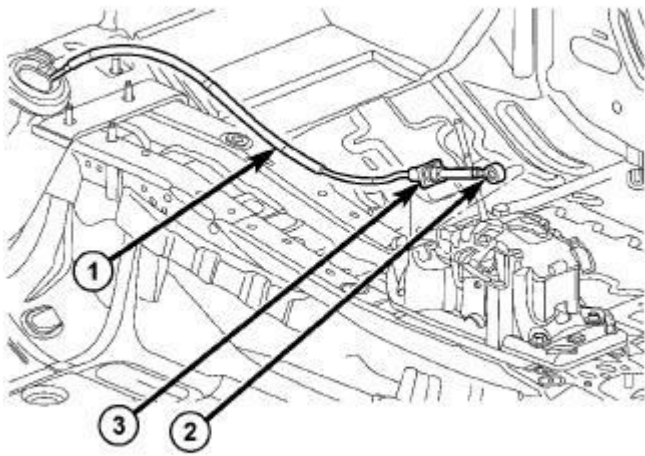


81a380a3

**Fig. 405: SHIFT CABLE AT SHIFTER**

Courtesy of CHRYSLER LLC

1. Install the shift cable through the bulkhead and ensure that the grommet is seated.
2. Install the cable at the transmission.
3. Install and connect gearshift cable (2, 3) at the shift mechanism.
4. Install the air bag module and the dynamics sensor . Refer to **Restraints/MODULE, Occupant Restraint Controller - Installation** .

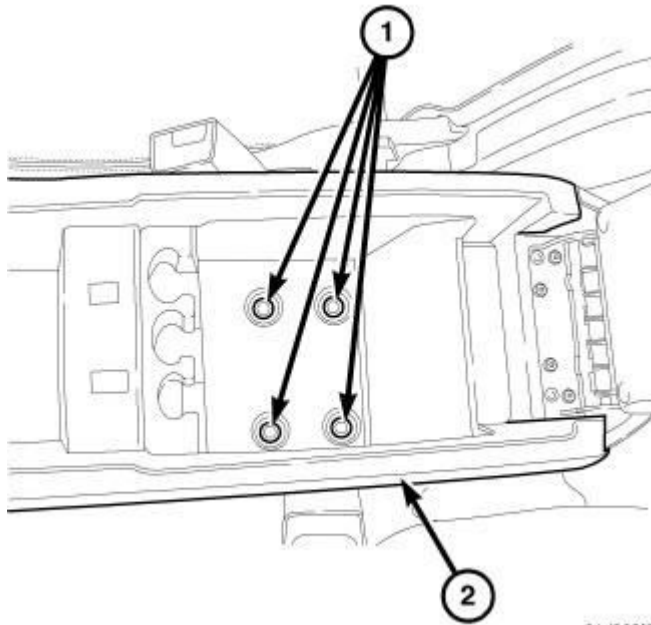

81d36810

**Fig. 406: CENTER CONSOLE**  
**Courtesy of CHRYSLER LLC**

5. Install the center console. Refer to **Body/Interior/CONSOLE, Center - Installation** .
6. Connect the battery.