

APPLICATION

WARNING: Vehicles are equipped with Supplemental Inflatable Restraint (SIR) system. When servicing vehicle, use care to avoid accidental air bag deployment. SIR system-related components are located in various locations throughout interior and exterior of vehicle, depending on application. Do not use electrical test equipment on or near these circuits. If necessary, deactivate SIR system before servicing components. See AIR BAG RESTRAINT SYSTEMS article.

TRANSMISSION APPLICATION

Application	Transmission Model
Excursion (Except 6.0L)	4R100
F250-F550 Super-Duty (Except 6.0L)	4R100