

REMOVAL & INSTALLATION

See appropriate TRANSMISSION REMOVAL & INSTALLATION - M/T article in MANUAL TRANS SERVICE section.

- For 1985 Ranger & Bronco II, see TRANSMISSION REMOVAL & INSTALLATION - M/T
- For 1986 Ranger & Bronco II, see TRANSMISSION REMOVAL & INSTALLATION - M/T
- For 1987 Ranger & Bronco II, see TRANSMISSION REMOVAL & INSTALLATION - M/T
- For 1988 Ranger & Bronco II, see TRANSMISSION REMOVAL & INSTALLATION - M/T
- For 1989 Ranger & Bronco II, see TRANSMISSION REMOVAL & INSTALLATION - M/T
- For 1990-92 Ranger & Bronco II, see TRANSMISSION REMOVAL & INSTALLATION - M/T