

# ON-VEHICLE SERVICE

## GEARSHIFT LEVER REPLACEMENT

### Removal

1. Shift transmission to Neutral position. Remove transfer case shift lever knob (if equipped). Remove carpet or floor mat to expose transmission shift lever boot screws. Remove transmission shift lever boot screws.
2. Slide boot upward on shift lever to expose transmission shift lever nut and bolt. Remove shift lever nut, bolt and shift lever.

### Installation

Install transmission shift lever. Ensure flat on transmission shift lever aligns with flat on transmission stub shaft so that shift lever bolt installs fully. Tighten bolt/nut to specification. See **TORQUE SPECIFICATIONS** table at end of article. To complete installation, reverse removal procedure.

## EXTENSION HOUSING SEAL

### Removal & Installation

Remove drive shaft. Remove seal using Extension Seal Remover (T74P-77248-A). Using Extension Housing Seal Replacer (T61L-7657-A), install NEW seal on extension housing. Ensure oil seal drain hole faces downward.

## EXTENSION HOUSING BUSHING

Extension housing bushing cannot be serviced. If bushing requires service or replacement, extension housing must be replaced as a unit.