

ON-VEHICLE SERVICE

The following components may be removed or serviced without transaxle removal.

- Axle Shaft Oil Seals
- Drive Axle Shafts
- Gearshift Control Shaft Oil Seal
- Vehicle Speed Sensor (VSS)

For removal and installation of listed components, see appropriate component under **REMOVAL & INSTALLATION**.

SHIFT LEVER ADJUSTMENT

Place transaxle in Neutral. Remove gearshift lever cover. Insert a 1/8" drill bit as shown in illustration. See **Fig. 5**. Raise and support vehicle. Open shift and selector cable cover. Unlock selector cable by pressing colored insert. Move gearshift lever to center position. Engage 3rd or 4th gear. Move gearshift lever to right-hand or left-hand stop position. Lock selector cable. Close shift and selector cable cover. Lower vehicle. Remove drill bit. Install gearshift lever cover.

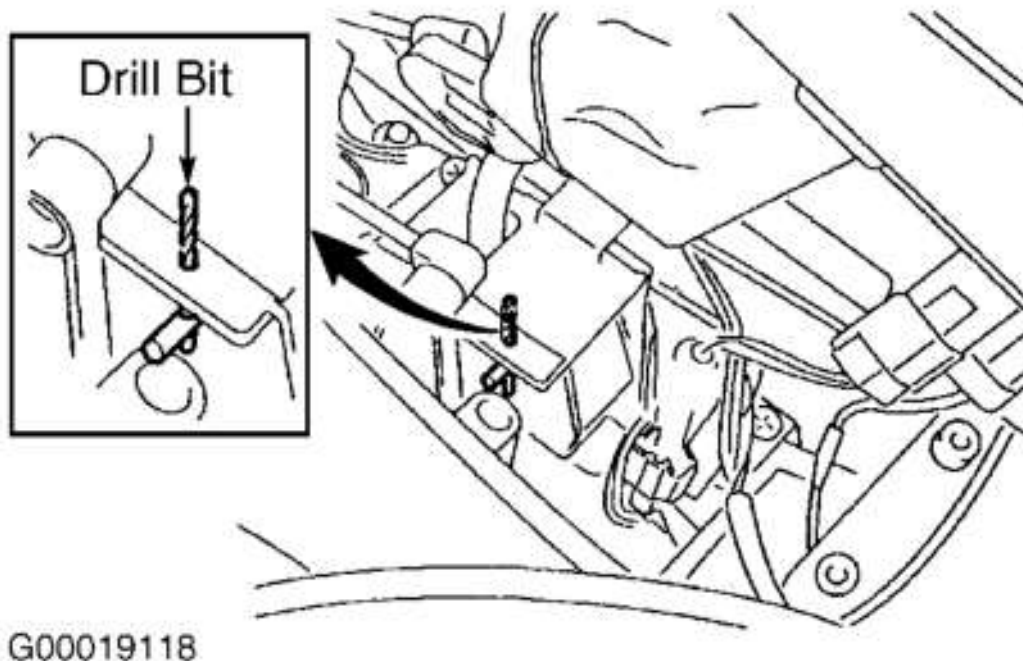


Fig. 5: Inserting Drill Bit Into Shift Mechanism
Courtesy of FORD MOTOR CO.