

CABLE, GEARSHIFT CONTROL

REMOVAL

REMOVAL

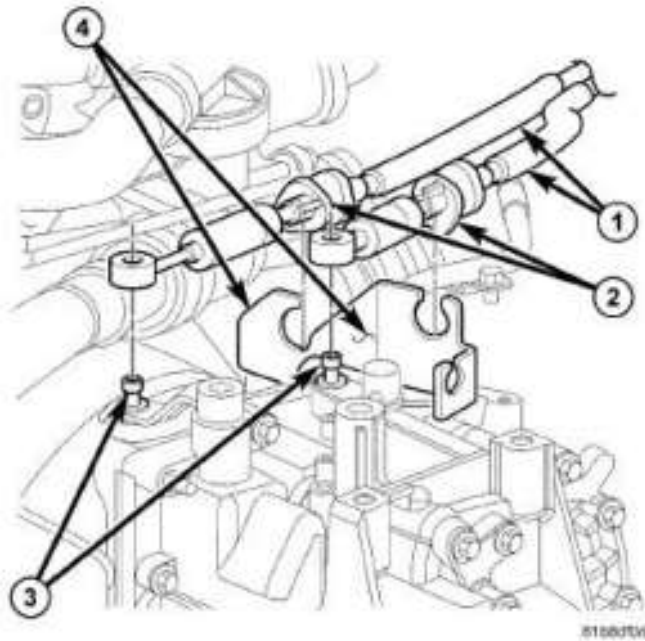


Fig. 83: Cables AT Trans
Courtesy of CHRYSLER LLC

1. Remove the shifter. Refer to **MECHANISM, Gearshift, Removal** or **MECHANISM, Gearshift, Removal**.
2. Raise hood.
3. Remove the resonator.
4. Remove engine cover.
5. Remove air cleaner assembly.
6. Disconnect both battery cables. Refer to **BATTERY, Removal** .
7. Remove battery hold down clamp and bolt, and remove battery.
8. Remove battery tray. Refer to **TRAY, Battery, Removal** .
9. Disconnect cables (1) from the shift levers at the transaxle (3).

CAUTION: Pry up with equal force on both sides of shifter cable isolator bushings to avoid damaging cable isolator bushings.

10. Squeeze cable retaining clips (2) and remove cables from bracket (4).

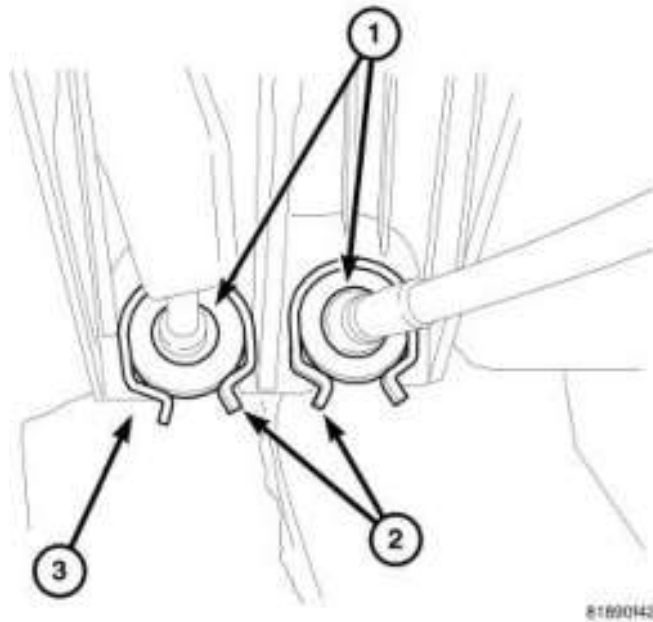


Fig. 84: Cable Clips AT Floor Pan
Courtesy of CHRYSLER LLC

11. Remove the Occupant Restraint Controller (ORC). Refer to **MODULE, Occupant Restraint Controller, Removal** .
12. Remove shifter. Refer to **MECHANISM, Gearshift, Removal** or **MECHANISM, Gearshift, Removal**.
13. Squeeze cable retaining clips (2) and remove cables from bracket.
14. Remove cable assembly (1) from vehicle.

INSTALLATION

INSTALLATION

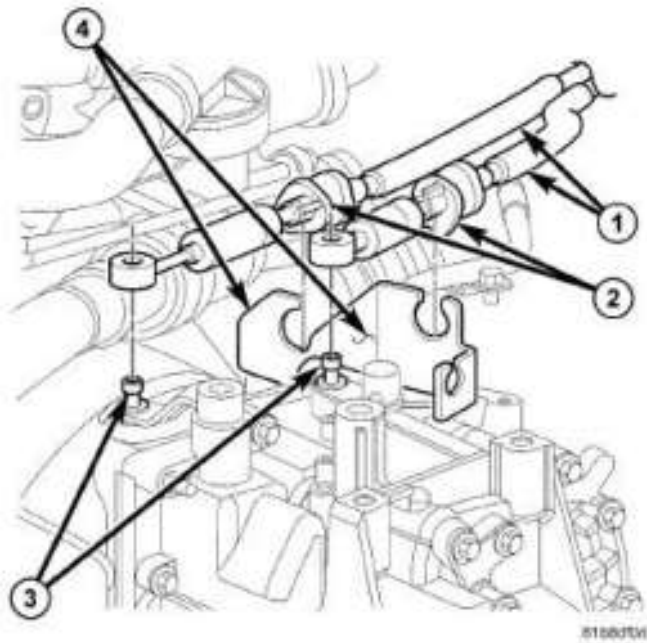


Fig. 85: Cables AT Trans
 Courtesy of CHRYSLER LLC

CAUTION: Gearshift cable bushings must not be lubricated or the bushings will swell and split.

1. Install cable assembly through floor pan opening and secure to floor pan with grommet plate.
2. Route transaxle end of cable assembly into engine compartment and over transaxle assembly.
3. Connect cables (1) to the shift levers (3) at the transaxle.
4. Install cables (1) to bracket (4).

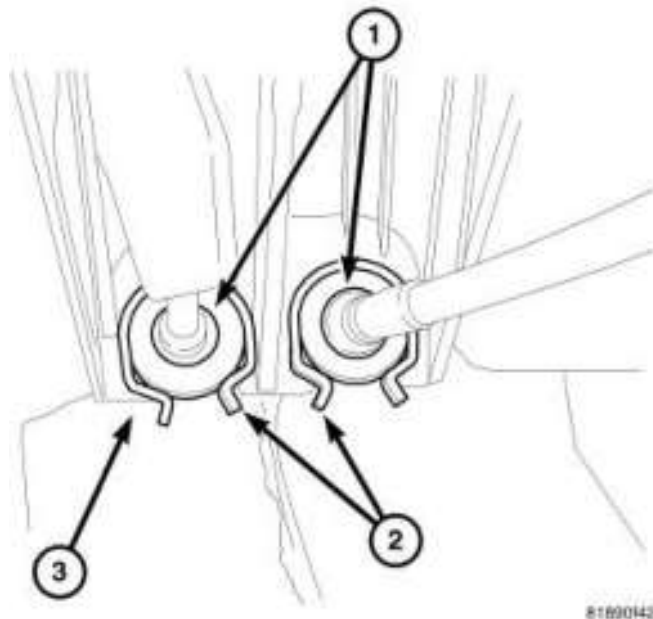


Fig. 86: Cable Clips AT Floor Pan

Courtesy of CHRYSLER LLC

5. Install gearshift cables (1).
6. Install ORC. Refer to **MODULE, Occupant Restraint Controller, Installation** .
7. Install shifter. Refer to **MECHANISM, Gearshift, Installation** or **MECHANISM, Gearshift, Installation**.
8. Install battery tray.
9. Install battery and hold-down clamp.
10. Install the air cleaner assembly.
11. Connect battery cables.