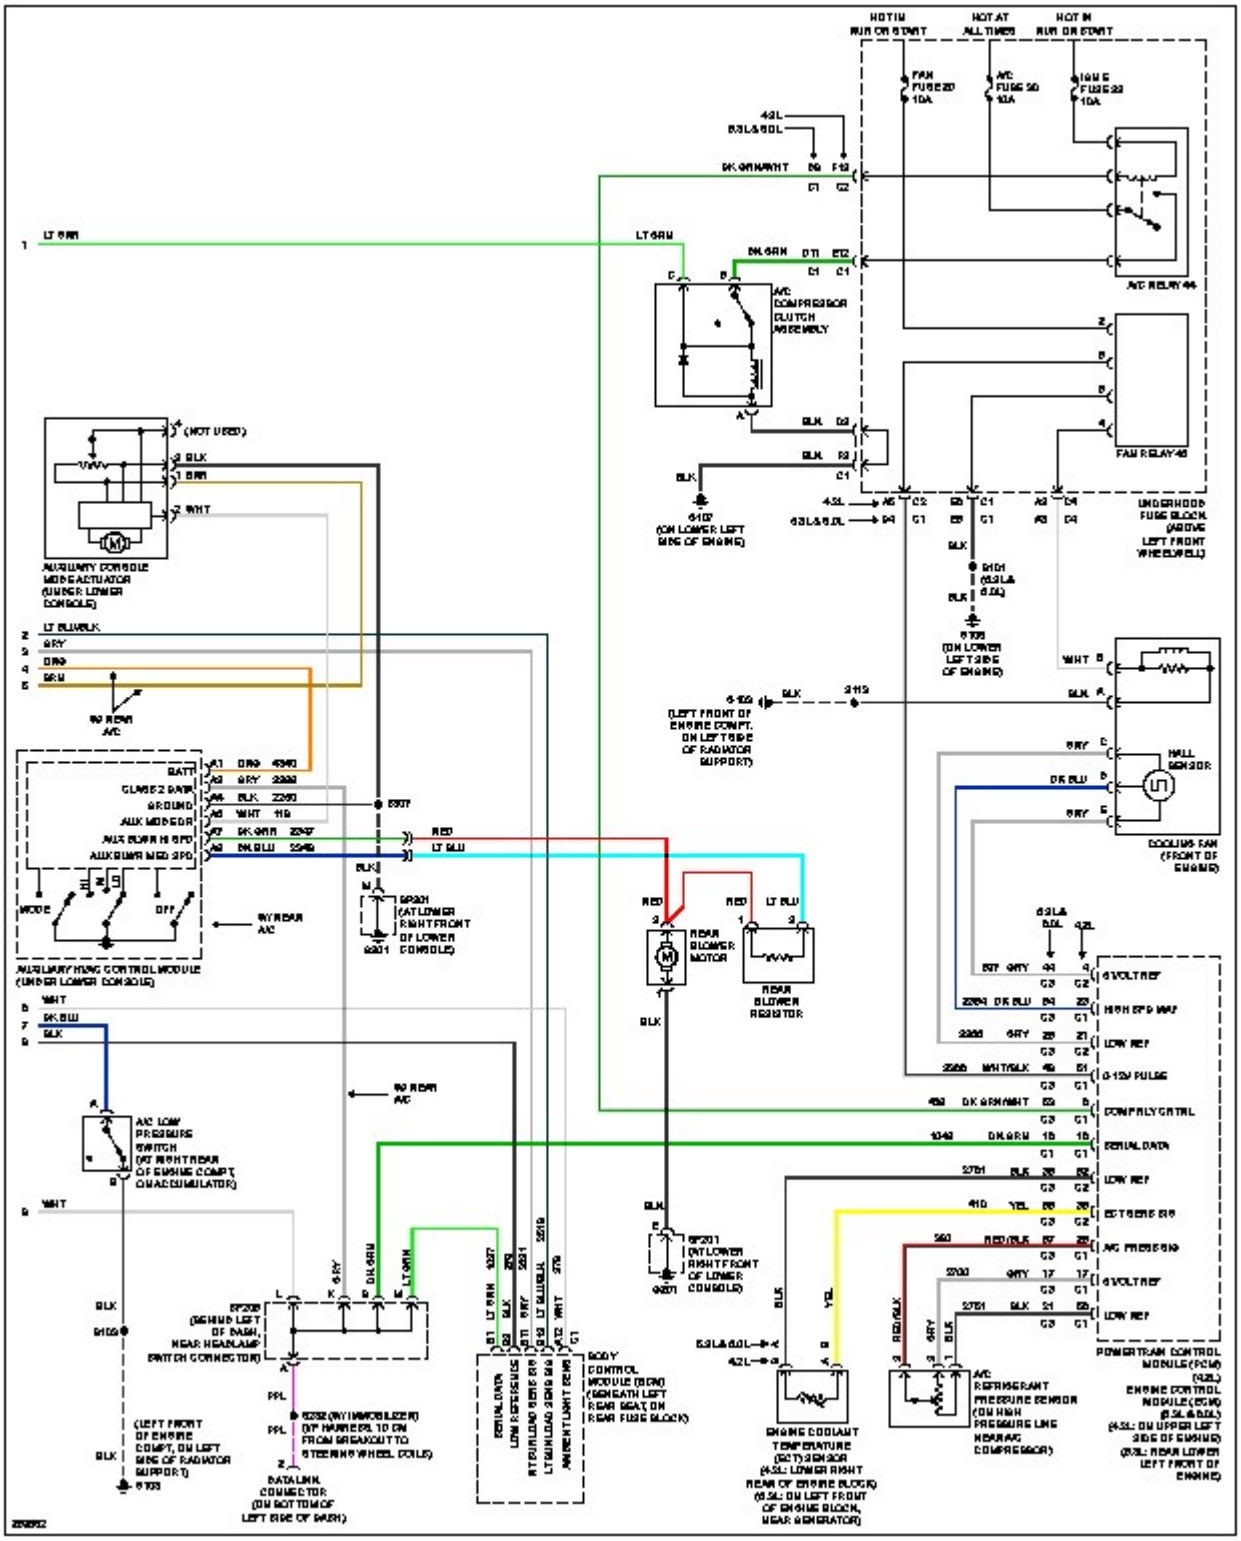
HOT IN RUN OR START
HOT AT ALL TIMES
HOT IN RUN OR START
FAN FUSE 20 10A
A/C FUSE 50 10A
IGN S FUSE 23 10A
A/C RELAY 46
FAN RELAY 45
UNDERHOOD FUSE BLOCK (ABOVE LEFT FRONT WHEELWELL)
A/C COMPRESSOR CLUTCH ASSEMBLY
(NOT USED)
AUXILIARY CONSOLE MODE ACTUATOR (UNDER LOWER CONSOLE)
AUXILIARY HVAC CONTROL MODULE (UNDER LOWER CONSOLE)
W/ REAR A/C
REAR BLOWER MOTOR
REAR BLOWER RESISTOR
HALL SENSOR
COOLING FAN (FRONT OF ENGINE)
A/C LOW PRESSURE SWITCH (AT RIGHT REAR OF ENGINE COMPT, ON ACCUMULATOR)
DATA LINK CONNECTOR (DLC) (AT BOTTOM OF LEFT SIDE OF DASH)
BODY CONTROL MODULE (BCM) (BENEATH LEFT REAR SEAT ON REAR FUSE BLOCK)
ENGINE COOLANT TEMPERATURE (ECT) SENSOR (4.5L: LOWER RIGHT REAR OF ENGINE BLOCK) (6.0L: ON LEFT FRONT OF ENGINE BLOCK, NEAR GENERATOR)
A/C REFRIGERANT PRESSURE SENSOR (ON HIGH PRESSURE LINE NEARAVG COMPRESSOR)
POWERTRAIN CONTROL MODULE (PCM) (4.2L: ENGINE CONTROL MODULE (ECM)) (5.3L & 6.0L: (4.5L: ON UPPER LEFT SIDE OF ENGINE) (6.0L: REAR LOWER LEFT FRONT OF ENGINE)
5 VOLT REF
HIGH SPD MW
LOW REF
0-12V PULSE
COMP CLUTCH CNTRL
SERIAL DATA
LOW REF
ECT SENSE SIG
A/C PRESS SIG
5 VOLT REF
LOW REF