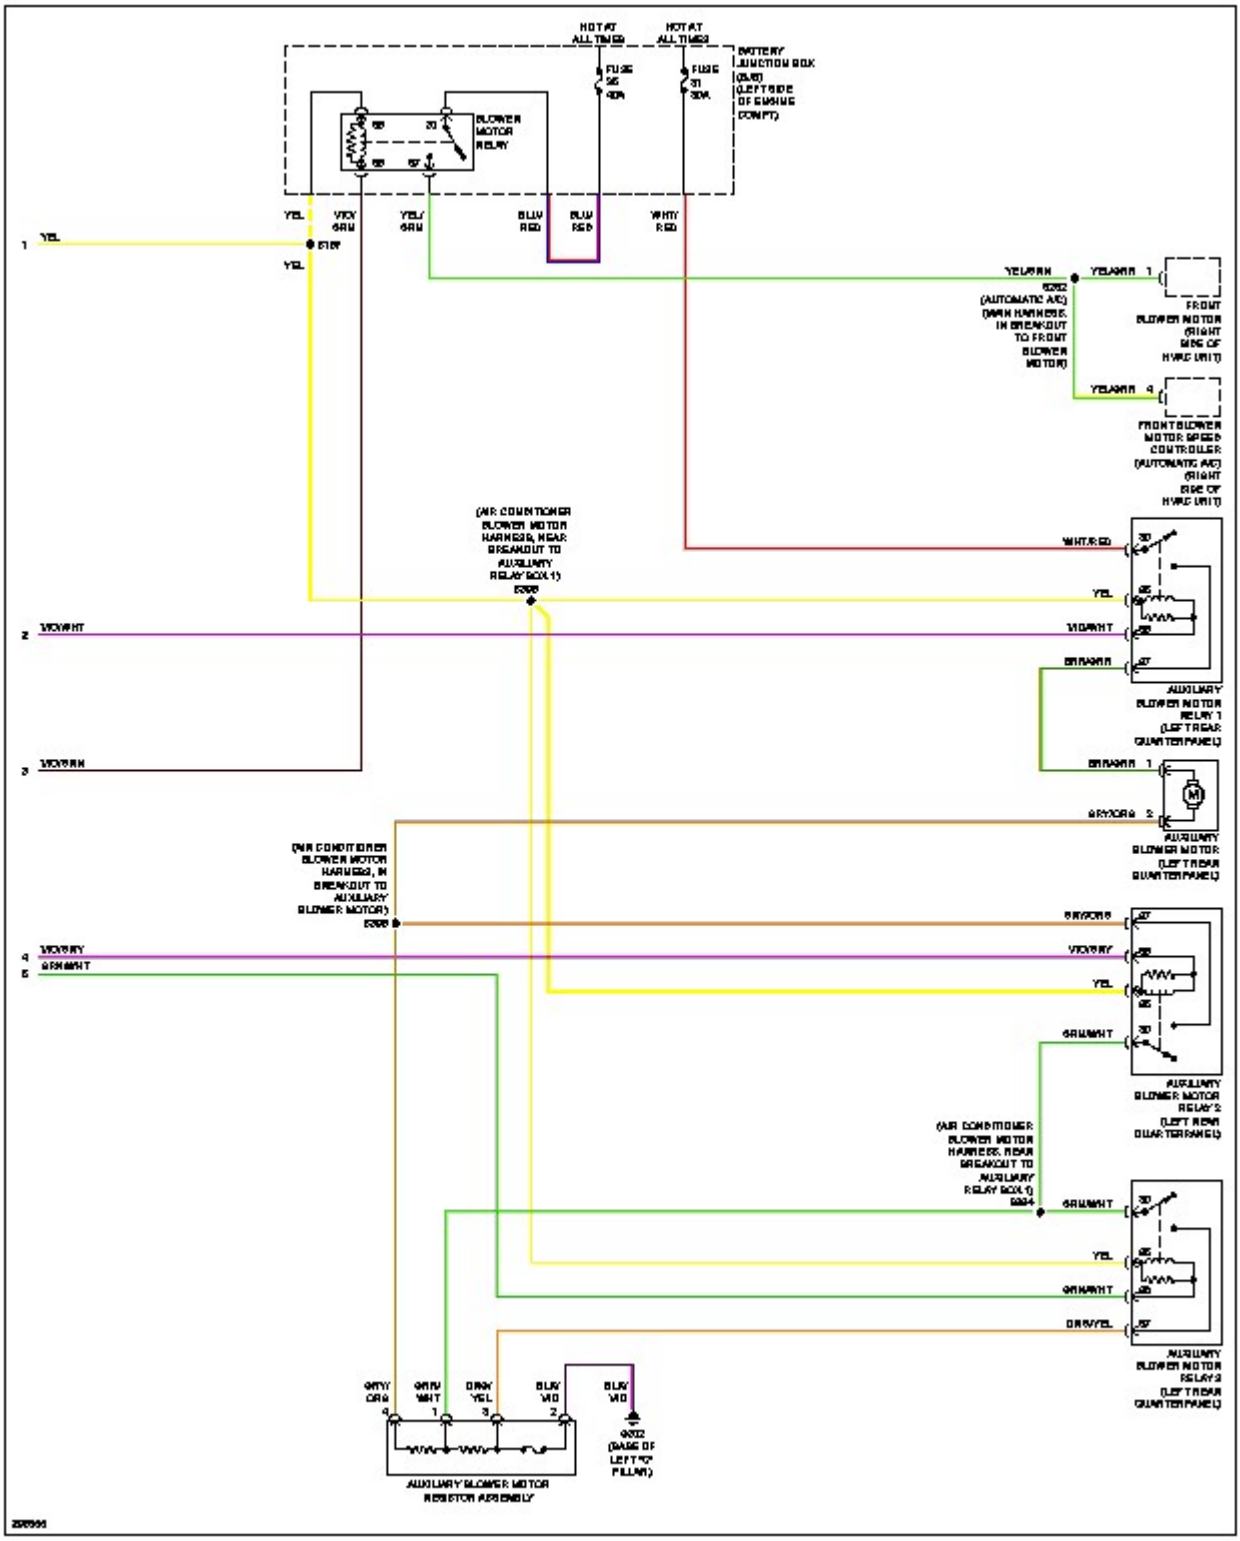
HOT AT ALL TIMES
HOT AT ALL TIMES
FUSE 36 40A
FUSE 31 30A
BATTERY JUNCTION BOX (BJB) (LEFT SIDE OF ENGINE COMPT)
BLOWER MOTOR RELAY
YEL
VIO/ GRN
YEL/ GRN
BLU/ RED
BLU/ RED
WHT/ RED
YEL
YEL/GRN
(AUTOMATIC A/C) (WIR HARNESS, IN BREAKOUT TO FRONT BLOWER MOTOR)
YEL/GRN
FRONT BLOWER MOTOR (RIGHT SIDE OF HVAC UNIT)
YEL/GRN
FRONT BLOWER MOTOR SPEED CONTROLLER (AUTOMATIC A/C) (RIGHT SIDE OF HVAC UNIT)
(AIR CONDITIONER BLOWER MOTOR HARNESS, NEAR BREAKOUT TO AUXILIARY RELAY BOX 1)
WHT/RED
YEL
VIO/WHT
VIO/WHT
BR/WHT
AUXILIARY BLOWER MOTOR RELAY 1 (LEFT REAR QUARTER PANEL)
VIO/YEL
BR/WHT
GRY/ORG
AUXILIARY BLOWER MOTOR (LEFT REAR QUARTER PANEL)
(AIR CONDITIONER BLOWER MOTOR HARNESS, IN BREAKOUT TO AUXILIARY BLOWER MOTOR)
GRY/ORG
VIO/WHT
VIO/WHT
GR/WHT
YEL
GR/WHT
AUXILIARY BLOWER MOTOR RELAY 2 (LEFT REAR QUARTER PANEL)
(AIR CONDITIONER BLOWER MOTOR HARNESS, NEAR BREAKOUT TO AUXILIARY RELAY BOX 1)
GR/WHT
YEL
GR/WHT
BR/YEL
AUXILIARY BLOWER MOTOR RELAY 3 (LEFT REAR QUARTER PANEL)
GRY/ ORG
GRY/ WHT
BRN/ YEL
BLK/ VIO
BLK/ VIO
(BASE OF LEFT "C" PILLAR)
AUXILIARY BLOWER MOTOR RESISTOR ASSEMBLY