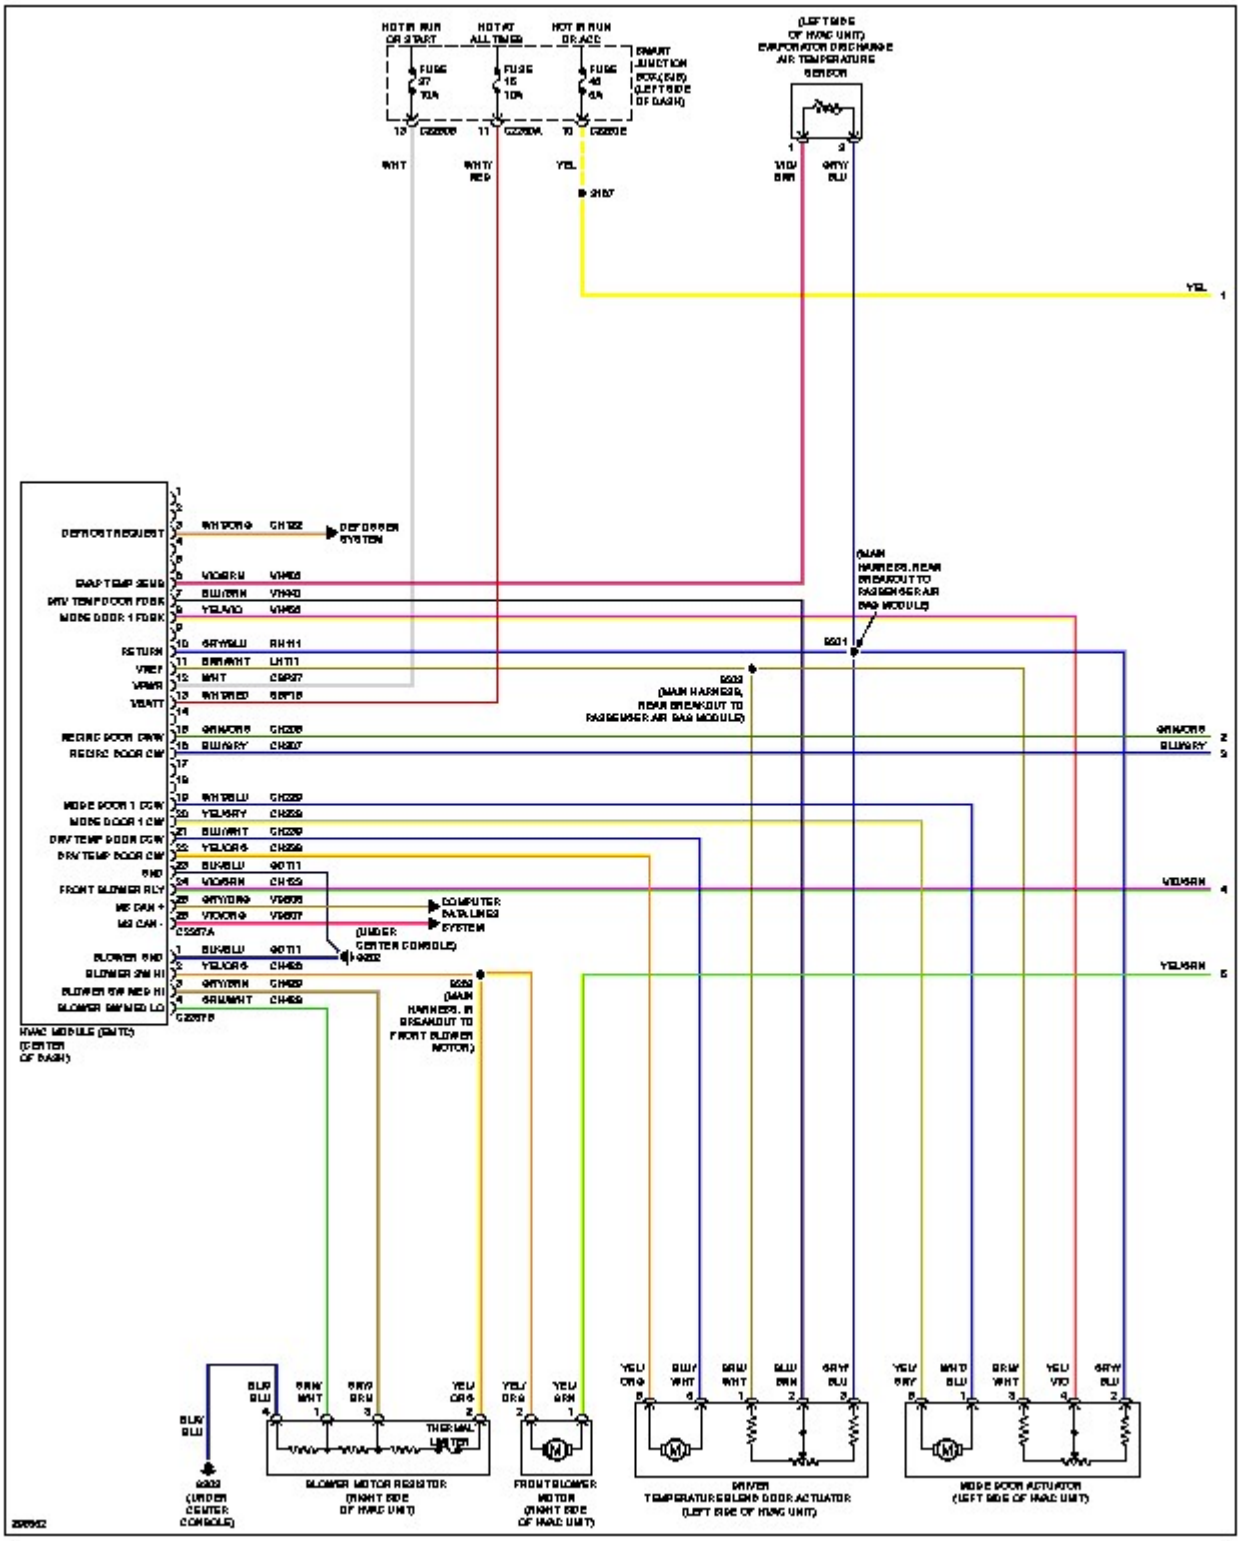
HOT IN RUN OR START
HOT AT ALL TIMES
HOT IN RUN OR ACC
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
FUSE 27 10A
FUSE 15 10A
FUSE 46 5A
(LEFT SIDE OF HVAC UNIT) EVAPORATOR DISCHARGE AIR TEMPERATURE SENSOR
WHT
WHT/RED
YEL
VIO/BRN
GRY/BLU
YEL
DEFROST REQUEST
DEFROSTER SYSTEM
EVAP TEMP SENS
DRV TEMP DOOR FDBK
MODE DOOR 1 FDBK
RETURN
VREF
VPWR
VBATT
REDIRC DOOR CCW
REDIRC DOOR CW
MODE DOOR 1 CCW
MODE DOOR 1 CW
DRV TEMP DOOR CCW
DRV TEMP DOOR CW
GND
FRONT BLOWER RLY
MS CAN +
MS CAN -
COMPUTER DATA LINES SYSTEM
(UNDER CENTER CONSOLE)
BLOWER GND
BLOWER SW HI
BLOWER SW MED HI
BLOWER SW MED LO
HVAC MODULE (BATTS) (CENTER OF DASH)
(MAIN HARNESS, REAR BREAKOUT TO PASSENGER AIR BAG MODULE)
(MAIN HARNESS, IN BREAKOUT TO FRONT BLOWER MOTOR)
THERMAL LIMITER
BLOWER MOTOR RESISTOR (RIGHT SIDE OF HVAC UNIT)
FRONT BLOWER MOTOR (RIGHT SIDE OF HVAC UNIT)
DRIVER TEMPERATURE BLEND DOOR ACTUATOR (LEFT SIDE OF HVAC UNIT)
MODE DOOR ACTUATOR (LEFT SIDE OF HVAC UNIT)