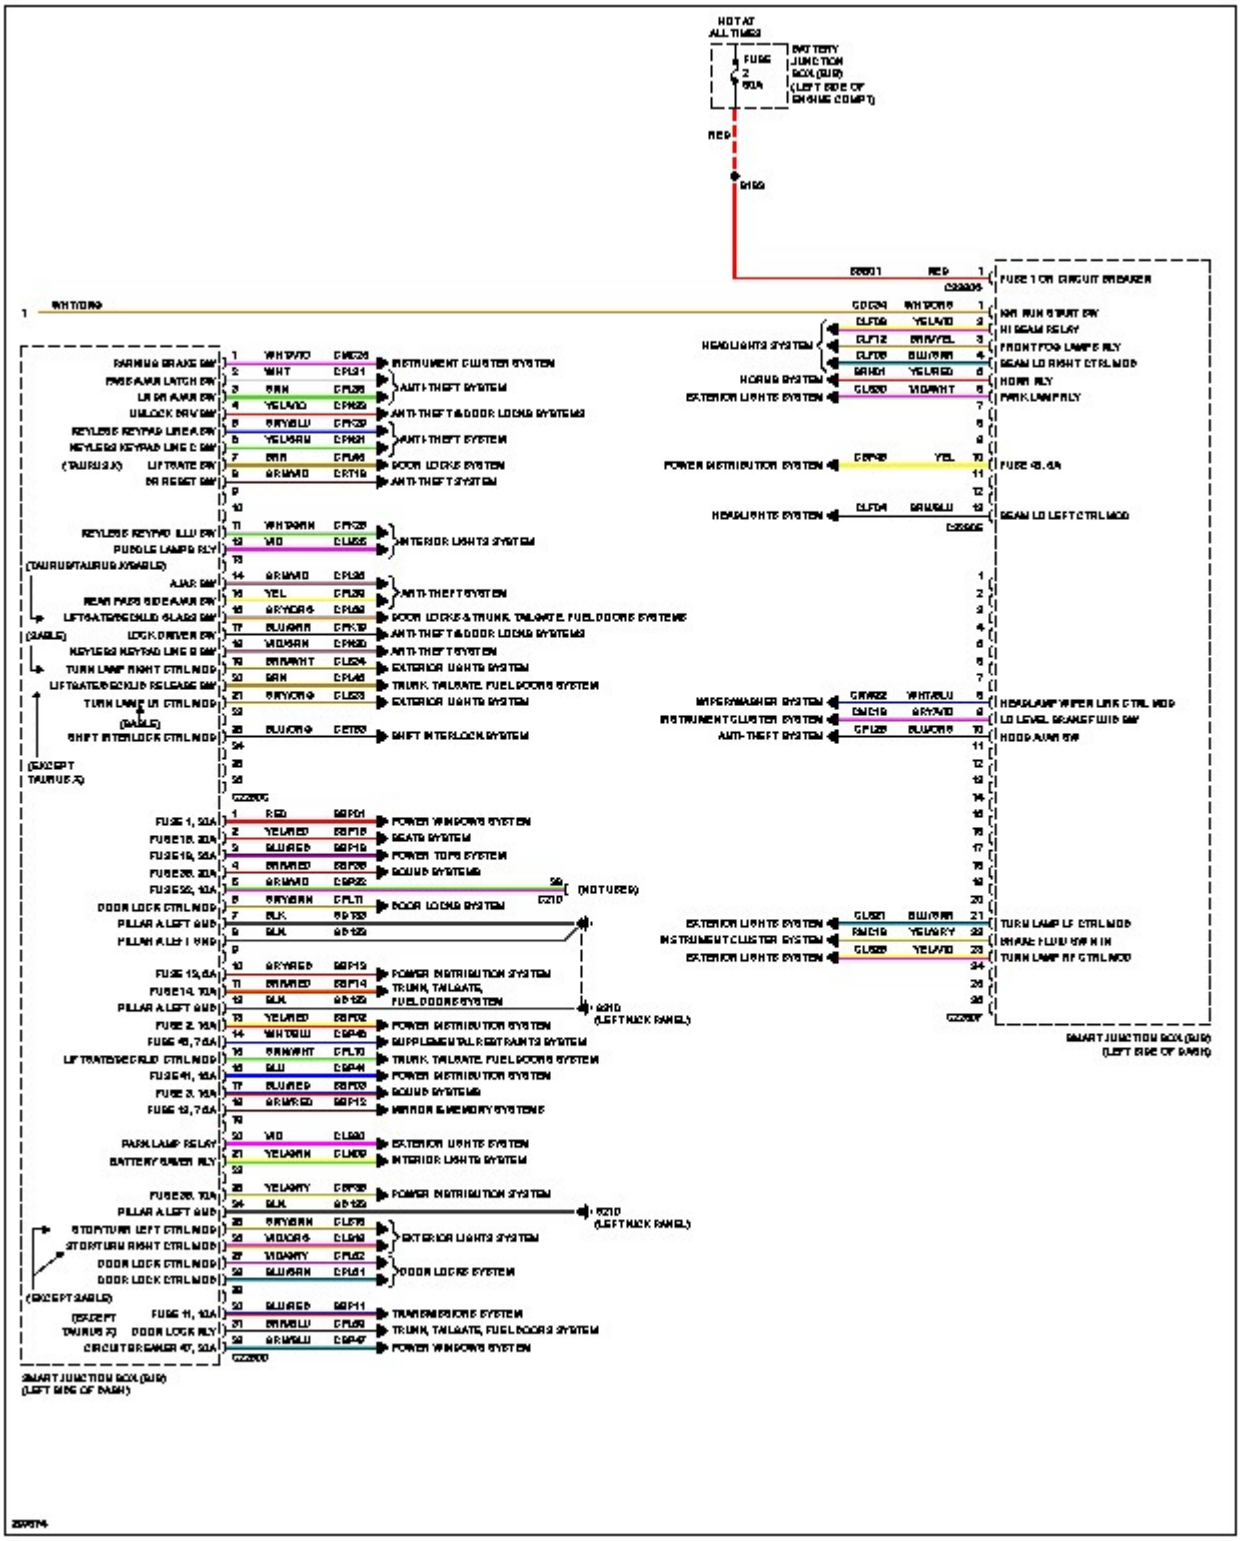
HOT AT ALL TIMES
FUSE 2 60A
BATTERY JUNCTION BOX (BJB) (LEFT SIDE OF ENGINE COMPT)
RED
S100
FUSE 1 OR CIRCUIT BREAKER
WHT/DKG
PARKING BRAKE SW
PASS AIR LATCH SW
LR DR AJAR SW
UNLOCK SW SW
KEYLESS KEYPAD LINE A SW
KEYLESS KEYPAD LINE C SW
(TAURUS X) LIFTGATE SW
DR RESET SW
KEYLESS KEYPAD ILLU SW
PUDDLE LAMPS RLY
(TAURUS/TAURUS X/SABLE)
AJAR SW
REAR PASS SIDE AJAR SW
LIFTGATE/SCHLID GLASS SW
(SABLE)
LOCK DRIVER SW
KEYLESS KEYPAD LINE B SW
TURN LAMP RIGHT CTRL MOD
LIFTGATE/SCHLID RELEASE SW
TURN LAMP LF CTRL MOD
(SABLE)
SHIFT INTERLOCK CTRL MOD
(EXCEPT TAURUS X)
INSTRUMENT CLUSTER SYSTEM
ANTI-THEFT SYSTEM
ANTI-THEFT & DOOR LOCKS SYSTEMS
DOOR LOCKS SYSTEM
INTERIOR LIGHTS SYSTEM
DOOR LOCKS & TRUNK, TAILGATE, FUEL DOORS SYSTEMS
EXTERIOR LIGHTS SYSTEM
SHIFT INTERLOCK SYSTEM
FUSE 1, 30A
FUSE 18, 30A
FUSE 19, 30A
FUSE 20, 30A
FUSE 22, 10A
DOOR LOCK CTRL MOD
PILLAR A LEFT GND
PILLAR A LEFT GND
FUSE 13, 5A
FUSE 14, 10A
PILLAR A LEFT GND
FUSE 2, 10A
FUSE 43, 7.5A
LIFTGATE/SCHLID CTRL MOD
FUSE 41, 10A
FUSE 3, 10A
FUSE 13, 7.5A
PARK LAMP RELAY
BATTERY SAVER RLY
FUSE 28, 10A
PILLAR A LEFT GND
STOP/TURN LEFT CTRL MOD
STOP/TURN RIGHT CTRL MOD
DOOR LOCK CTRL MOD
DOOR LOCK CTRL MOD
(EXCEPT SABLE)
FUSE 11, 10A
(EXCEPT TAURUS X) DOOR LOCK RLY
CIRCUIT BREAKER 47, 30A
POWER WINDOWS SYSTEM
SEATS SYSTEM
POWER TOPS SYSTEM
SOUND SYSTEMS
(NOT USED)
DOOR LOCKS SYSTEM
POWER DISTRIBUTION SYSTEM
TRUNK, TAILGATE, FUEL DOORS SYSTEM
(LEFT KICK PANEL)
SUPPLEMENTAL RESTRAINTS SYSTEM
MIRROR & MEMORY SYSTEMS
TRANSMISSIONS SYSTEM
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
HEADLIGHTS SYSTEM
HORNS SYSTEM
EXTERIOR LIGHTS SYSTEM
POWER DISTRIBUTION SYSTEM
HEADLIGHTS SYSTEM
WIPER/WASHER SYSTEM
INSTRUMENT CLUSTER SYSTEM
ANTI-THEFT SYSTEM
INR RUN START SW
HI BEAM RELAY
FRONT FOG LAMPS RLY
BEAM LO RIGHT CTRL MOD
HORN RLY
PARK LAMP RLY
FUSE 45, 5A
BEAM LO LEFT CTRL MOD
HEADLAMP WIPER LINK CTRL MOD
LO LEVEL BRAKE FLUID SW
HOOD AJAR SW
TURN LAMP LF CTRL MOD
BRAKE FLUID SW HI
TURN LAMP RF CTRL MOD