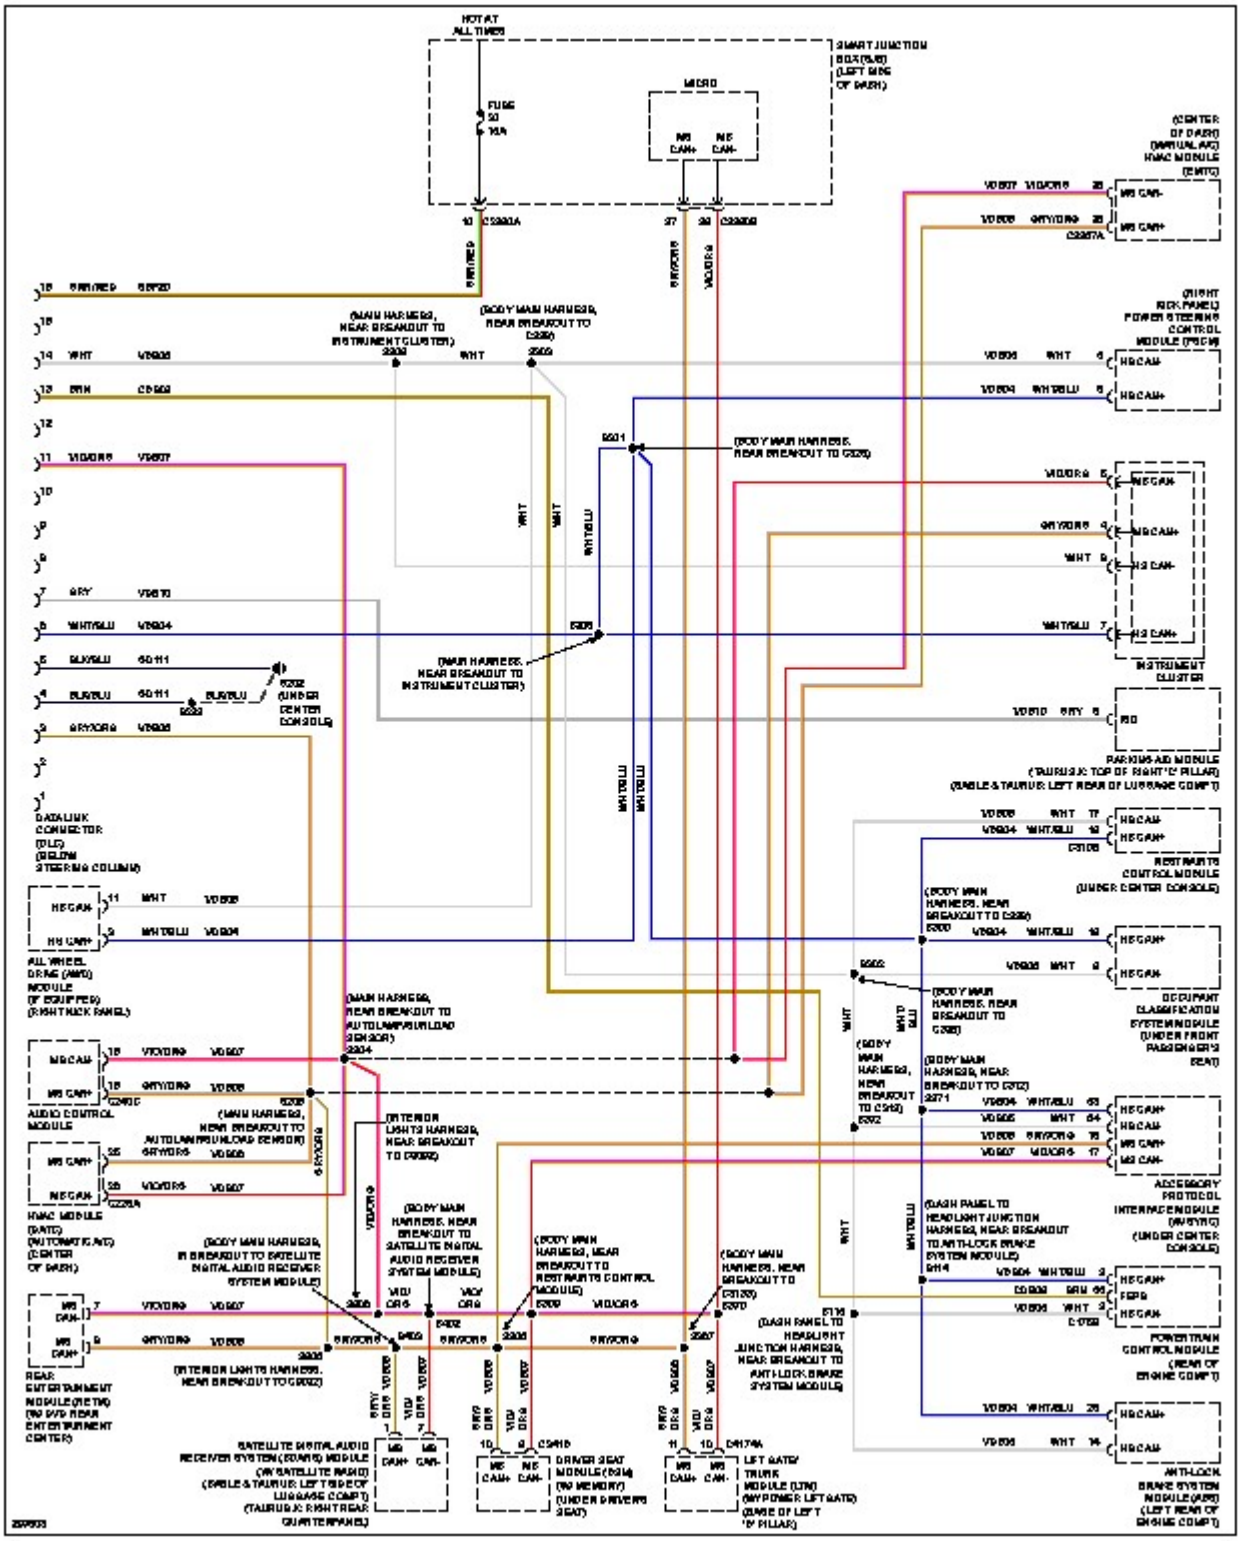
HOT AT ALL TIMES
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
MICRO
(CENTER OF DASH) (MANUAL A/C) HVAC MODULE (EMTC)
(RIGHT KICK PANEL) POWER STEERING CONTROL MODULE (PSCM)
INSTRUMENT CLUSTER
PARKING AID MODULE (TAURUS: TOP OF RIGHT 'C' PILLAR) (SABLE & TAURUS: LEFT REAR OF LUGGAGE COMPT)
RESTRAINTS CONTROL MODULE (UNDER CENTER CONSOLE)
OCCUPANT CLASSIFICATION SYSTEM MODULE (UNDER FRONT PASSENGER'S SEAT)
ACCESSORY PROTOCOL INTERFACE MODULE (AXSYNC) (UNDER CENTER CONSOLE)
POWERTRAIN CONTROL MODULE (REAR OF ENGINE COMPT)
ANTI-LOCK BRAKE SYSTEM MODULE (ABS) (LEFT REAR OF ENGINE COMPT)
DATALINK CONNECTOR (DLC) (BELOW STEERING COLUMN)
ALL WHEEL DRIVE (AWD) MODULE (IF EQUIPPED) (RIGHT KICK PANEL)
AUDIO CONTROL MODULE
HVAC MODULE (DATC) (AUTOMATIC A/C) (CENTER OF DASH)
REAR ENTERTAINMENT MODULE (RETM) (W/ DVD REAR ENTERTAINMENT CENTER)
SATELLITE DIGITAL AUDIO RECEIVER SYSTEM (SDARS) MODULE (W/ SATELLITE RADIO) (SABLE & TAURUS: LEFT SIDE OF LUGGAGE COMPT) (TAURUS: RIGHT REAR QUARTER PANEL)
DRIVER SEAT MODULE (DSM) (W/ MEMORY) (UNDER DRIVERS SEAT)
LIFT GATE/ TRUNK MODULE (LTM) (W/ POWER LIFT GATE) (BASE OF LEFT 'B' PILLAR)
(MAIN HARNESS, NEAR BREAKOUT TO INSTRUMENT CLUSTER)
(BODY MAIN HARNESS, NEAR BREAKOUT TO C3209)
(BODY MAIN HARNESS, NEAR BREAKOUT TO C3208)
(MAIN HARNESS, NEAR BREAKOUT TO INSTRUMENT CLUSTER)
(UNDER CENTER CONSOLE)
(MAIN HARNESS, NEAR BREAKOUT TO AUTOLAMP/SUNLOAD SENSOR)
(INTERIOR LIGHTS HARNESS, NEAR BREAKOUT TO C3092)
(BODY MAIN HARNESS, NEAR BREAKOUT TO SATELLITE DIGITAL AUDIO RECEIVER SYSTEM MODULE)
(BODY MAIN HARNESS, NEAR BREAKOUT TO RESTRAINTS CONTROL MODULE)
(BODY MAIN HARNESS, NEAR BREAKOUT TO C3120)
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, NEAR BREAKOUT TO ANTI-LOCK BRAKE SYSTEM MODULE)
(INTERIOR LIGHTS HARNESS, NEAR BREAKOUT TO C3092)