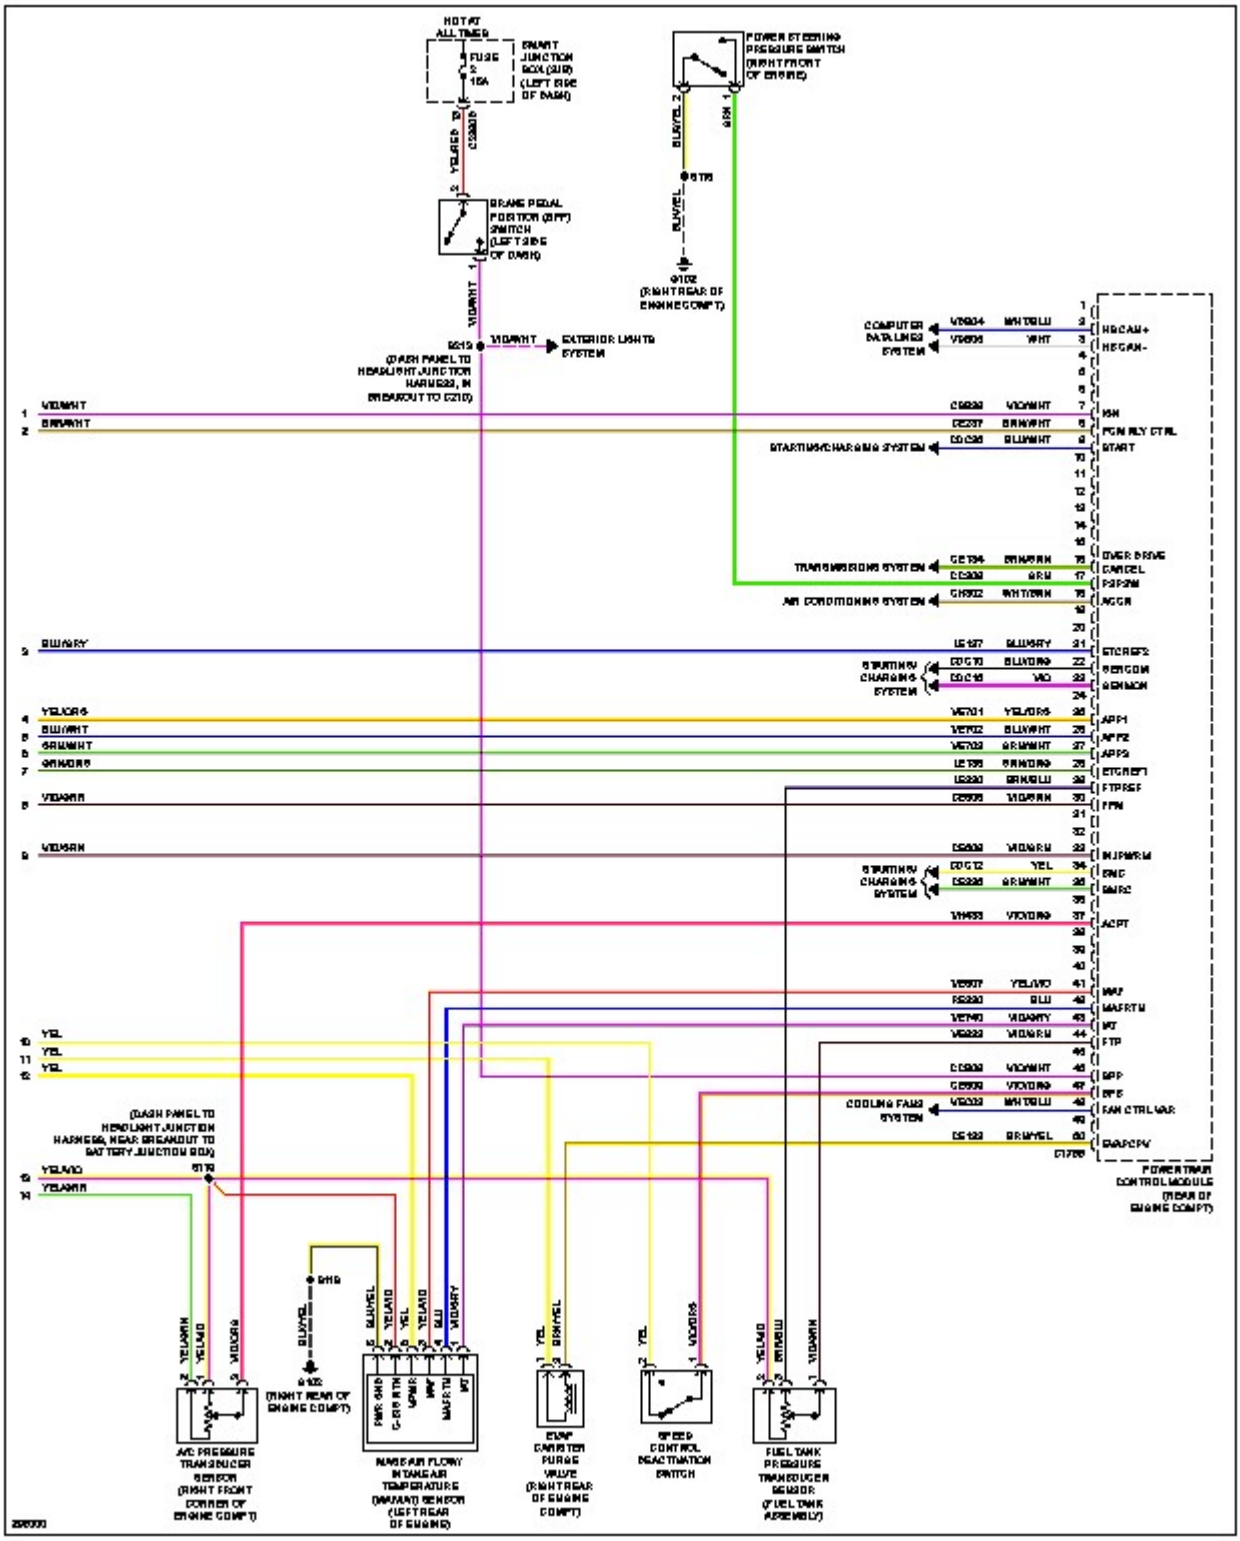
HOT AT ALL TIMES
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
FUSE 2 15A
BRAKE PEDAL POSITION (BPP) SWITCH (LEFT SIDE OF DASH)
POWER STEERING PRESSURE SWITCH (RIGHT FRONT OF ENGINE)
(RIGHT REAR OF ENGINE COMPT)
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, IN BREAKOUT TO G210)
EXTERIOR LIGHTS SYSTEM
COMPUTER DATA LINES SYSTEM
STARTING/CHARGING SYSTEM
TRANSMISSIONS SYSTEM
AIR CONDITIONING SYSTEM
COOLING FANS SYSTEM
HSCAN+
HSCAN-
IGN
PCM RLY CTRL
START
OVER DRIVE
CANCEL
PSP/SW
AC/CR
STC/REQ
GEN/COM
GEN/MON
APP1
APP2
APPS
ETC/REF1
ETP/REF
FPM
INJPWR/M
ENG
BARC
ACPT
MAF
MAF/RTN
MT
ETP
BPP
BPS
FAN CTRL/MAF
SVAP/CPV
POWER TRAIN CONTROL MODULE (REAR OF ENGINE COMPT)
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, NEAR BREAKOUT TO BATTERY JUNCTION BOX)
A/C PRESSURE TRANSDUCER SENSOR (RIGHT FRONT CORNER OF ENGINE COMPT)
(RIGHT REAR OF ENGINE COMPT)
MANIFOLD FLOW INTAKE AIR TEMPERATURE (MAT/MAF) SENSOR (LEFT REAR OF ENGINE)
EVAP CANISTER PURGE VALVE (RIGHT REAR OF ENGINE COMPT)
SPEED CONTROL DEACTIVATION SWITCH
FUEL TANK PRESSURE TRANSDUCER SENSOR (FUEL TANK ASSEMBLY)