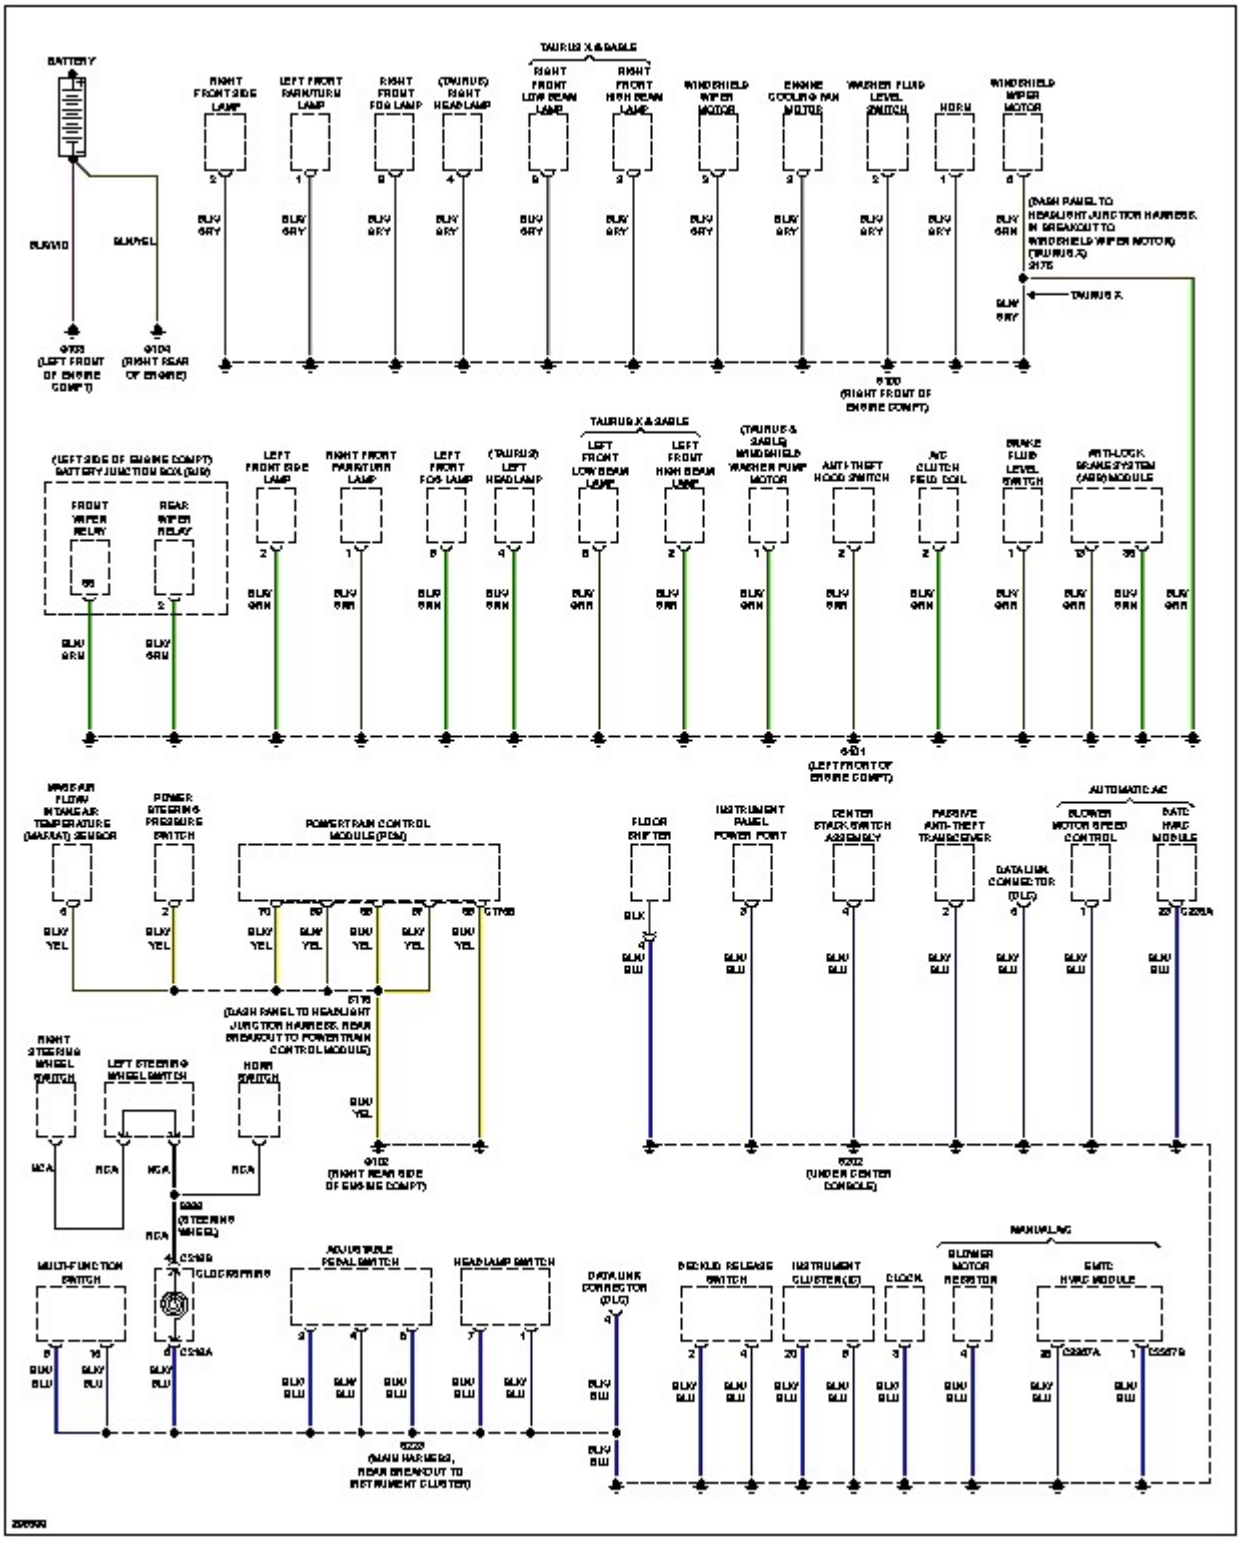
BATTERY
TAURUS X & SABLE
RIGHT FRONT SIDE LAMP
LEFT FRONT PARK/TURN LAMP
RIGHT FRONT FOG LAMP
(TAURUS) RIGHT HEADLAMP
RIGHT FRONT LOW BEAM LAMP
RIGHT FRONT HIGH BEAM LAMP
WINDSHIELD WIPER MOTOR
ENGINE COOLING FAN MOTOR
WASHER FLUID LEVEL SWITCH
HORN
WINDSHIELD WIPER MOTOR
BLK/VIO
BLK/YEL
(LEFT FRONT OF ENGINE COMPT)
(RIGHT REAR OF ENGINE)
(RIGHT FRONT OF ENGINE COMPT)
(LEFT SIDE OF ENGINE COMPT) BATTERY JUNCTION BOX (BJB)
FRONT WIPER RELAY
REAR WIPER RELAY
LEFT FRONT SIDE LAMP
RIGHT FRONT PARK/TURN LAMP
LEFT FRONT FOG LAMP
(TAURUS) LEFT HEADLAMP
LEFT FRONT LOW BEAM LAMP
LEFT FRONT HIGH BEAM LAMP
(TAURUS & SABLE) WINDSHIELD WASHER PUMP MOTOR
ANTI-THEFT HOOD SWITCH
A/C CLUTCH FIELD COIL
BRAKE FLUID LEVEL SWITCH
ANTI-LOCK BRAKE SYSTEM (ABS) MODULE
(LEFT FRONT OF ENGINE COMPT)
MASS AIR FLOW INTAKE AIR TEMPERATURE (MAFAT) SENSOR
POWER STEERING PRESSURE SWITCH
POWERTRAIN CONTROL MODULE (PCM)
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, REAR BREAKOUT TO POWERTRAIN CONTROL MODULE)
RIGHT STEERING WHEEL SWITCH
LEFT STEERING WHEEL SWITCH
HORN SWITCH
(RIGHT REAR SIDE OF ENGINE COMPT)
(STEERING WHEEL)
FLOOR SHIFTER
INSTRUMENT PANEL POWER POINT
CENTER STACK SWITCH ASSEMBLY
PASSIVE ANTI-THEFT TRANSCEIVER
DATA LINK CONNECTOR (DLC)
AUTOMATIC A/C
BLOWER MOTOR SPEED CONTROL
DATC HVAC MODULE
(UNDER CENTER CONSOLE)
MULTI-FUNCTION SWITCH
CLOCKSPRING
ADJUSTABLE PEDAL SWITCH
HEADLAMP SWITCH
DATA LINK CONNECTOR (DLC)
(MAIN HARNESS, REAR BREAKOUT TO INSTRUMENT CLUSTER)
BECKLID RELEASE SWITCH
INSTRUMENT CLUSTER (IC)
CLOCK
MANUAL A/C
BLOWER MOTOR RESISTOR
EMTC HVAC MODULE