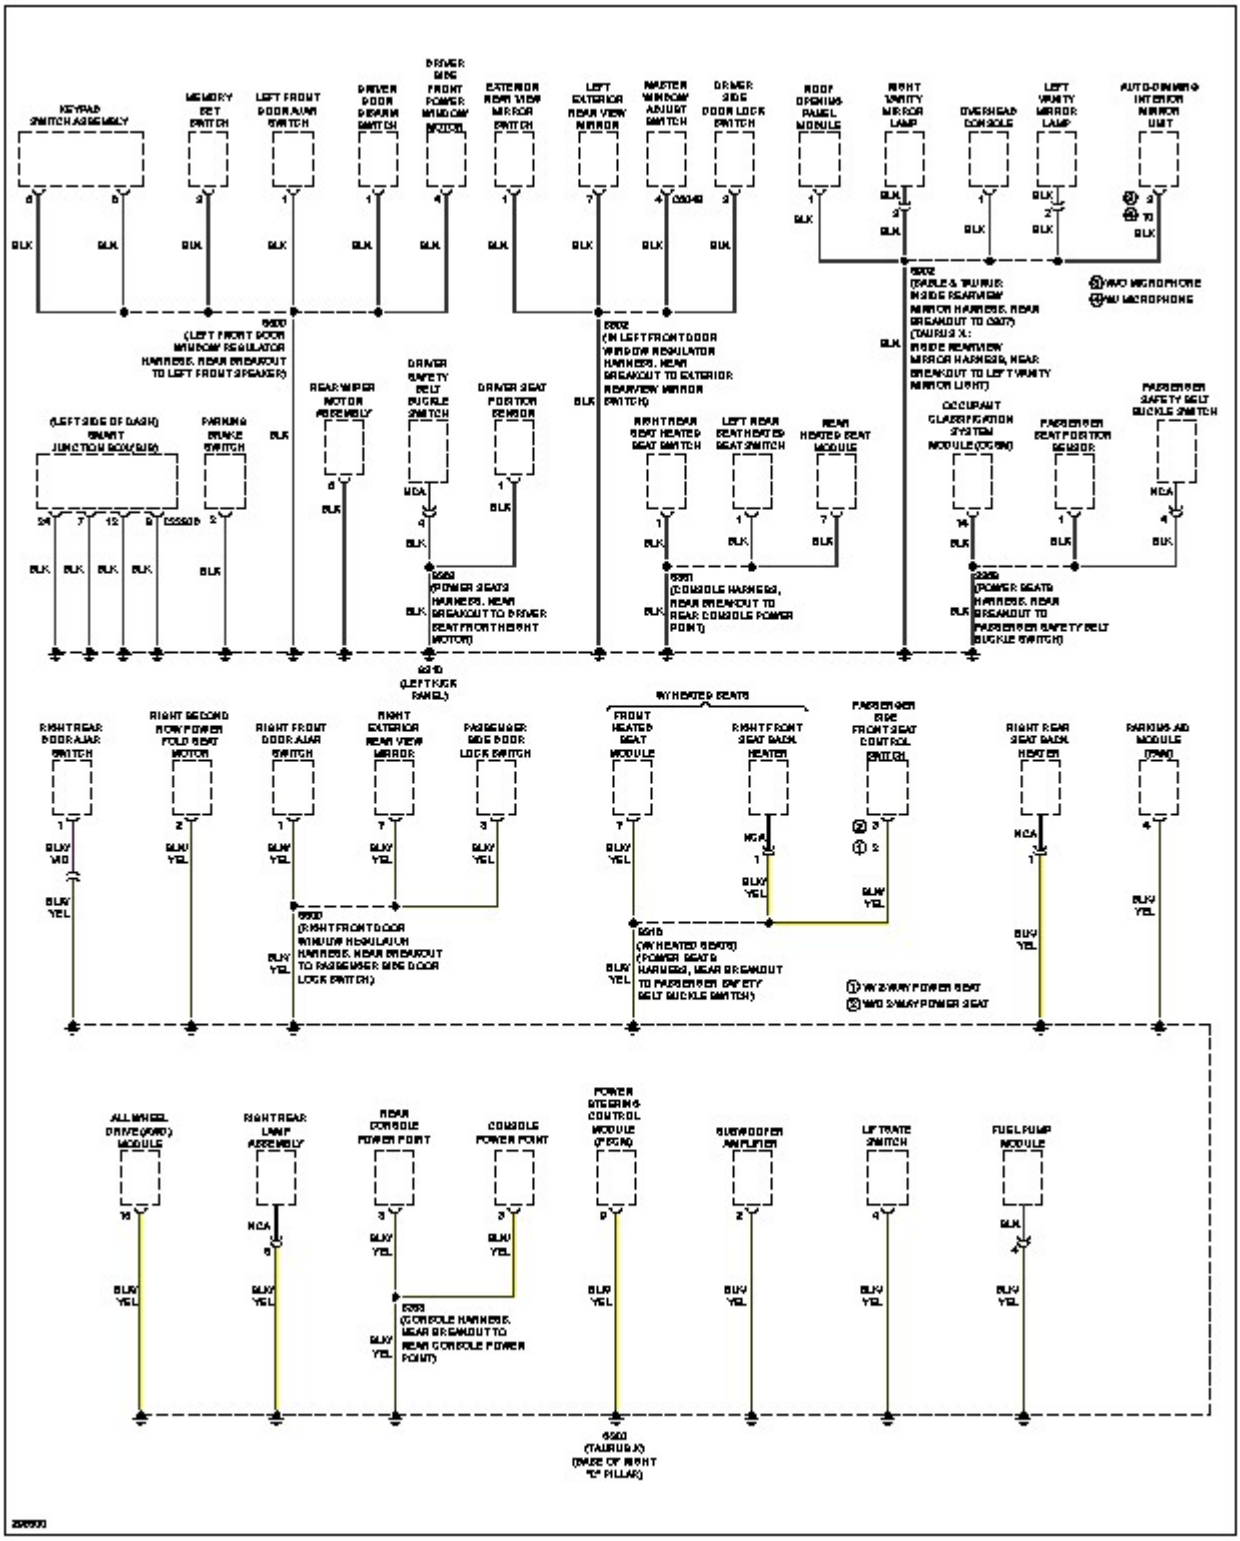
KEYPAD SWITCH ASSEMBLY
MEMORY SET SWITCH
LEFT FRONT DOOR AJAR SWITCH
DRIVER DOOR REARM SWITCH
DRIVER SIDE FRONT POWER WINDOW MOTOR
EXTERIOR REAR VIEW MIRROR SWITCH
LEFT EXTERIOR REAR VIEW MIRROR
MASTER WINDOW ADJUST SWITCH
DRIVER SIDE DOOR LOCK SWITCH
ROOF OPENING PANEL MODULE
RIGHT VANITY MIRROR LAMP
OVERHEAD CONSOLE
LEFT VANITY MIRROR LAMP
AUTO-DIMMING INTERIOR MIRROR UNIT
(LEFT SIDE OF DASH) SMART JUNCTION BOX(SJB)
PARKING BRAKE SWITCH
REAR WIPER MOTOR ASSEMBLY
DRIVER SAFETY BELT BUCKLE SWITCH
DRIVER SEAT POSITION SENSOR
RIGHT REAR SEAT HEATED SEAT SWITCH
LEFT REAR SEAT HEATED SEAT SWITCH
REAR HEATED SEAT MODULE
OCCUPANT CLASSIFICATION SYSTEM MODULE (OCSM)
PASSENGER SEAT POSITION SENSOR
PASSENGER SAFETY BELT BUCKLE SWITCH
RIGHT REAR DOOR AJAR SWITCH
RIGHT SECOND ROW POWER FOLD SEAT MOTOR
RIGHT FRONT DOOR AJAR SWITCH
RIGHT EXTERIOR REAR VIEW MIRROR
PASSENGER SIDE DOOR LOCK SWITCH
W/HEATED SEATS
FRONT HEATED SEAT MODULE
RIGHT FRONT SEAT BACK HEATER
PASSENGER SIDE FRONT SEAT CONTROL SWITCH
RIGHT REAR SEAT BACK HEATER
PARKING AID MODULE (PAM)
ALL WHEEL DRIVE (AWD) MODULE
RIGHT REAR LAMP ASSEMBLY
REAR CONSOLE POWER POINT
CONSOLE POWER POINT
POWER STEERING CONTROL MODULE (PSCM)
SUBWOOFER AMPLIFIER
LIFTGATE SWITCH
FUEL PUMP MODULE
(TAURUS X) (BASE OF RIGHT "C" PILLAR)