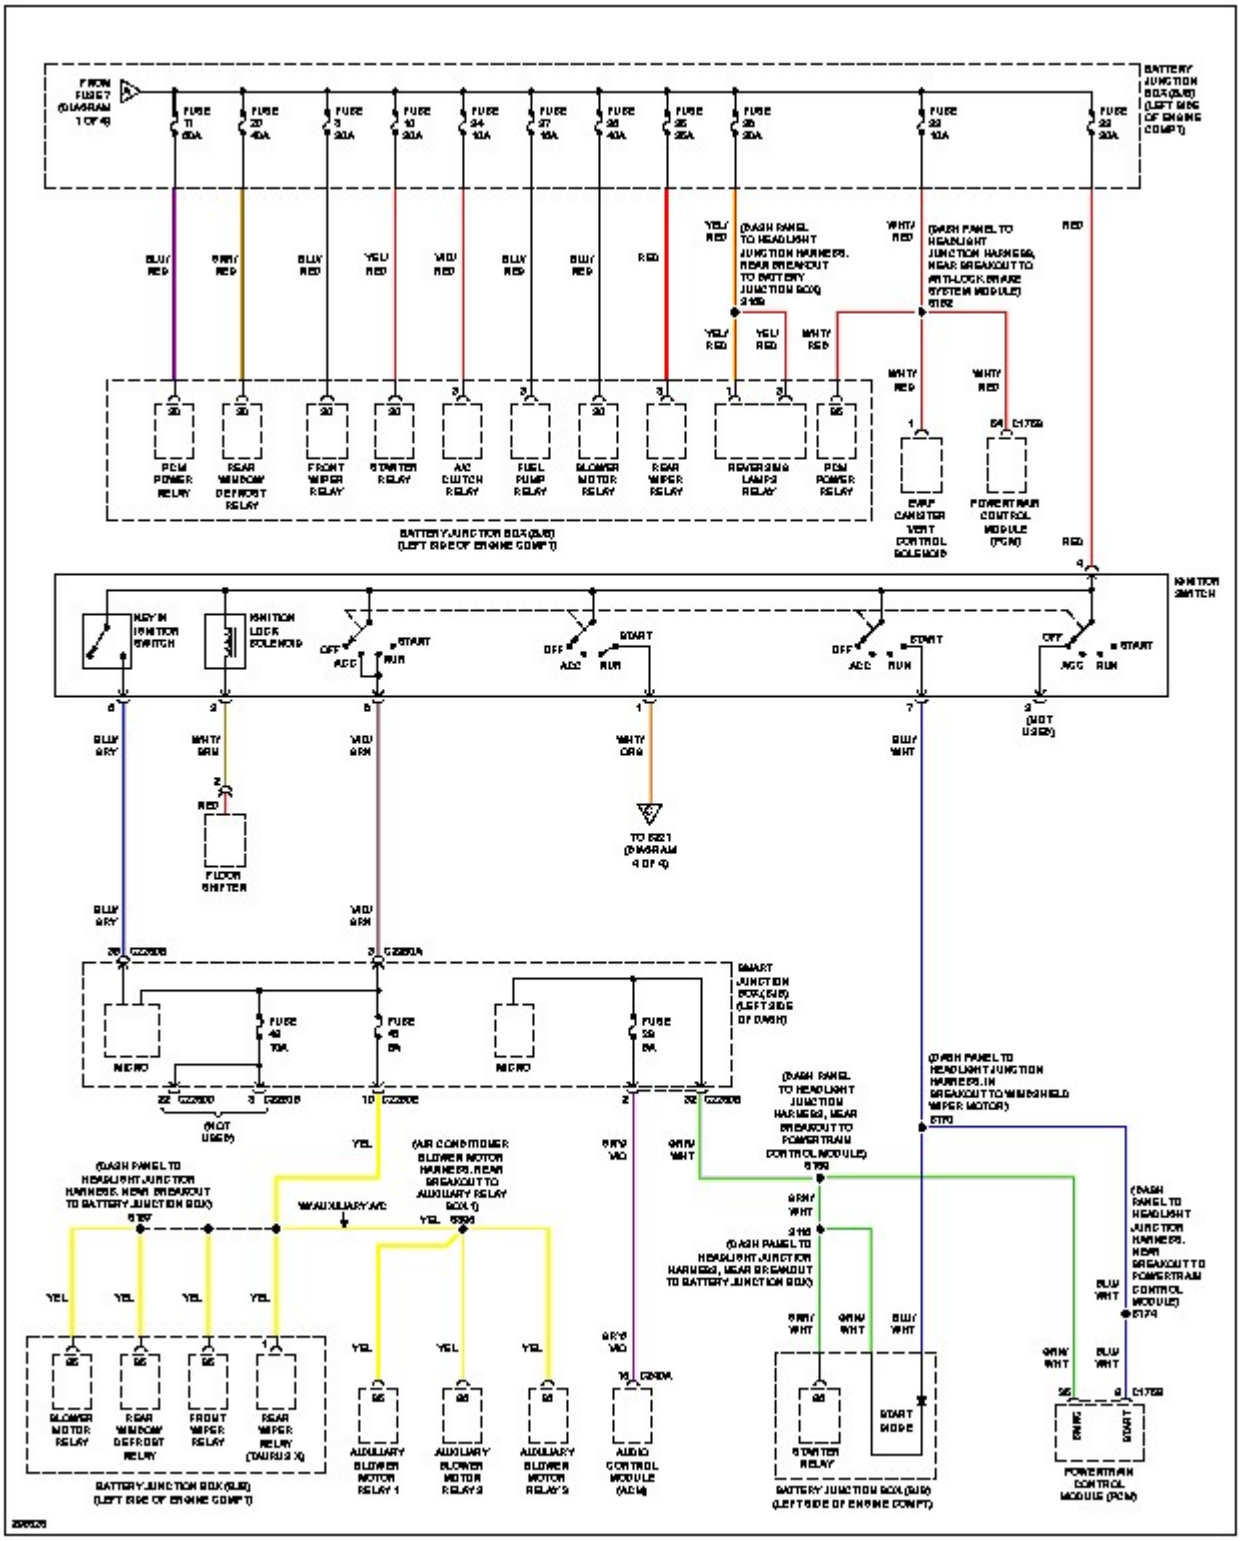
FROM FUSE 7 (DIAGRAM 1 OF 4)
FUSE 11 60A
FUSE 20 40A
FUSE 3 30A
FUSE 10 30A
FUSE 24 10A
FUSE 27 15A
FUSE 26 40A
FUSE 25 25A
FUSE 28 30A
FUSE 22 10A
FUSE 23 30A
BATTERY JUNCTION BOX (BJB) (LEFT SIDE OF ENGINE COMPT)
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, REAR BREAKOUT TO BATTERY JUNCTION BOX) S155
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, REAR BREAKOUT TO ANTI-LOCK BRAKE SYSTEM MODULE) S152
PCM POWER RELAY
REAR WINDOW DEFROST RELAY
FRONT WIPER RELAY
STARTER RELAY
A/C CLUTCH RELAY
FUEL PUMP RELAY
BLOWER MOTOR RELAY
REAR WIPER RELAY
REVERSING LAMPS RELAY
PCM POWER RELAY
EVAP CANISTER VENT CONTROL SOLENOID
POWERTRAIN CONTROL MODULE (PCM)
IGNITION SWITCH
KEY IN IGNITION SWITCH
IGNITION LOCK SOLENOID
OFF
ACC
START
RUN
(NOT USED)
TO S221 (DIAGRAM 4 OF 4)
FLOOR SHIFTER
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
MICRO
FUSE 42 10A
FUSE 45 5A
FUSE 55 5A
(NOT USED)
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, REAR BREAKOUT TO WINDSHIELD WIPER MOTOR) S170
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, REAR BREAKOUT TO POWERTRAIN CONTROL MODULE) S169
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, NEAR BREAKOUT TO BATTERY JUNCTION BOX) S157
(AIR CONDITIONER BLOWER MOTOR HARNESS, REAR BREAKOUT TO AUXILIARY RELAY BOX 1) S206
W/AUXILIARY A/C
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, NEAR BREAKOUT TO POWERTRAIN CONTROL MODULE) S174
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, REAR BREAKOUT TO BATTERY JUNCTION BOX) S165
BLOWER MOTOR RELAY
REAR WINDOW DEFROST RELAY
FRONT WIPER RELAY
REAR WIPER RELAY (TAURUS X)
BATTERY JUNCTION BOX (BJB) (LEFT SIDE OF ENGINE COMPT)
AUXILIARY BLOWER MOTOR RELAY 1
AUXILIARY BLOWER MOTOR RELAY 2
AUXILIARY BLOWER MOTOR RELAY 3
AUDIO CONTROL MODULE (ACM)
STARTER RELAY
START MODE
BATTERY JUNCTION BOX (BJB) (LEFT SIDE OF ENGINE COMPT)
ENRG
START
POWERTRAIN CONTROL MODULE (PCM)