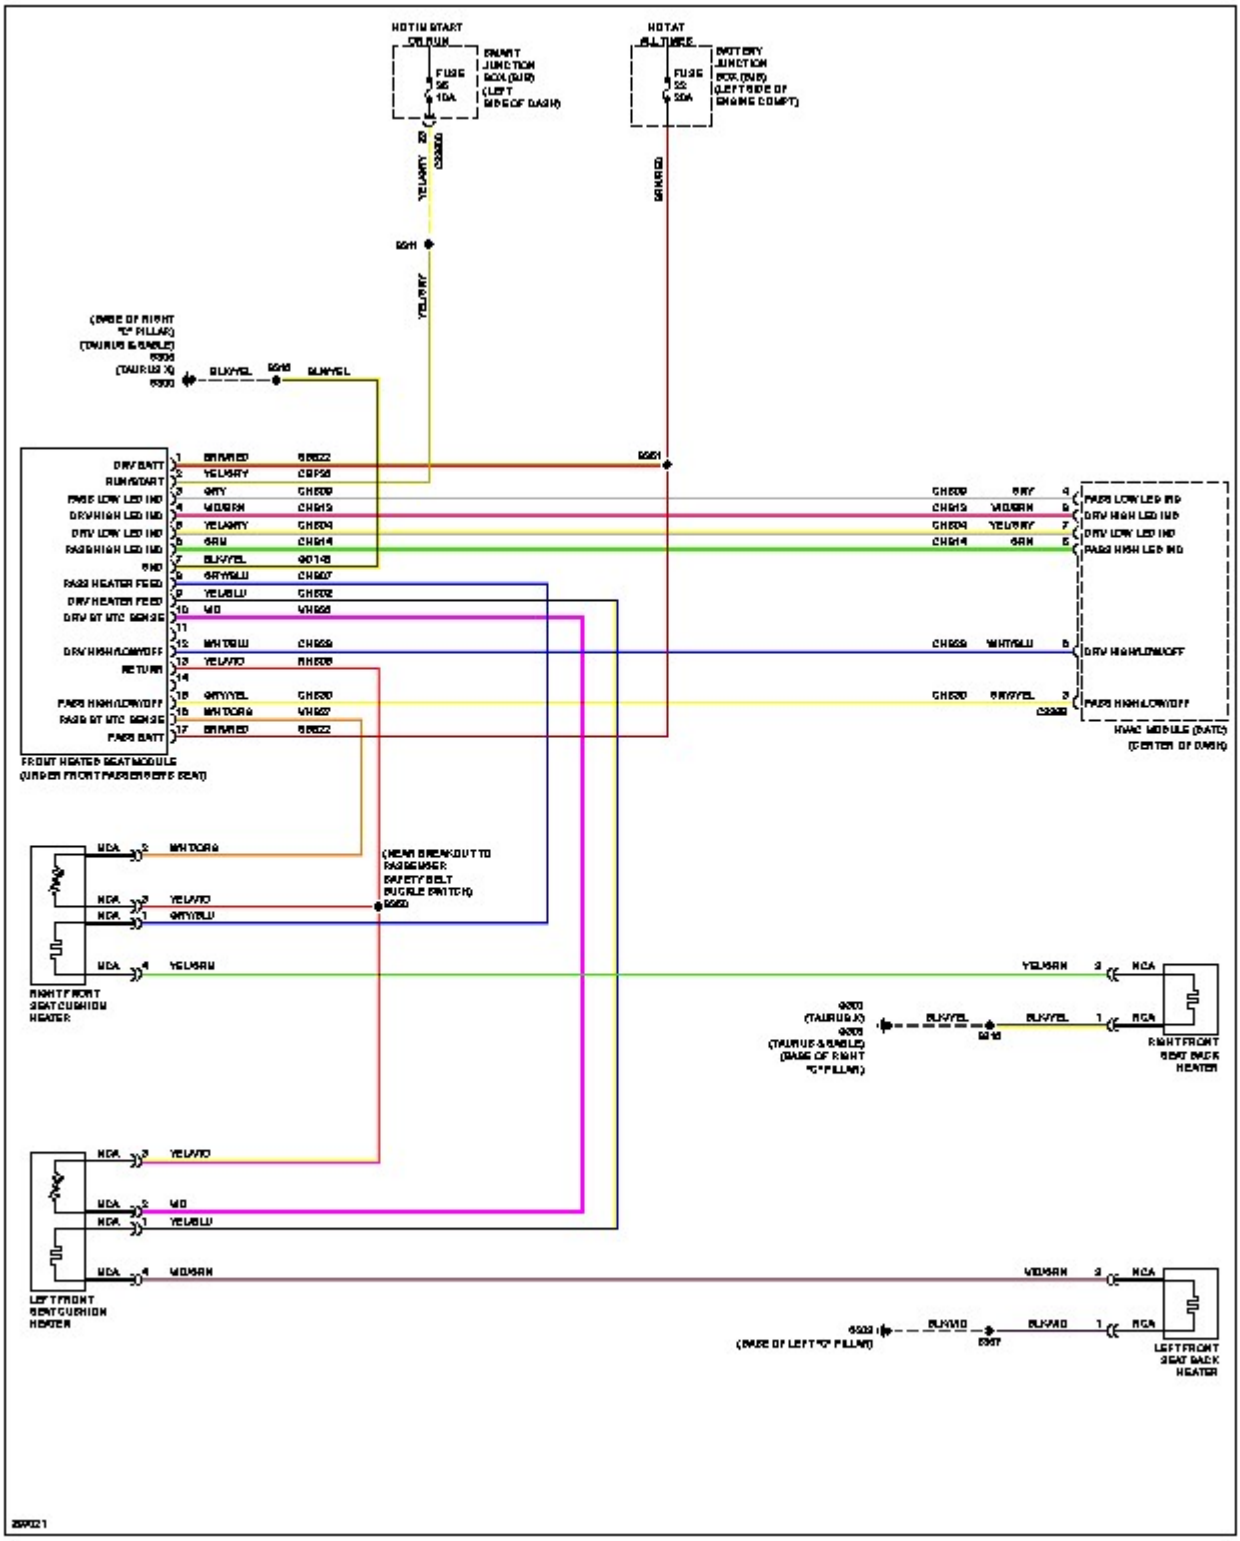

HOT IN START OR RUN
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
FUSE 25 10A
HOT AT ALL TIMES
BATTERY JUNCTION BOX (BJB) (LEFT SIDE OF ENGINE COMPT)
FUSE 22 20A
YEL/GRY
BRN/RED
(BASE OF RIGHT "C" PILLAR) (TAURUS & SABLE)
BLK/YEL
DRV BATT
RUN/START
PASS LOW LED IND
DRV HIGH LED IND
DRV LOW LED IND
PASS HIGH LED IND
GND
PASS HEATER FEED
DRV HEATER FEED
DRV BT MTC SENSE
DRV HIGH/LOW/OFF
RETURN
PASS HIGH/LOW/OFF
PASS BT MTC SENSE
PASS BATT
FRONT HEATED SEAT MODULE (UNDER FRONT PASSENGER'S SEAT)
HVAC MODULE (BATC) (CENTER OF DASH)
(NEAR BREAKOUT TO PASSENGER SAFETY BELT BUCKLE SWITCH)
RIGHT FRONT SEAT CUSHION HEATER
RIGHT FRONT SEAT BACK HEATER
LEFT FRONT SEAT CUSHION HEATER
LEFT FRONT SEAT BACK HEATER
(BASE OF LEFT "C" PILLAR)