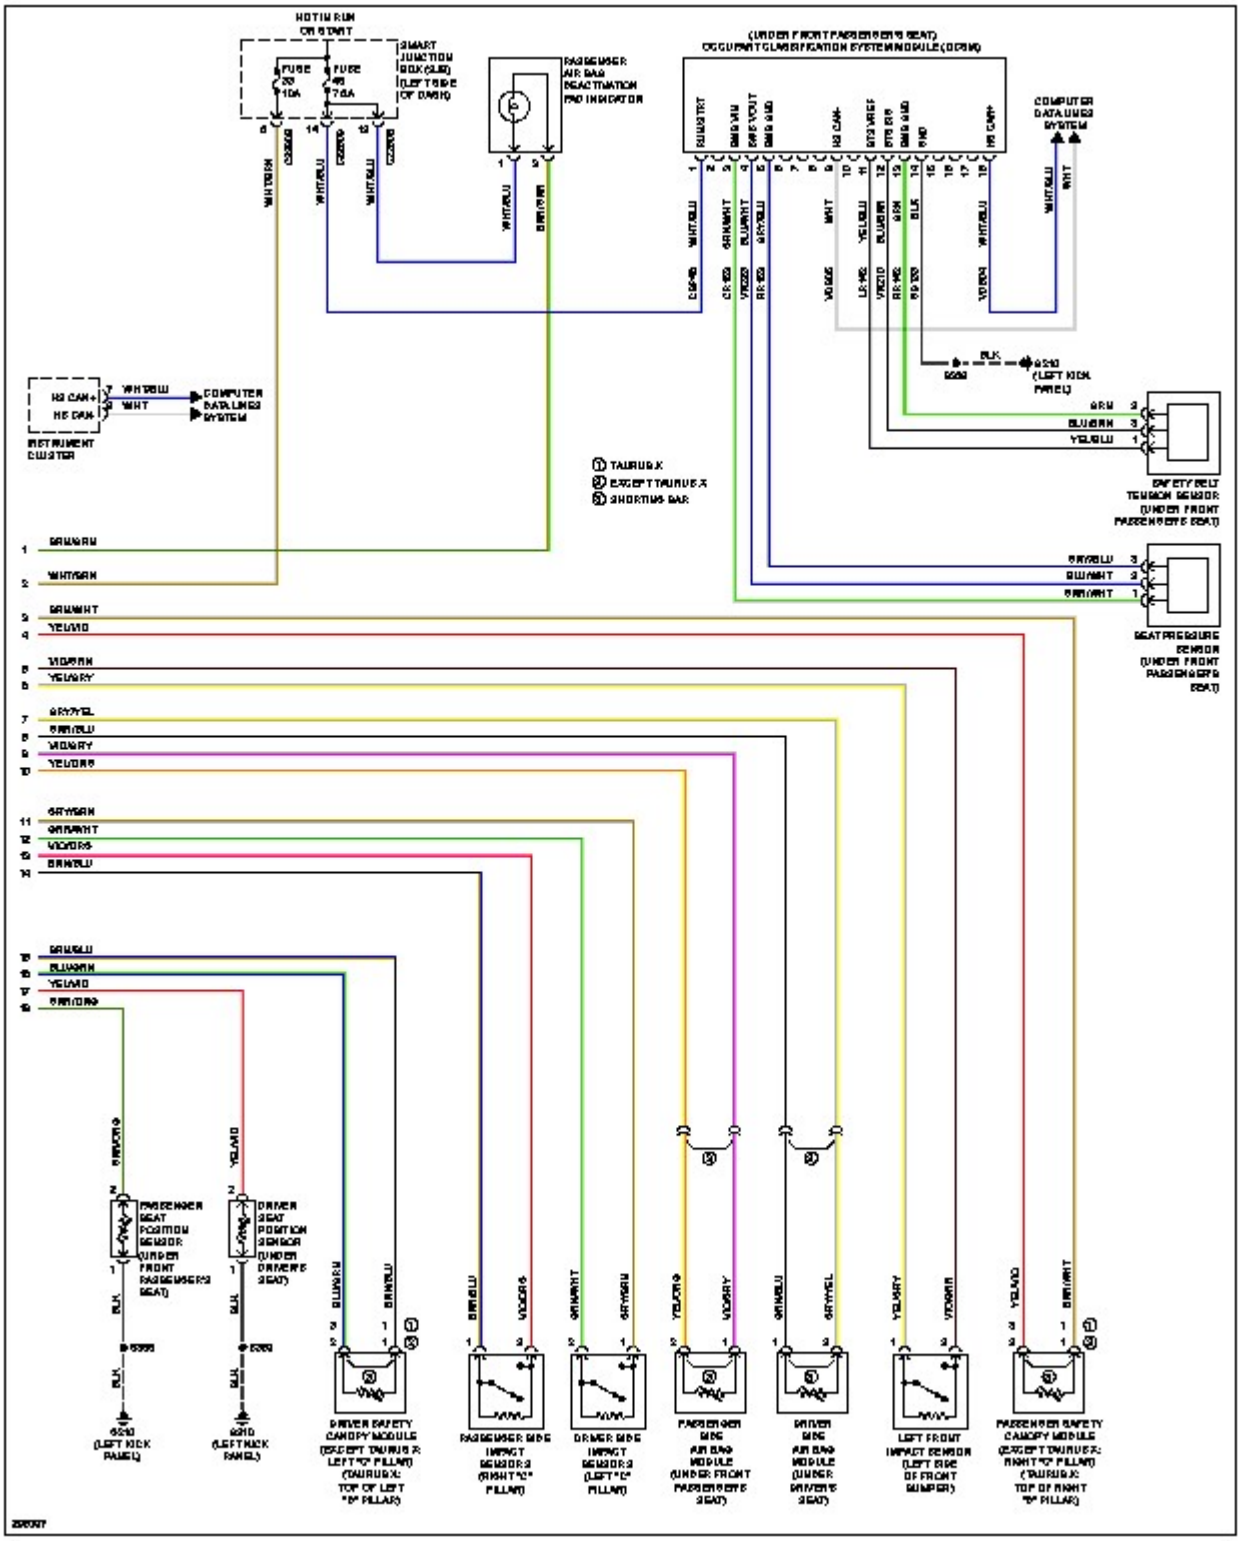

HOT IN RUN OR START
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
FUSE 33 10A
FUSE 46 7.5A
RASSENGER AIR BAG DEACTIVATION PAD INDICATOR
(UNDER FRONT PASSENGER'S SEAT) OCCUPANT CLASSIFICATION SYSTEM MODULE (OCSM)
COMPUTER DATA LINES SYSTEM
INSTRUMENT CLUSTER
HS CAN+
HS CAN-
WHT/BLU
WHT
COMPUTER DATA LINES SYSTEM
TAURUS X
EXCEPT TAURUS X
SHORTING BAR
SAFETY BELT TENSION SENSOR (UNDER FRONT PASSENGER'S SEAT)
SEAT PRESSURE SENSOR (UNDER FRONT PASSENGER'S SEAT)
PASSENGER SEAT POSITION SENSOR (UNDER FRONT PASSENGER'S SEAT)
DRIVER SEAT POSITION SENSOR (UNDER DRIVER'S SEAT)
(LEFT KICK PANEL)
DRIVER SAFETY CANOPY MODULE (EXCEPT TAURUS X: LEFT "C" PILLAR) (TAURUS X: TOP OF LEFT "B" PILLAR)
RASSENGER SIDE IMPACT SENSORS (RIGHT "C" PILLAR)
DRIVER SIDE IMPACT SENSORS (LEFT "C" PILLAR)
PASSENGER SIDE AIR BAG MODULE (UNDER FRONT PASSENGER'S SEAT)
DRIVER SIDE AIR BAG MODULE (UNDER DRIVER'S SEAT)
LEFT FRONT IMPACT SENSOR (LEFT SIDE OF FRONT BUMPER)
PASSENGER SAFETY CANOPY MODULE (EXCEPT TAURUS X: RIGHT "C" PILLAR) (TAURUS X: TOP OF RIGHT "B" PILLAR)