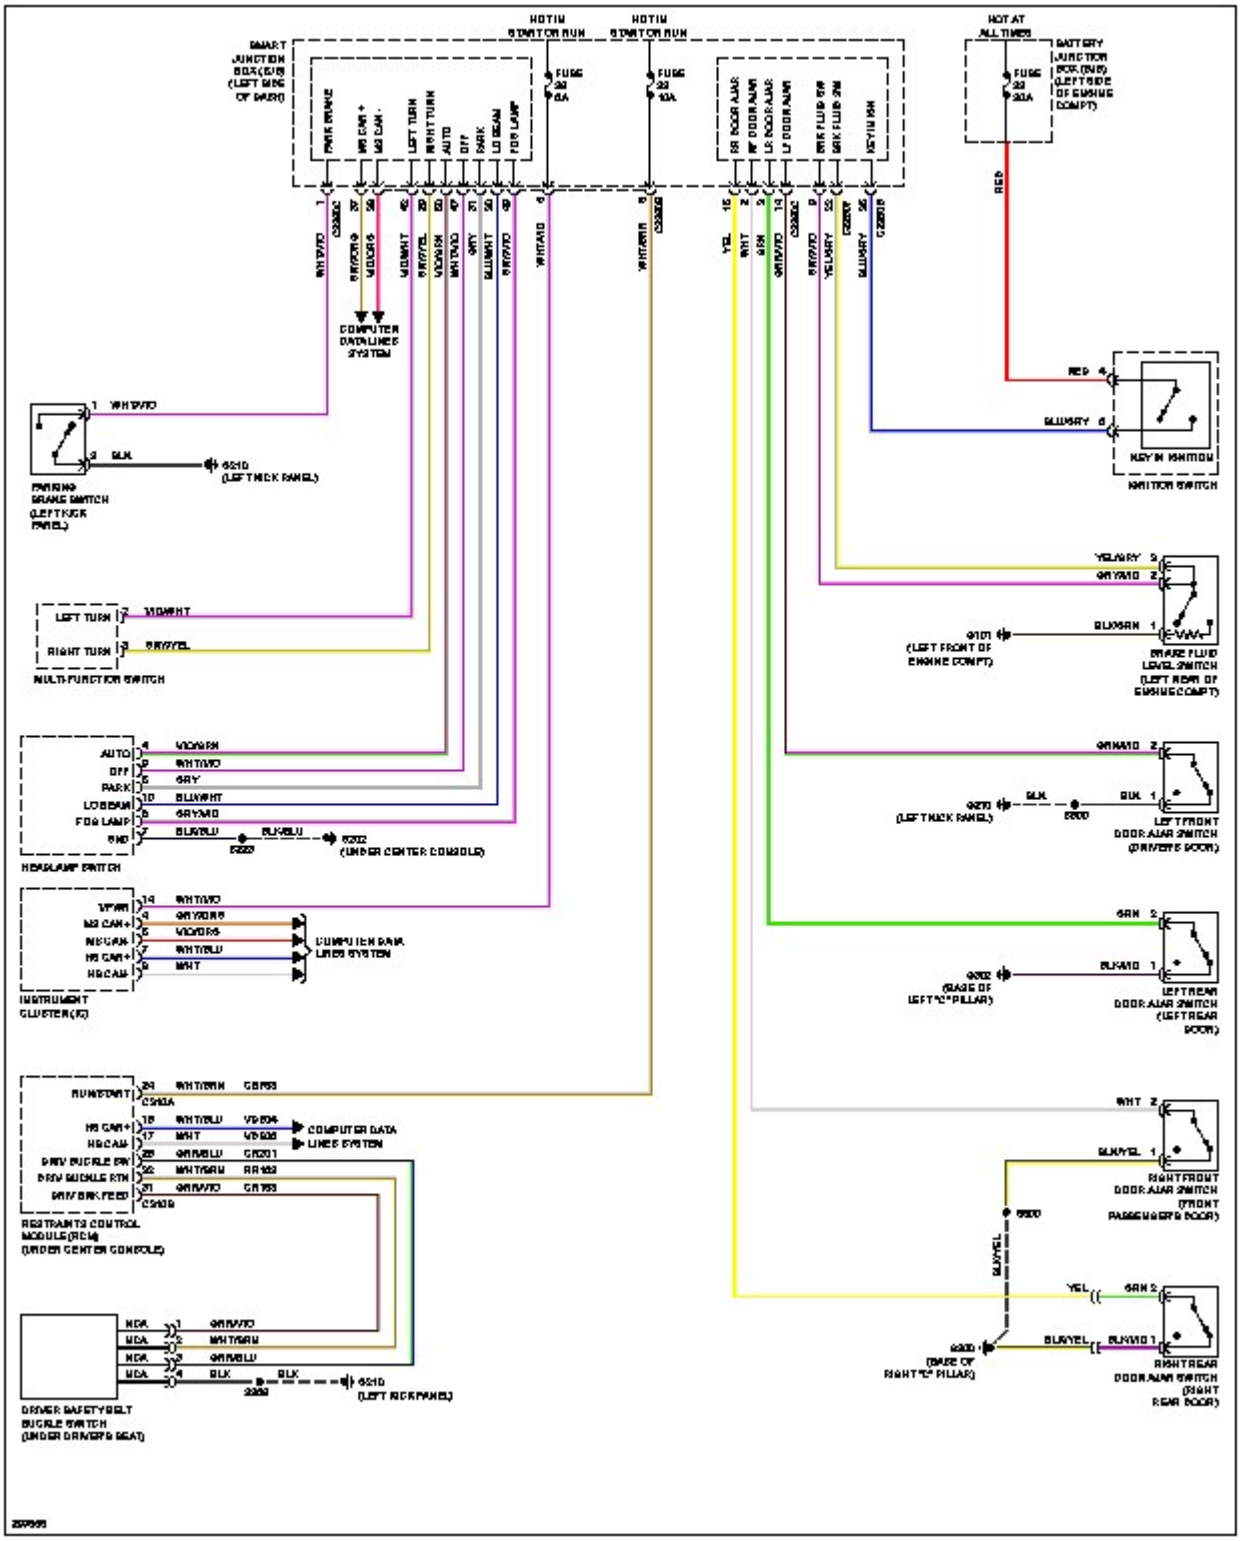
HOT IN START OR RUN
HOT IN START OR RUN
HOT AT ALL TIMES
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
PARK BRAKE
MS CAN +
MS CAN -
LEFT TURN
RIGHT TURN
AUTO
OFF
PARK
LO BEAM
FOG LAMP
FUSE 23 40A
FUSE 23 40A
RR DOOR AJAR
RF DOOR AJAR
LR DOOR AJAR
LF DOOR AJAR
BRK FLUID SW
BRK FLUID SW
KEY IN IGN
FUSE 23 40A
BATTERY JUNCTION BOX (BJB) (LEFT SIDE OF ENGINE COMPT)
COMPUTER DATA LINES SYSTEM
PARKING BRAKE SWITCH (LEFT KICK PANEL)
G310 (LEFT KICK PANEL)
KEY IN IGNITION SWITCH
MULTI-FUNCTION SWITCH
LEFT TURN
RIGHT TURN
BRAKE FLUID LEVEL SWITCH (LEFT REAR OF ENGINE COMPT)
G101 (LEFT FRONT OF ENGINE COMPT)
HEADLAMP SWITCH
AUTO
OFF
PARK
LO BEAM
FOG LAMP
END
S202 (UNDER CENTER CONSOLE)
LEFT FRONT DOOR AJAR SWITCH (DRIVER'S DOOR)
G200 (LEFT KICK PANEL)
INSTRUMENT CLUSTER (IC)
VPWR
MS CAN+
MS CAN-
HS CAN+
HS CAN-
COMPUTER DATA LINES SYSTEM
LEFT REAR DOOR AJAR SWITCH (LEFT REAR DOOR)
G302 (BASE OF LEFT "C" PILLAR)
RUN/START
HS CAN+
HS CAN-
DRV BUCKLE SW
DRV BUCKLE RTN
DRV BRK FEED
COMPUTER DATA LINES SYSTEM
RESTRAINTS CONTROL MODULE (RCM) (UNDER CENTER CONSOLE)
RIGHT FRONT DOOR AJAR SWITCH (FRONT PASSENGER'S DOOR)
S200
RIGHT REAR DOOR AJAR SWITCH (RIGHT REAR DOOR)
G300 (BASE OF RIGHT "C" PILLAR)
DRIVER SAFETY BELT BUCKLE SWITCH (UNDER DRIVER'S SEAT)
G310 (LEFT KICK PANEL)