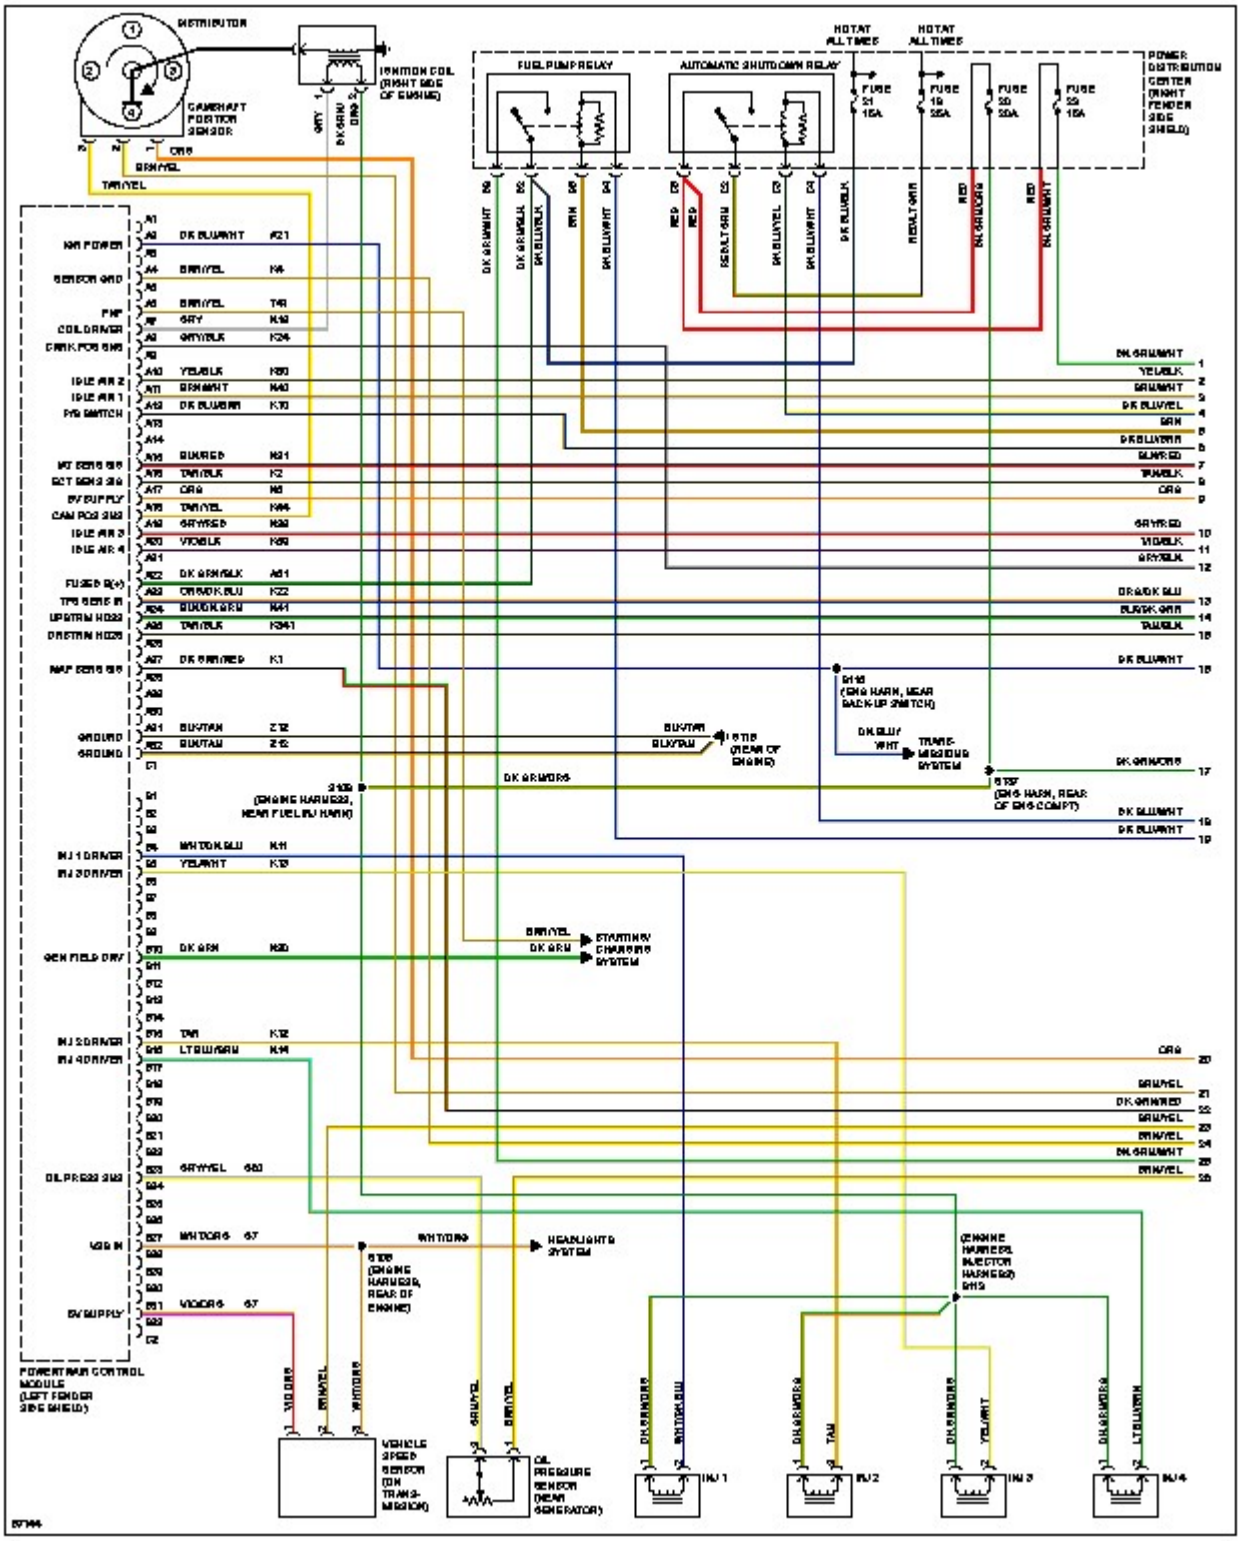
DISTRIBUTOR
CAMSHAFT POSITION SENSOR
IGNITION COIL (RIGHT SIDE OF ENGINE)
FUEL PUMP RELAY
AUTOMATIC SHUTDOWN RELAY
HOT AT ALL TIMES
HOT AT ALL TIMES
FUSE 21 15A
FUSE 19 30A
FUSE 20 30A
FUSE 22 15A
POWER DISTRIBUTION CENTER (RIGHT FENDER SIDE SHIELD)
POWERTRAIN CONTROL MODULE (LEFT FENDER SIDE SHIELD)
MAP POWER
SENSOR GND
PNP
COIL DRIVER
CAM POS SIG
IDLE AIR 2
IDLE AIR 1
PS SWITCH
IDLE AIR 3
IDLE AIR 4
FUSED B(+)
MAP SENS SIG
GROUND
GROUND
INJ 1 DRIVER
INJ 3 DRIVER
GEN FIELD DRV
INJ 2 DRIVER
INJ 4 DRIVER
OIL PRESS SIG
VSS IN
5V SUPPLY
S109 (ENGINE HARNESS, REAR OF ENGINE)
S108 (REAR OF ENGINE)
S118 (ENG HARN, REAR BACK-UP SWITCH)
S137 (ENG HARN, REAR OF ENG COMPT)
S105 (ENGINE HARNESS, NEAR FUEL INJ HARN)
TRANS-MISSION SYSTEM
STARTING CHARGING SYSTEM
HEADLIGHTS SYSTEM
(ENGINE HARNESS INJECTOR HARNESS) EH15
VEHICLE SPEED SENSOR (IN TRANS-MISSION)
OIL PRESSURE SENSOR (NEAR GENERATOR)
INJ 1
INJ 2
INJ 3
INJ 4