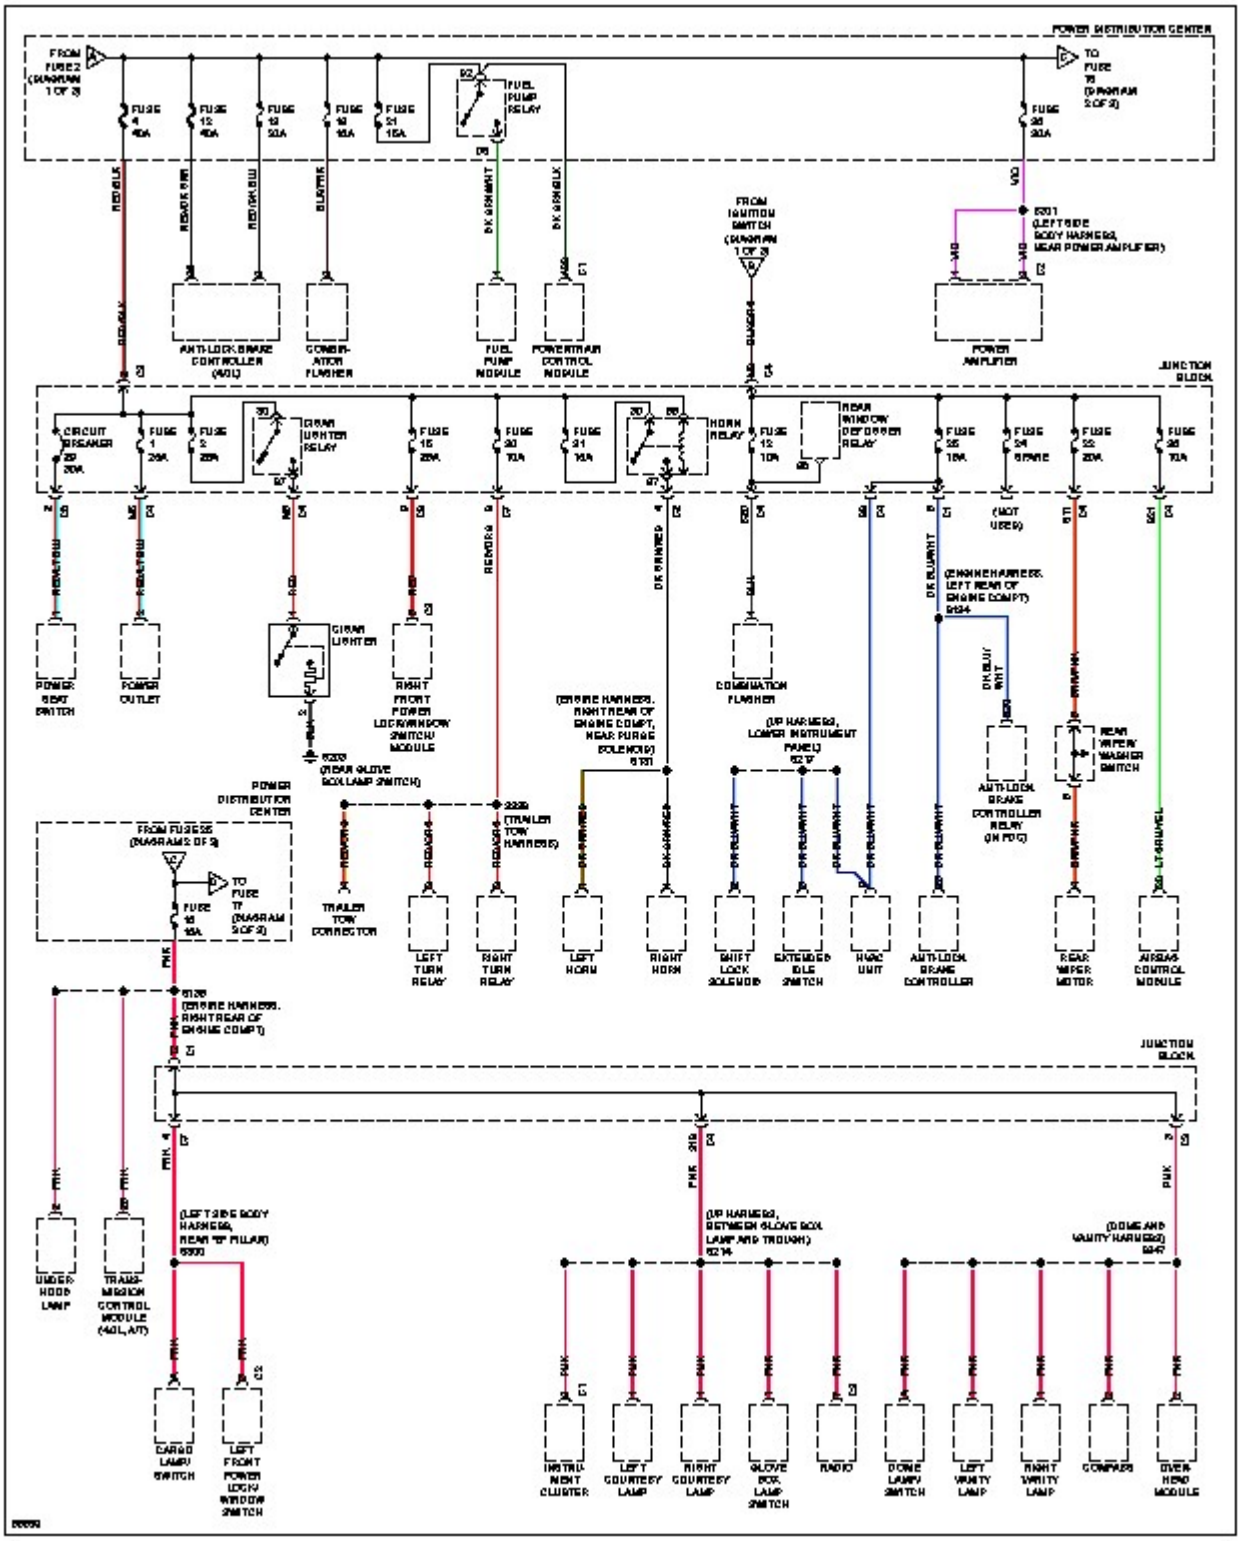
POWER DISTRIBUTION CENTER
FROM FUSE 2 (DIAGRAM 1 OF 3)
FUSE 4 40A
FUSE 12 40A
FUSE 13 30A
FUSE 18 15A
FUSE 21 15A
FUEL PUMP RELAY
TO FUSE 15 (DIAGRAM 2 OF 3)
FUSE 36 30A
RED/BLK
RED/BLK/WHT
RED/YEL/BLU
BLK/WHT
DK GRN/WHT
DK GRN/BLK
VIO
FROM IGNITION SWITCH (DIAGRAM 1 OF 3)
ORN/BLK
G201 (LEFT SIDE BODY HARNESS, NEAR POWER AMPLIFIER)
ANTI-LOCK BRAKE CONTROLLER (ABS)
CONVENTION FLASHER
FUEL PUMP MODULE
POWERTRAIN CONTROL MODULE
POWER AMPLIFIER
JUNCTION BLOCK
CIRCUIT BREAKER 20A
FUSE 1 20A
FUSE 2 20A
CIGAR LIGHTER RELAY
FUSE 15 20A
FUSE 20 10A
FUSE 21 10A
HORN RELAY
FUSE 12 10A
REAR WINDOW DEFOGGER RELAY
FUSE 35 10A
FUSE 24 SPARE
FUSE 22 20A
FUSE 36 10A
(HOT USER)
RED/WHT
RED/BLK
RED
RED/GRN
DK BLU/WHT
BRN/WHT
LT GRN/YEL
POWER SEAT SWITCH
POWER OUTLET
CIGAR LIGHTER
RIGHT FRONT POWER LOCK/WINDOW SWITCH MODULE
(ENGINE HARNESS, LEFT REAR OF ENGINE COMPT) G104
DK BLU/WHT
CONVENTION FLASHER
(ENGINE HARNESS, RIGHT REAR OF ENGINE COMPT, REAR PURGE SOLENOID) G101
(I/P HARNESS, LOWER INSTRUMENT PANEL) G37
REAR WIPER/WASHER SWITCH
AUTO-LOCK BRAKE CONTROLLER RELAY (IN PDC)
G203 (REAR GLOVE BOX LAMP SWITCH)
G205 (TRAILER TOW HARNESS)
POWER DISTRIBUTION CENTER
FROM FUSES (DIAGRAMS 2 OF 3)
TO FUSE 17 (DIAGRAM 3 OF 3)
FUSE 18 15A
PNK
TRAILER TOW CONNECTOR
LEFT TURN RELAY
RIGHT TURN RELAY
LEFT HORN
RIGHT HORN
SHIFT LOCK SOLENOID
EXTENDED IDLE SWITCH
HVAC UNIT
AUTO-LOCK BRAKE CONTROLLER
REAR WIPER MOTOR
AIRBAG CONTROL MODULE
G139 (ENGINE HARNESS, RIGHT REAR OF ENGINE COMPT)
JUNCTION BLOCK
(LEFT SIDE BODY HARNESS, REAR OF PILLAR) G202
(I/P HARNESS, BETWEEN GLOVE BOX LAMP AND TROUGH) G216
(DOME AND VANITY HARNESS) G47
UNDER-HOOD LAMP
TRANS-MISSION CONTROL MODULE (A6/L, A/T)
CARGO LAMP SWITCH
LEFT FRONT POWER LOCK/WINDOW SWITCH
INSTRU-MENT CLUSTER
LEFT COURTESY LAMP
RIGHT COURTESY LAMP
GLOVE BOX LAMP SWITCH
RADIO
DOME LAMP SWITCH
LEFT VANITY LAMP
RIGHT VANITY LAMP
COMPASS
OVER-HEAD MODULE