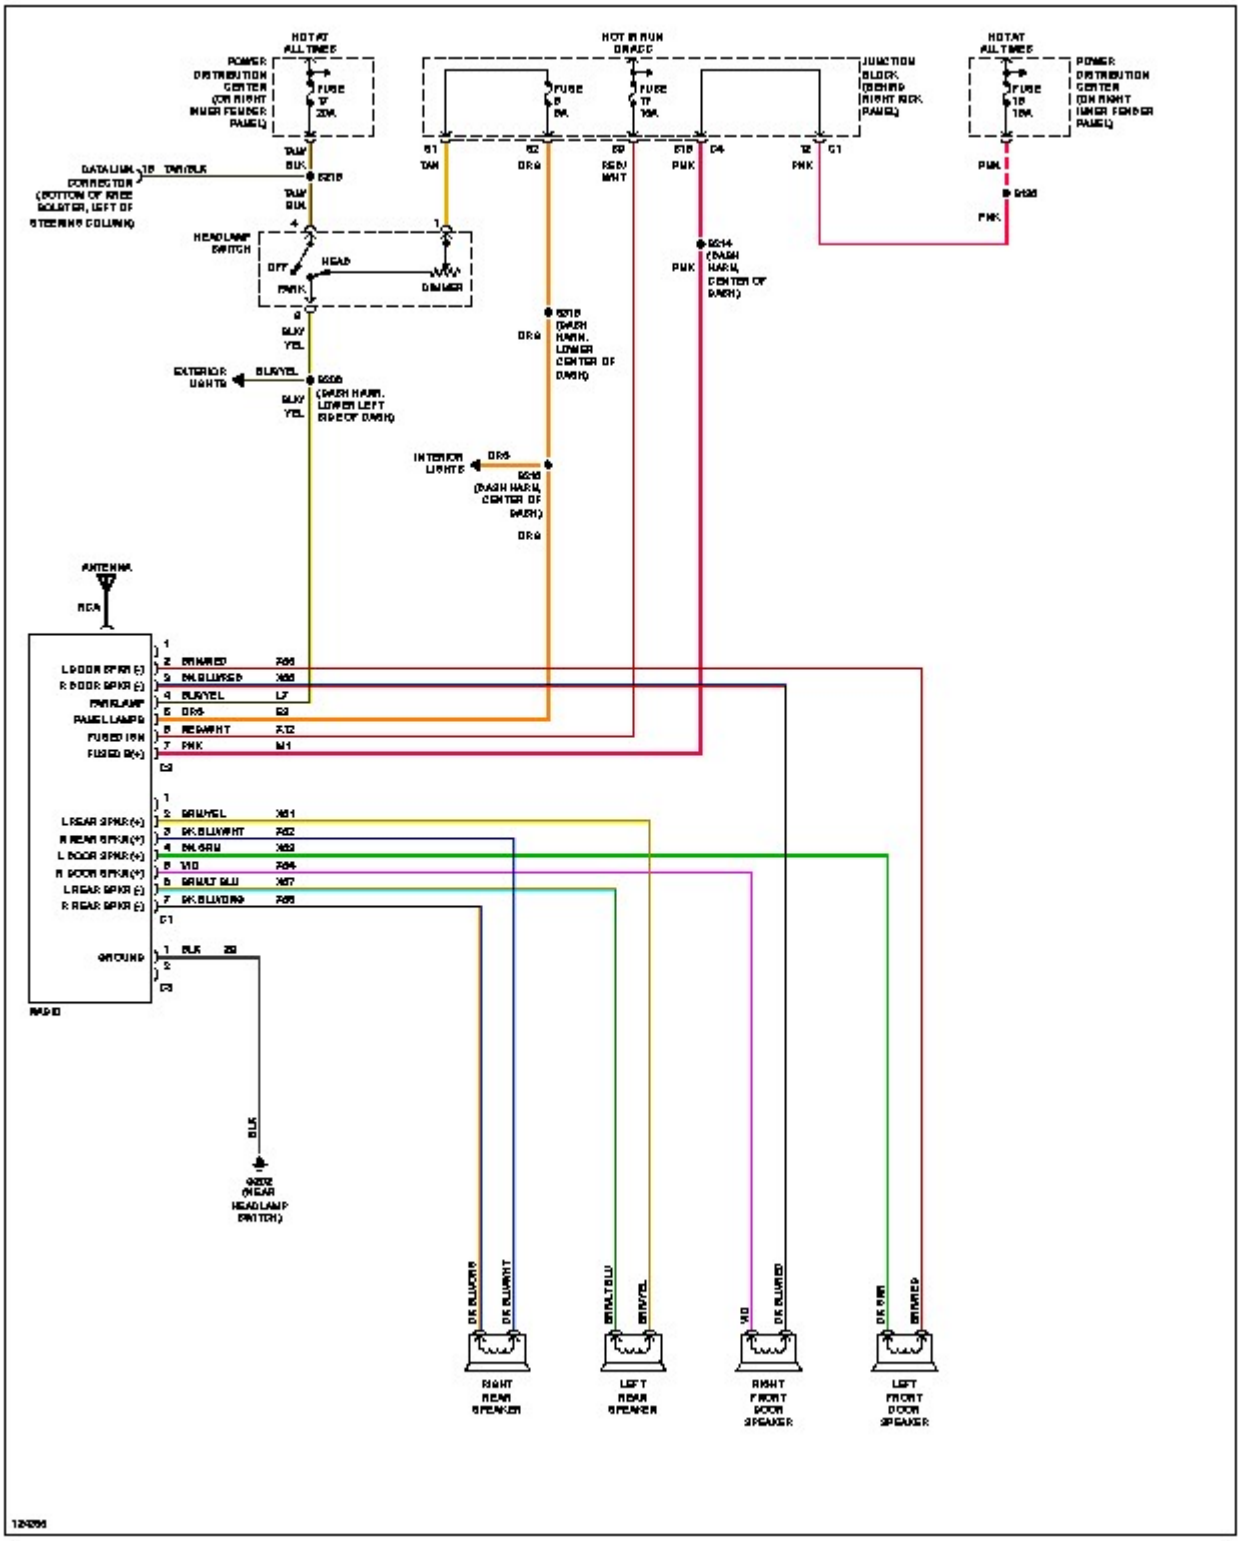
HOT AT ALL TIMES
POWER DISTRIBUTION CENTER (ON RIGHT INNER FENDER PANEL)
FUSE 17 20A
HOT IN RUN DRIVE
FUSE 8 5A
FUSE 17 10A
JUNCTION BLOCK (BEHIND RIGHT KICK PANEL)
HOT AT ALL TIMES
POWER DISTRIBUTION CENTER (ON RIGHT INNER FENDER PANEL)
FUSE 18 10A
DATA LINK CONNECTOR (BOTTOM OF FREE BOLSTER, LEFT OF STEERING COLUMN)
HEADLAMP SWITCH
OFF
HEAD
PARK
DIMMER
EXTERIOR LIGHTS
(DASH HARN. LOWER LEFT SIDE OF DASH)
INTERIOR LIGHTS
(DASH HARN. CENTER OF DASH)
(DASH HARN. LOWER CENTER OF DASH)
(DASH HARN. CENTER OF DASH)
ANTENNA
REAR
L DOOR SPKR (-)
R DOOR SPKR (-)
PARKLAMP
PANEL LAMPS
FUSED 15A
FUSED B(+)
L REAR SPKR (+)
R REAR SPKR (+)
L DOOR SPKR (+)
R DOOR SPKR (+)
L REAR SPKR (-)
R REAR SPKR (-)
GROUND
RADIO
(NEAR HEADLAMP SWITCH)
RIGHT REAR SPEAKER
LEFT REAR SPEAKER
RIGHT FRONT DOOR SPEAKER
LEFT FRONT DOOR SPEAKER