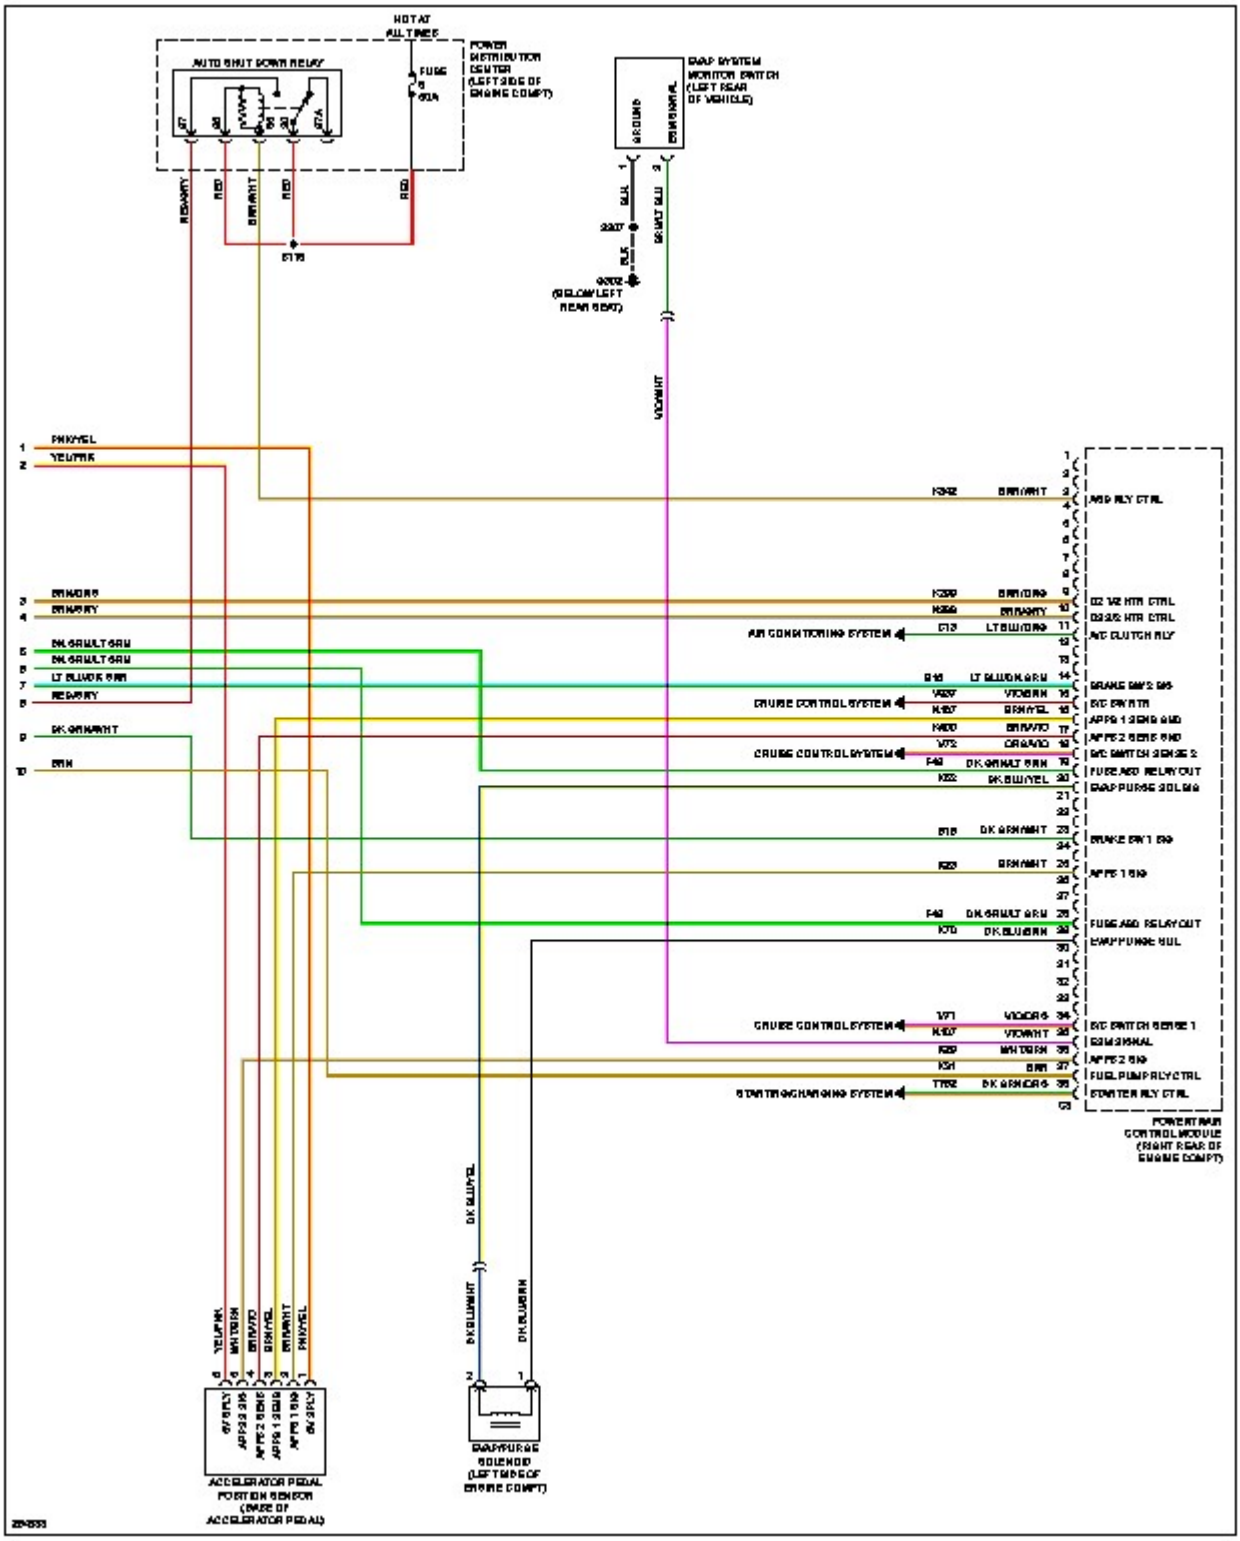

HOT AT ALL TIMES
AUTO SHUT DOWN RELAY
POWER DISTRIBUTION CENTER (LEFT SIDE OF ENGINE COMPT)
FUSE
EVAP SYSTEM MONITOR SWITCH (LEFT REAR OF VEHICLE)
GROUND
ESM SIGNAL
(BELOW LEFT REAR SEAT)
PNK/YEL
YEL/PNK
BRN/ORG
BRN/GRY
BK GRN/LT GRN
LT BLU/DK GRN
RED/GRY
DK GRN/WHT
BRN
AIR CONDITIONING SYSTEM
CRUISE CONTROL SYSTEM
STARTING/CHARGING SYSTEM
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)
ACCELERATOR PEDAL POSITION SENSOR (BASE OF ACCELERATOR PEDAL)
EVAP/PURGE SOLENOID (LEFT SIDE OF ENGINE COMPT)