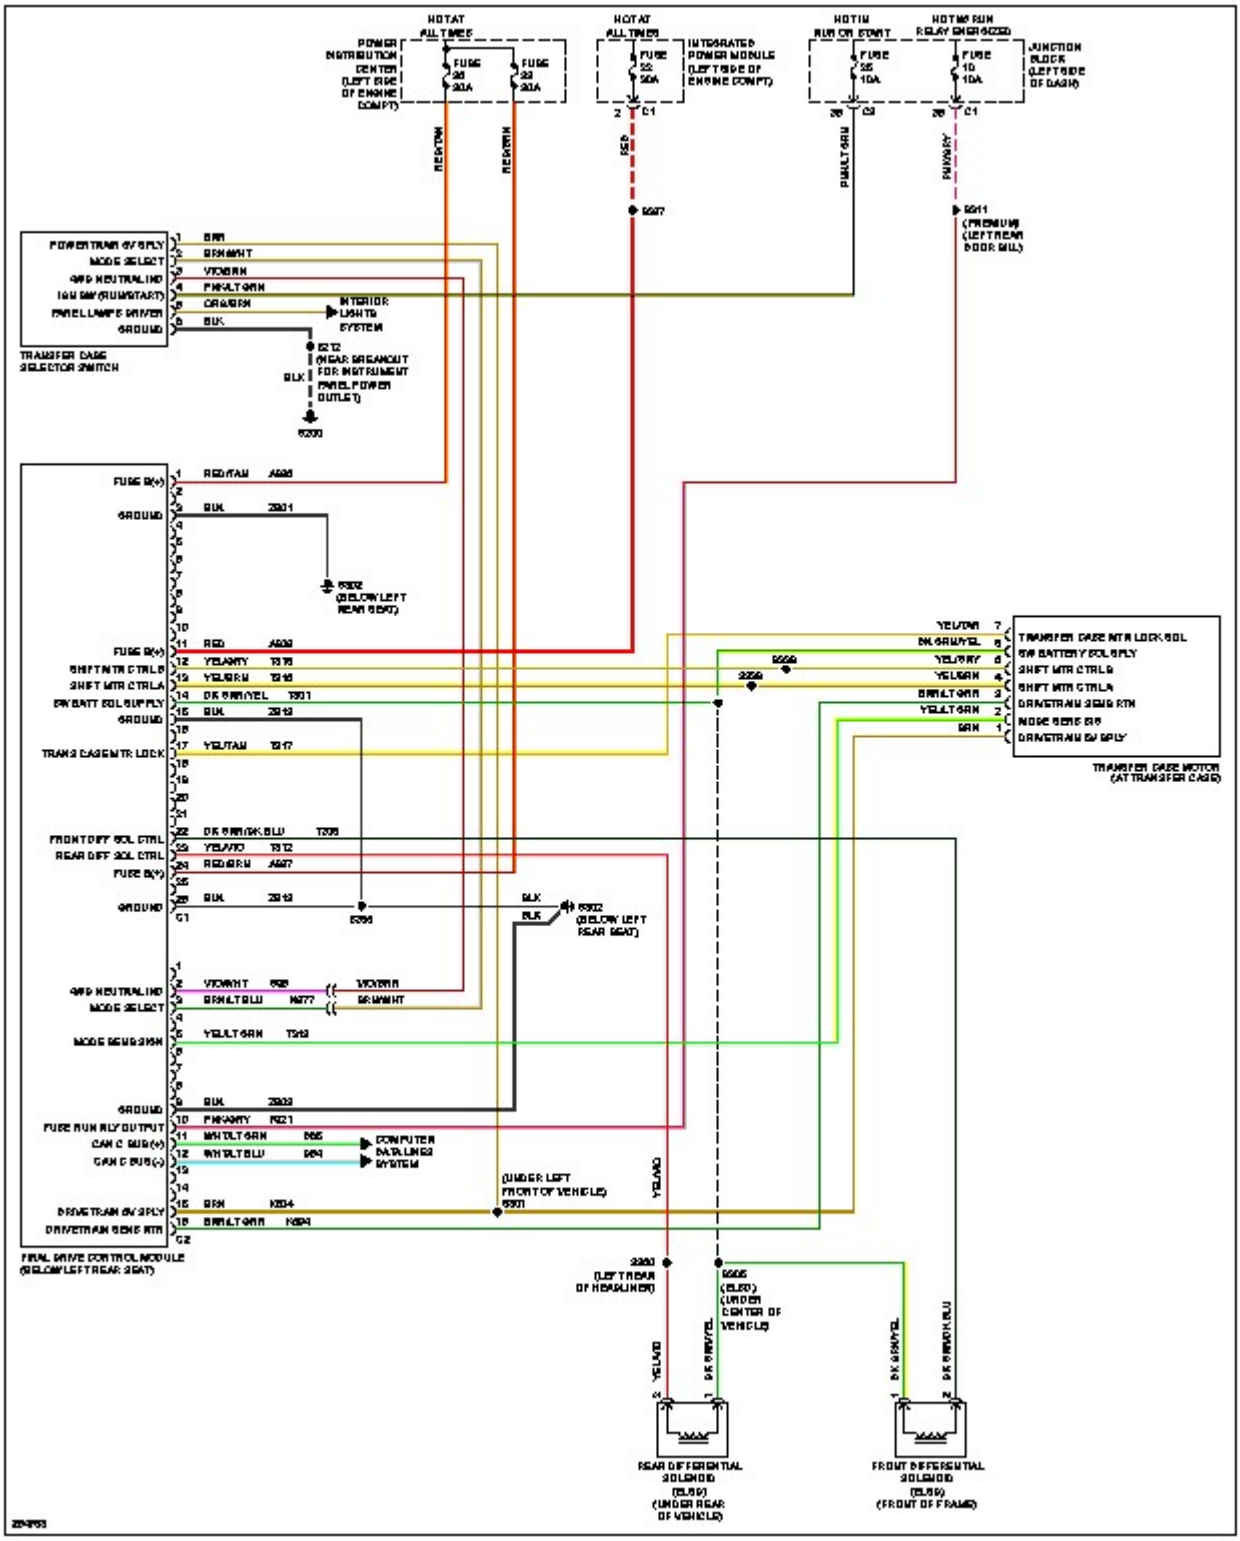
HOT AT ALL TIMES
POWER DISTRIBUTION CENTER (LEFT SIDE OF ENGINE COMPT)
FUSE 30 20A
FUSE 33 20A
HOT AT ALL TIMES
FUSE 32 50A
INTEGRATED POWER MODULE (LEFT SIDE OF ENGINE COMPT)
HOT IN RUN OR START
FUSE 35 10A
HOT IN RUN RELAY ENERGIZED
FUSE 10 10A
JUNCTION BLOCK (LEFT SIDE OF DASH)
RED/TAN
RED/TAN
RED
PNK/LT GRN
PNK/GRY
S207
S211 (PREMIUM) (LEFT REAR DOOR SILL)
POWERTRAIN 5V SPLY
MODE SELECT
4WD NEUTRAL IND
IGN SW (RUN/START)
PANEL LAMPS DRIVER
GROUND
BRN
BRN/WHT
VIO/BRN
PNK/LT GRN
ORG/BRN
BLK
INTERIOR LIGHTS SYSTEM
TRANSFER CASE SELECTOR SWITCH
S212 (NEAR BREAKOUT FOR INSTRUMENT PANEL POWER OUTLET)
S200
FUSE B(+)
GROUND
RED/TAN
BLK
S302 (BELOW LEFT REAR SEAT)
FUSE B(+)
SHIFT MTR CTRL B
SHIFT MTR CTRL A
5V BATT SOL SUPPLY
GROUND
TRANS CASE MTR LOCK
RED
YEL/ANTY
YEL/GRN
DK BRN/YEL
BLK
YEL/TAN
YELLOW
YEL/GRN
BRN/LT GRN
YEL/LT GRN
BRN
TRANSFER CASE MTR LOCK SOL
5V BATTERY SOL SPLY
SHIFT MTR CTRL B
SHIFT MTR CTRL A
DRIVETRAIN SENS RTN
MODE SENS SIG
DRIVETRAIN 5V SPLY
TRANSFER CASE MOTOR (AT TRANSFER CASE)
FRONT DIFF SOL CTRL
REAR DIFF SOL CTRL
FUSE B(+)
GROUND
DK BRN/DK BLU
YEL/VIO
RED/GRN
BLK
S302 (BELOW LEFT REAR SEAT)
4WD NEUTRAL IND
MODE SELECT
MODE SENS SIGN
VIO/WHT
BRN/LT BLU
YEL/LT GRN
VIO/BRN
BRN/WHT
GROUND
FUSE RUN RLY OUTPUT
CAN C BUS(+)
CAN C BUS(-)
BLK
PNK/GRY
WH/LT GRN
WH/LT BLU
COMPUTER DATA LINES SYSTEM
DRIVETRAIN 5V SPLY
DRIVETRAIN SENS RTN
BRN
BRN/LT GRN
FINAL DRIVE CONTROL MODULE (BELOW LEFT REAR SEAT)
(UNDER LEFT FRONT OF VEHICLE)
S301
YELLOW
S300 (LEFT REAR OF HEADLINER)
S305 (ELED) (UNDER CENTER OF VEHICLE)
YELLOW
DK BRN/YEL
DK BRN/YEL
DK BRN/DK BLU
REAR DIFFERENTIAL SOLENOID (ELSD) (UNDER REAR OF VEHICLE)
FRONT DIFFERENTIAL SOLENOID (ELSD) (FRONT OF FRAME)