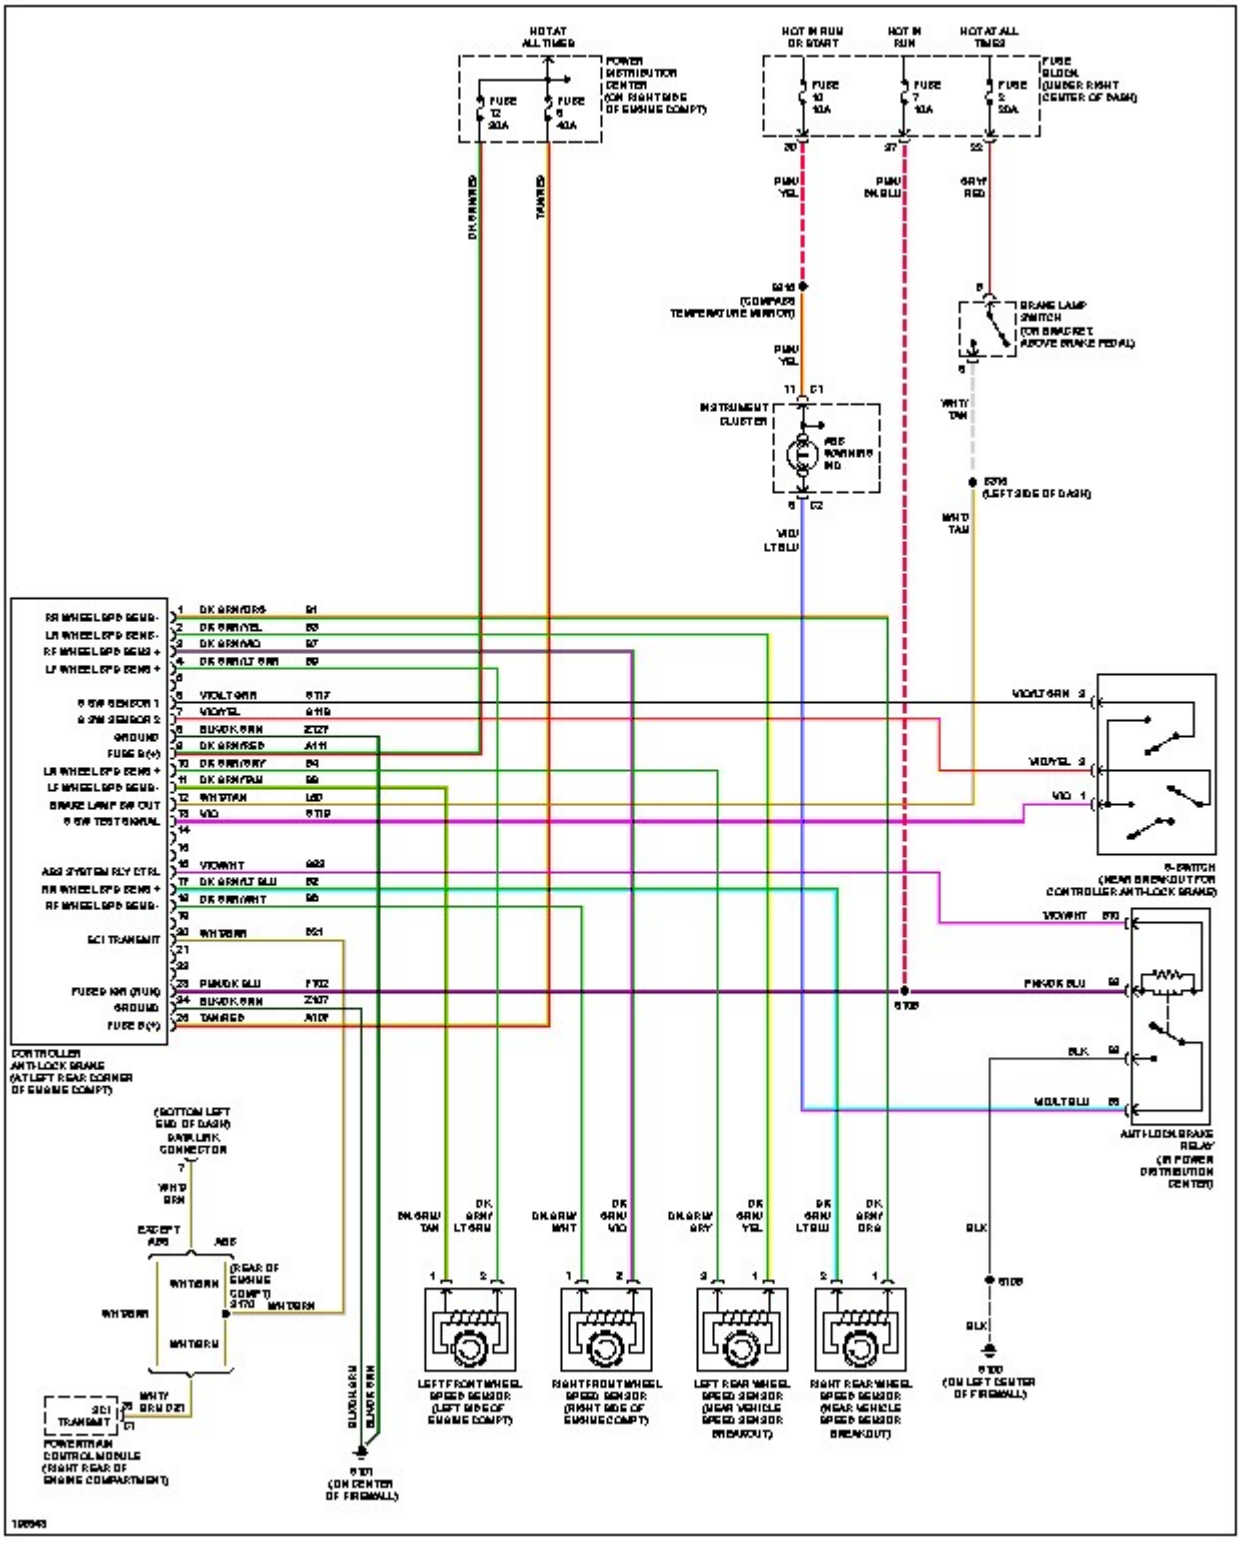
HOT AT ALL TIMES
POWER DISTRIBUTION CENTER (ON RIGHT SIDE OF ENGINE COMPT)
FUSE 12 30A
FUSE 6 40A
HOT IN RUN OR START
HOT IN RUN
HOT AT ALL TIMES
FUSE BLOCK (UNDER RIGHT CENTER OF DASH)
FUSE 10 10A
FUSE 7 10A
FUSE 2 30A
DK BRN/RED
TAN/RED
PNK/ YEL
PNK/ DK BLU
GRY/ RED
(COMPASS TEMPERATURE MIRROR)
BRAKE LAMP SWITCH (ON BRACKET ABOVE BRAKE PEDAL)
INSTRUMENT CLUSTER
ABS WARNING IND
WHT/ TAN
(LEFT SIDE OF DASH)
VIO/ LT BLU
RR WHEEL SPD SENS-
LR WHEEL SPD SENS-
RF WHEEL SPD SENS +
LF WHEEL SPD SENS +
S SW SENSOR 1
S SW SENSOR 2
GROUND
FUSE B(+)
LR WHEEL SPD SENS +
LF WHEEL SPD SENS-
BRAKE LAMP SW OUT
S SW TEST SIGNAL
ABS SYSTEM RLY CTRL
RR WHEEL SPD SENS +
RF WHEEL SPD SENS-
SCI TRANSMIT
FUSED IGN (RUN)
GROUND
FUSE B(+)
DK GRN/ORG 81
DK GRN/YEL 83
DK GRN/RED 87
DK GRN/LT GRN 89
VIO/LT GRN 1117
VIO/YEL 1119
BLK/DK GRN Z127
DK GRN/RED A111
DK GRN/GRY 84
DK GRN/TAN 88
WHT/TAN L60
VIO 1119
VIO/WHT 883
DK GRN/LT BLU 82
DK GRN/WHT 86
WHT/BRN 851
PNK/DK BLU F102
BLK/DK BRN Z107
TAN/RED A107
CONTROLLER ANTI-LOCK BRAKE (AT LEFT REAR CORNER OF ENGINE COMPT)
VIO/LT GRN
VIO/YEL
VIO
S-SWITCH (NEAR BREAKOUT FOR CONTROLLER ANTI-LOCK BRAKE)
VIO/WHT
PNK/DK BLU
BLK
VIO/LT BLU
ANTI-LOCK BRAKE RELAY (IN POWER DISTRIBUTION CENTER)
(BOTTOM LEFT END OF DASH)
DATA LINK CONNECTOR
WHT/ BRN
EXCEPT ABS
ABS
WHT/BRN
(REAR OF ENGINE COMPT)
WHT/BRN
WHT/BRN
WHT/ BRN/ DK BLU
TRANSMIT
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPARTMENT)
BLK/DK BRN
BLK/DK BRN
(ON CENTER OF FIREWALL)
DK GRN/ TAN
DK GRN/ LT GRN
DK GRN/ WHT
DK GRN/ VIO
DK GRN/ GRY
DK GRN/ YEL
DK GRN/ LT BLU
DK GRN/ ORG
LEFT FRONT WHEEL SPEED SENSOR (LEFT SIDE OF ENGINE COMPT)
RIGHT FRONT WHEEL SPEED SENSOR (RIGHT SIDE OF ENGINE COMPT)
LEFT REAR WHEEL SPEED SENSOR (REAR VEHICLE SPEED SENSOR BREAKOUT)
RIGHT REAR WHEEL SPEED SENSOR (REAR VEHICLE SPEED SENSOR BREAKOUT)
BLK
(ON LEFT CENTER OF FIREWALL)