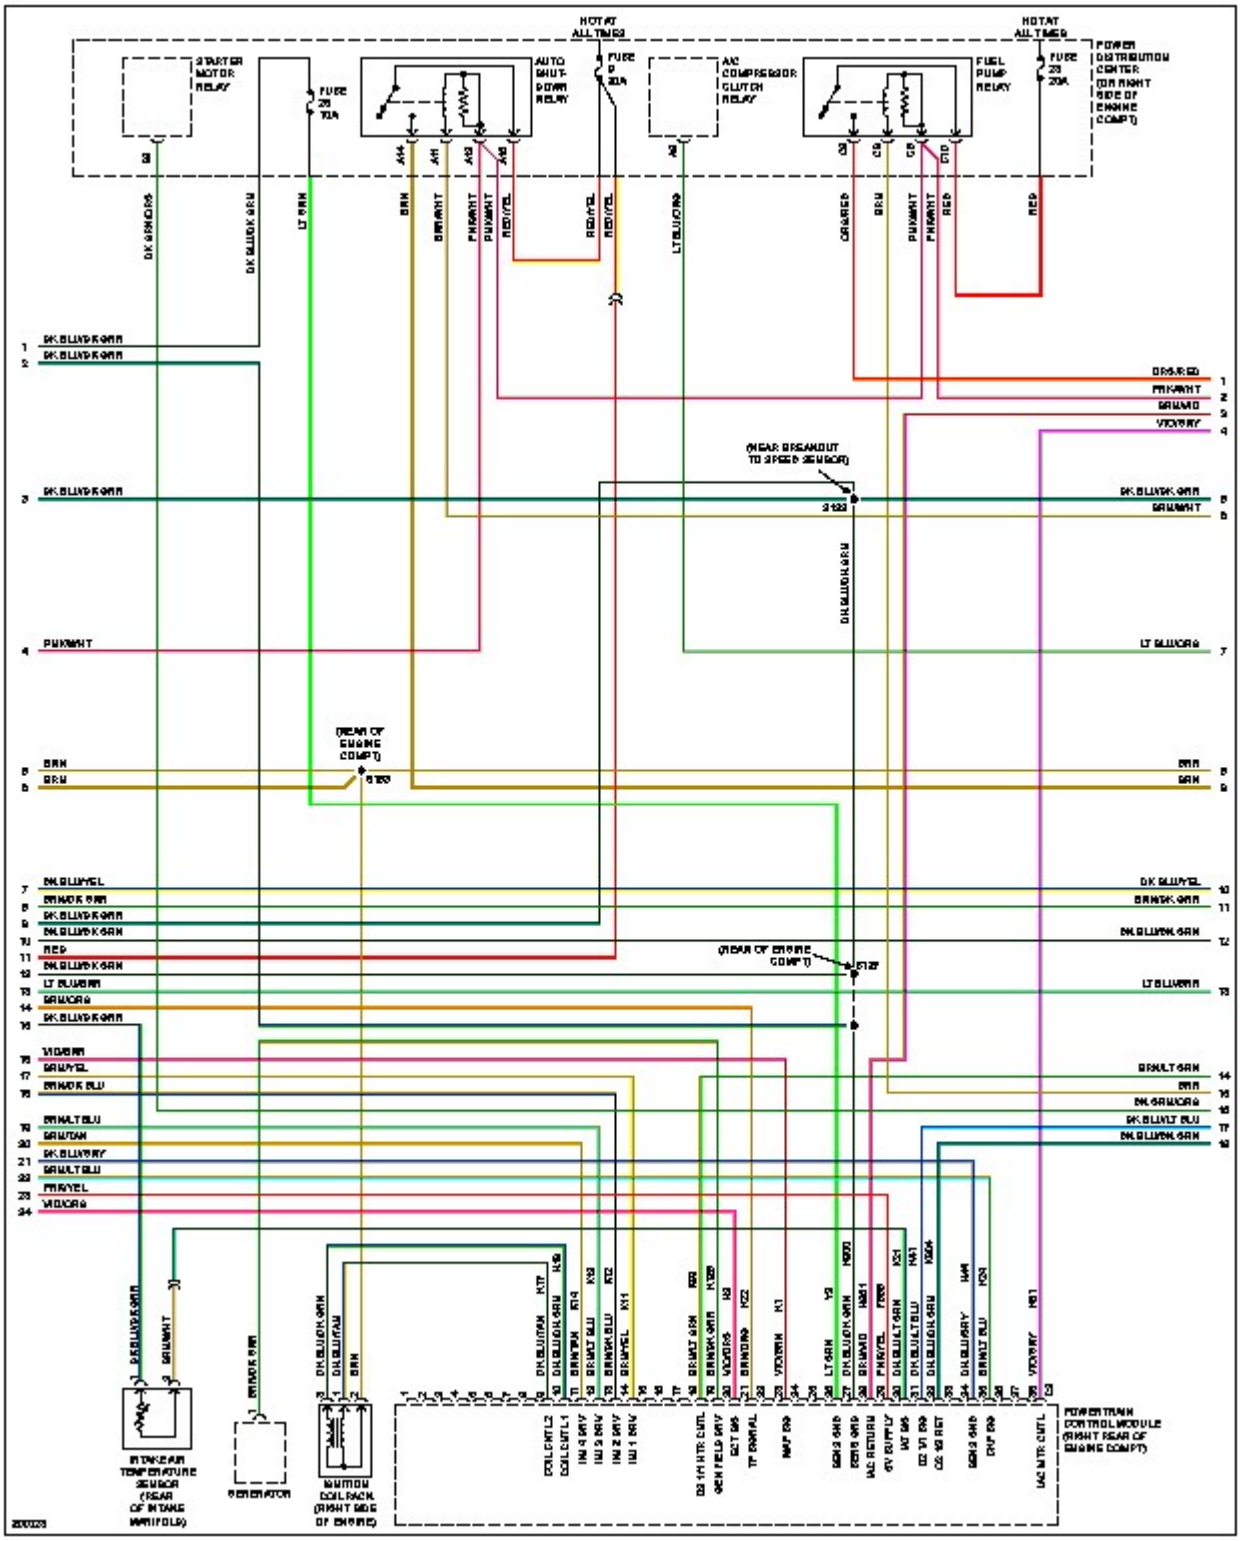
HOT AT ALL TIMES
HOT AT ALL TIMES
STARTER MOTOR RELAY
FUSE 28 10A
AUTO SHUT-DOWN RELAY
FUSE 9 30A
A/C COMPRESSOR CLUTCH RELAY
FUEL PUMP RELAY
FUSE 23 20A
POWER DISTRIBUTION CENTER (ON RIGHT SIDE OF ENGINE COMPT)
DK BLU/DK GRN
LT GRN
BRN
BRN/WHT
PNK/WHT
RED/YEL
LT BLU/ORG
ORG/RED
GRY
RED
(NEAR BREAKOUT TO SPEED SENSOR)
S123
(REAR OF ENGINE COMPT)
S122
S103
BRN/DK BLU
BRN/DK GRN
BRN/LT BLU
BRN/YEL
BRN/TAN
BRN/ORG
VIO/BRN
VIO/ORG
GRY/YEL
DK BLU/TAN
DK BLU/ORG
DK BLU/GRY
DK BLU/LT BLU
DK BLU/YEL
INTAKE AIR TEMPERATURE SENSOR (REAR OF INTAKE MANIFOLD)
GENERATOR
IGNITION COIL PACK (RIGHT SIDE OF ENGINE)
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)
COIL 6 CTL
COIL 5 CTL
INJ 6 DRV
INJ 5 DRV
INJ 4 DRV
INJ 3 DRV
INJ 2 DRV
INJ 1 DRV
EGR SOL CTL
GENERATOR FIELD DRV
ECT SIG
TP SIGNAL
MAP SIG
CRANK SNS
EDIS SIG
MAF RETURN
5V SUPPLY
MAF SIG
O2 S1 SIG
O2 S2 RET
CRANK SNS
CKP SIG
IAC MTR CNTL