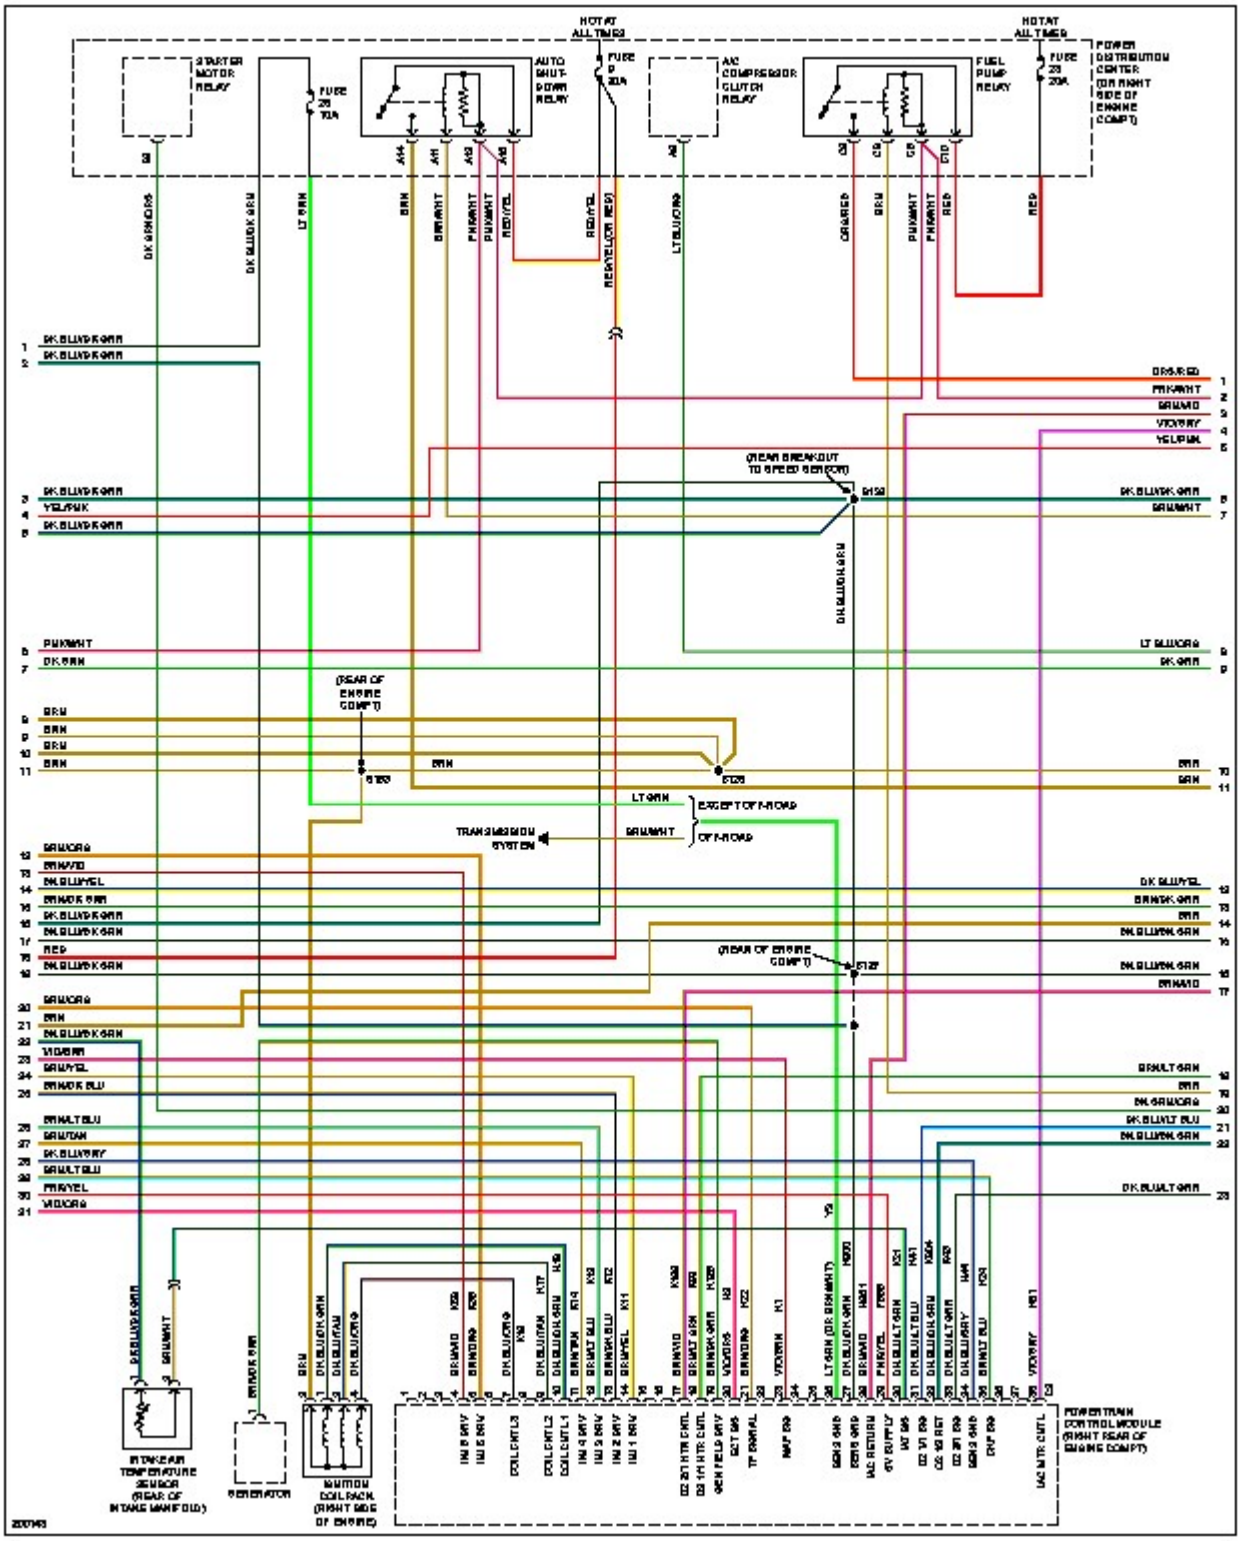
HOT AT ALL TIMES
STARTER MOTOR RELAY
AUTO SHUT-DOWN RELAY
A/C COMPRESSOR CLUTCH RELAY
FUEL PUMP RELAY
POWER DISTRIBUTION CENTER (OR RIGHT SIDE OF ENGINE COMPT)
(REAR BREAKOUT TO SPEED SENSOR)
(REAR OF ENGINE COMPT)
EXCEPT OFF-ROAD
OFF-ROAD
TRANSMISSION SYSTEM
INTAKE AIR TEMPERATURE SENSOR (REAR OF INTAKE MANIFOLD)
GENERATOR
IGNITION COIL PACK (RIGHT SIDE OF ENGINE)
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)