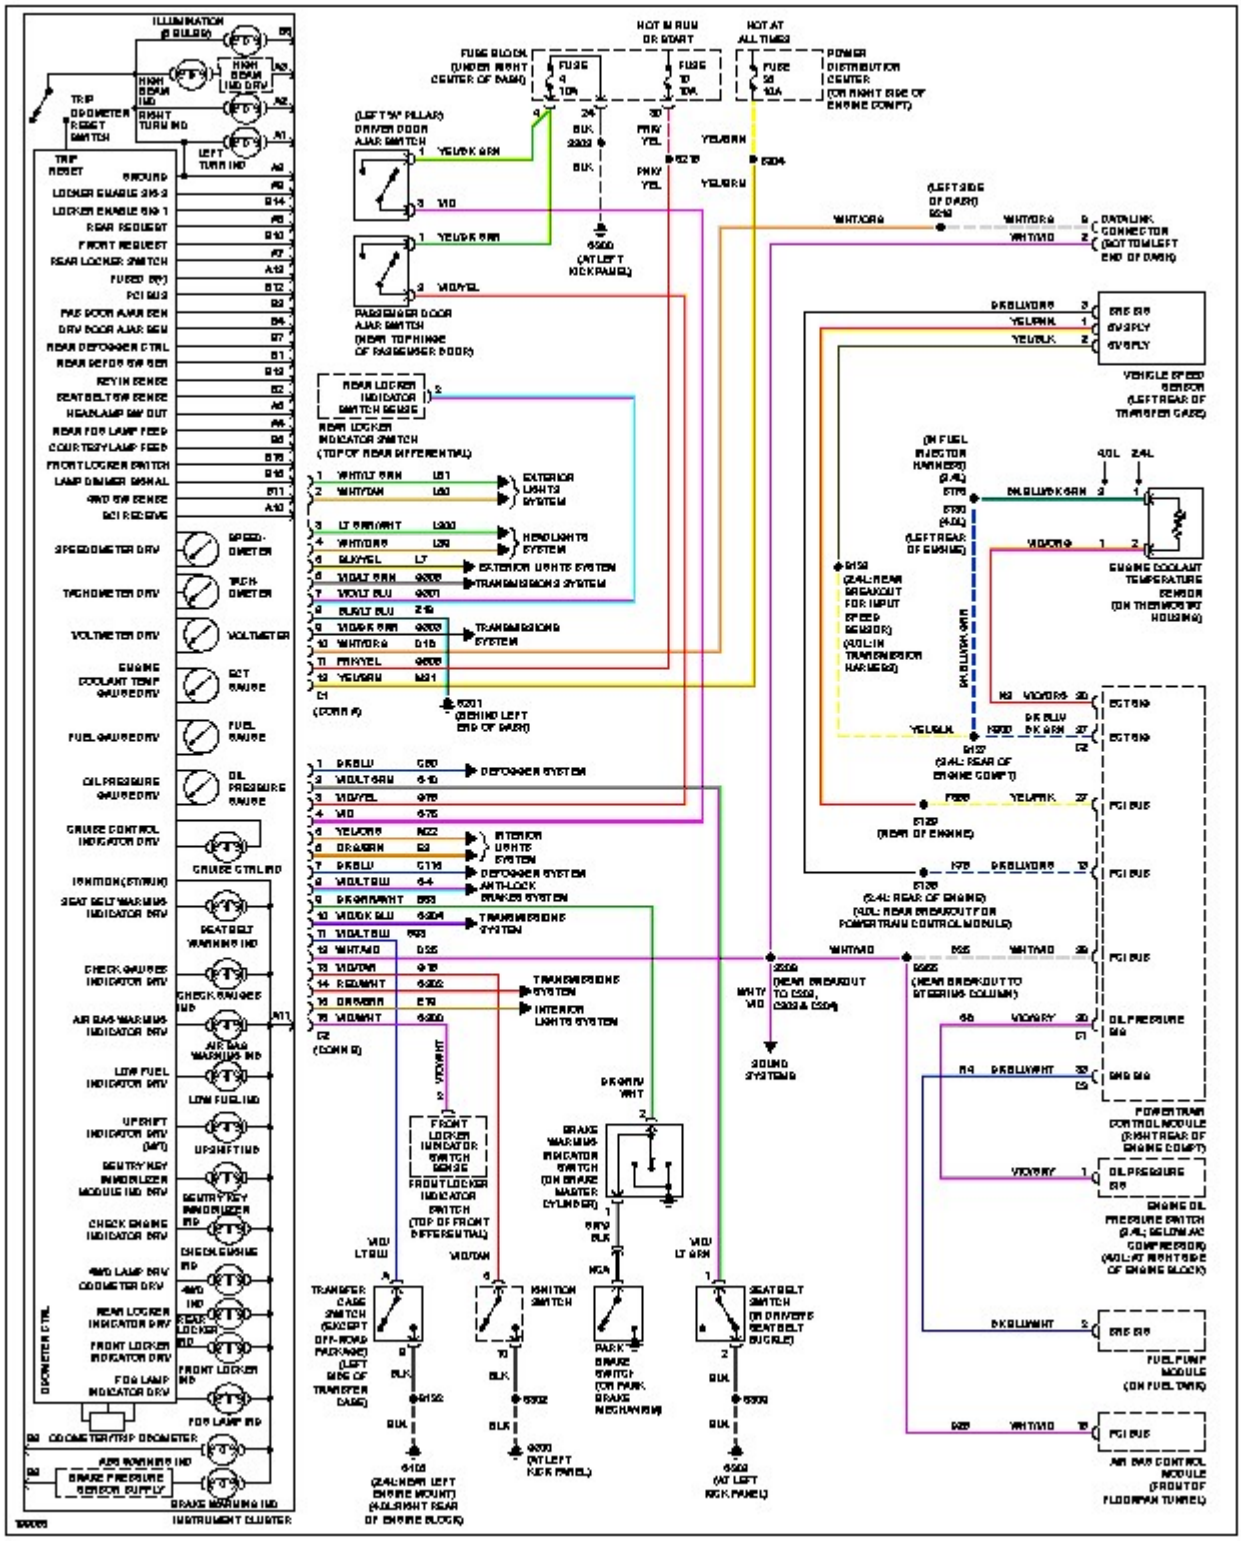

ILLUMINATION (6 BULBS)
HIGH BEAM IND DRV
HIGH BEAM IND
RIGHT TURN IND
LEFT TURN IND
TRIP ODOMETER RESET SWITCH
TRIP RESET
GROUND
LOCKER ENABLE SIG 2
LOCKER ENABLE SIG 1
REAR REQUEST
FRONT REQUEST
REAR LOCKER SWITCH
FUSED B(+)
PCI BUS
PAS DOOR AJAR SEN
DRV DOOR AJAR SEN
REAR DEFOGGER CTRL
REAR DEFOG SW SEN
KEY IN SENSE
SEAT BELT SW SENSE
HEADLAMP SW OUT
REAR FOG LAMP FEED
COURTESY LAMP FEED
FRONT LOCKER SWITCH
LAMP DIMMER SIGNAL
4WD SW SENSE
BCI RECEIVE
SPEEDOMETER DRV
SPEED-OMETER
TACHOMETER DRV
TACH-OMETER
VOLTMETER DRV
VOLTMETER
ENGINE COOLANT TEMP GAUGE DRV
ECT GAUGE
FUEL GAUGE DRV
FUEL GAUGE
OIL PRESSURE GAUGE DRV
OIL PRESSURE GAUGE
CRUISE CONTROL INDICATOR DRV
CRUISE CTRL IND
IGNITION (STRUN)
SEAT BELT WARNING INDICATOR DRV
SEAT BELT WARNING IND
CHECK GAUGES INDICATOR DRV
CHECK GAUGES IND
AIR BAG WARNING INDICATOR DRV
AIR BAG WARNING IND
LOW FUEL INDICATOR DRV
LOW FUEL IND
UPSHIFT INDICATOR DRV (MT)
UPSHIFT IND
SENTRY KEY IMMOBILIZER MODULE IND DRV
SENTRY KEY IMMOBILIZER IND
CHECK ENGINE INDICATOR DRV
CHECK ENGINE IND
4WD LAMP DRV
ODOMETER DRV
4WD IND
REAR LOCKER INDICATOR DRV
REAR LOCKER IND
FRONT LOCKER INDICATOR DRV
FRONT LOCKER IND
FOG LAMP INDICATOR DRV
FOG LAMP IND
ODOMETER CTRL
ODOMETER/TRIP ODOMETER
ABS WARNING IND
BRAKE PRESSURE SENSOR SUPPLY
BRAKE WARNING IND
INSTRUMENT CLUSTER
FUSE BLOCK (UNDER RIGHT CENTER OF DASH)
HOT IN RUN OR START
HOT AT ALL TIMES
POWER DISTRIBUTION CENTER (ON RIGHT SIDE OF ENGINE COMPT)
(LEFT "A" PILLAR) DRIVER DOOR AJAR SWITCH
PASSENGER DOOR AJAR SWITCH (NEAR TOP HINGE OF PASSENGER DOOR)
(AT LEFT KICK PANEL)
(LEFT SIDE OF DASH)
DATALINK CONNECTOR (BOTTOM LEFT END OF DASH)
VEHICLE SPEED SENSOR (LEFT REAR OF TRANSFER CASE)
REAR LOCKER INDICATOR SWITCH SENSE
REAR LOCKER INDICATOR SWITCH (TOP OF REAR DIFFERENTIAL)
EXTERIOR LIGHTS SYSTEM
HEADLIGHTS SYSTEM
TRANSMISSIONS SYSTEM
(BEHIND LEFT END OF DASH)
(IN FUEL INJECTOR HARNESS)
(LEFT REAR OF ENGINE)
ENGINE COOLANT TEMPERATURE SENSOR (ON THERMOSTAT HOUSING)
(2.4L: REAR BREAKOUT FOR INPUT SPEED SENSOR)
(4.0L: IN TRANSMISSION HARNESS)
(2.4L: REAR OF ENGINE COMPT)
(REAR OF ENGINE)
(2.4L: REAR OF ENGINE)
(4.0L: REAR BREAKOUT FOR POWERTRAIN CONTROL MODULE)
DEFOGGER SYSTEM
INTERIOR LIGHTS SYSTEM
ANTI-LOCK BRAKES SYSTEM
(NEAR BREAKOUT TO STEERING COLUMN)
SOUND SYSTEMS
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)
ENGINE OIL PRESSURE SWITCH (2.4L: BELOW A/C COMPRESSOR) (4.0L: AT RIGHT SIDE OF ENGINE BLOCK)
FUEL PUMP MODULE (ON FUEL TANK)
AIR BAG CONTROL MODULE (FRONT OF FLOORPAN TUNNEL)
FRONT LOCKER INDICATOR SWITCH SENSE
FRONT LOCKER INDICATOR SWITCH (TOP OF FRONT DIFFERENTIAL)
BRAKE WARNING INDICATOR SWITCH (ON BRAKE MASTER CYLINDER)
TRANSFER CASE SWITCH (EXCEPT OFF-ROAD PACKAGE) (LEFT SIDE OF TRANSFER CASE)
IGNITION SWITCH
PARK BRAKE SWITCH (ON PARK BRAKE MECHANISM)
SEAT BELT SWITCH (IN DRIVERS SEAT BELT BUCKLE)
(2.4L: NEAR LEFT ENGINE MOUNT) (4.0L: RIGHT REAR OF ENGINE BLOCK)
(AT LEFT KICK PANEL)
(AT LEFT KICK PANEL)