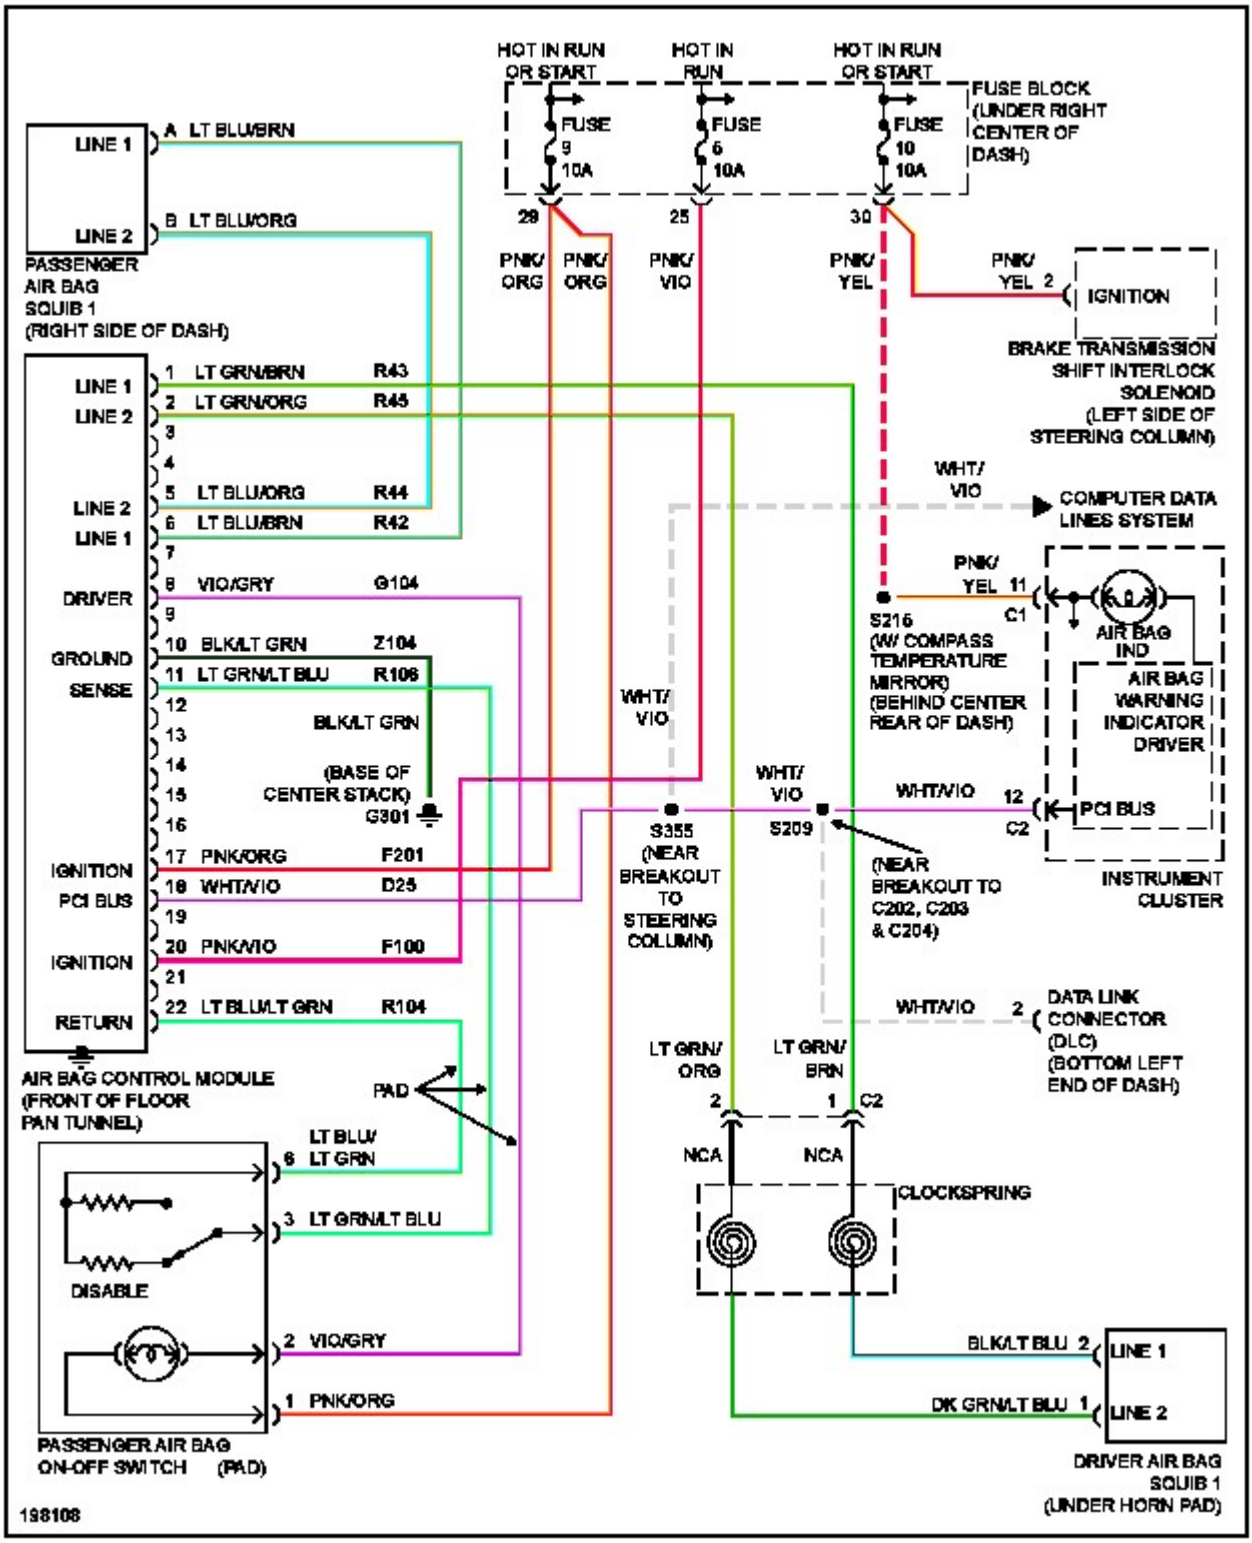
HOT IN RUN OR START
HOT IN RUN
HOT IN RUN OR START
FUSE BLOCK (UNDER RIGHT CENTER OF DASH)
FUSE 9 10A
FUSE 6 10A
FUSE 10 10A
29
25
30
PNK/ ORG
PNK/ ORG
PNK/ VIO
PNK/ YEL
PNK/ YEL 2
IGNITION
BRAKE TRANSMISSION SHIFT INTERLOCK SOLENOID (LEFT SIDE OF STEERING COLUMN)
LINE 1
LINE 2
A LT BLU/BRN
B LT BLU/ORG
PASSENGER AIR BAG SQUIB 1 (RIGHT SIDE OF DASH)
1 LT GRN/BRN R43
2 LT GRN/ORG R45
5 LT BLU/ORG R44
6 LT BLU/BRN R42
DRIVER
8 VIO/GRY G104
GROUND
10 BLK/LT GRN Z104
SENSE
11 LT GRN/LT BLU R106
BLK/LT GRN
(BASE OF CENTER STACK)
G301
IGNITION
17 PNK/ORG F201
PCI BUS
18 WHT/VIO D25
IGNITION
20 PNK/VIO F100
RETURN
22 LT BLU/LT GRN R104
AIR BAG CONTROL MODULE (FRONT OF FLOOR PAN TUNNEL)
WHT/ VIO
COMPUTER DATA LINES SYSTEM
PNK/ YEL 11
C1
S216 (W/ COMPASS TEMPERATURE MIRROR) (BEHIND CENTER REAR OF DASH)
AIR BAG IND
AIR BAG WARNING INDICATOR DRIVER
WHT/ VIO
WHT/VIO 12
C2
PCI BUS
S355 (NEAR BREAKOUT TO STEERING COLUMN)
S209
(NEAR BREAKOUT TO C202, C203 & C204)
INSTRUMENT CLUSTER
WHT/VIO 2
DATA LINK CONNECTOR (DLC) (BOTTOM LEFT END OF DASH)
LT GRN/ ORG
LT GRN/ BRN
2
1
C2
NCA
NCA
CLOCKSPRING
PAD
LT BLU/ LT GRN 6
3 LT GRN/LT BLU
DISABLE
2 VIO/GRY
1 PNK/ORG
PASSENGER AIR BAG ON-OFF SWITCH (PAD)
BLK/LT BLU 2
DK GRN/LT BLU 1
LINE 1
LINE 2
DRIVER AIR BAG SQUIB 1 (UNDER HORN PAD)
198108