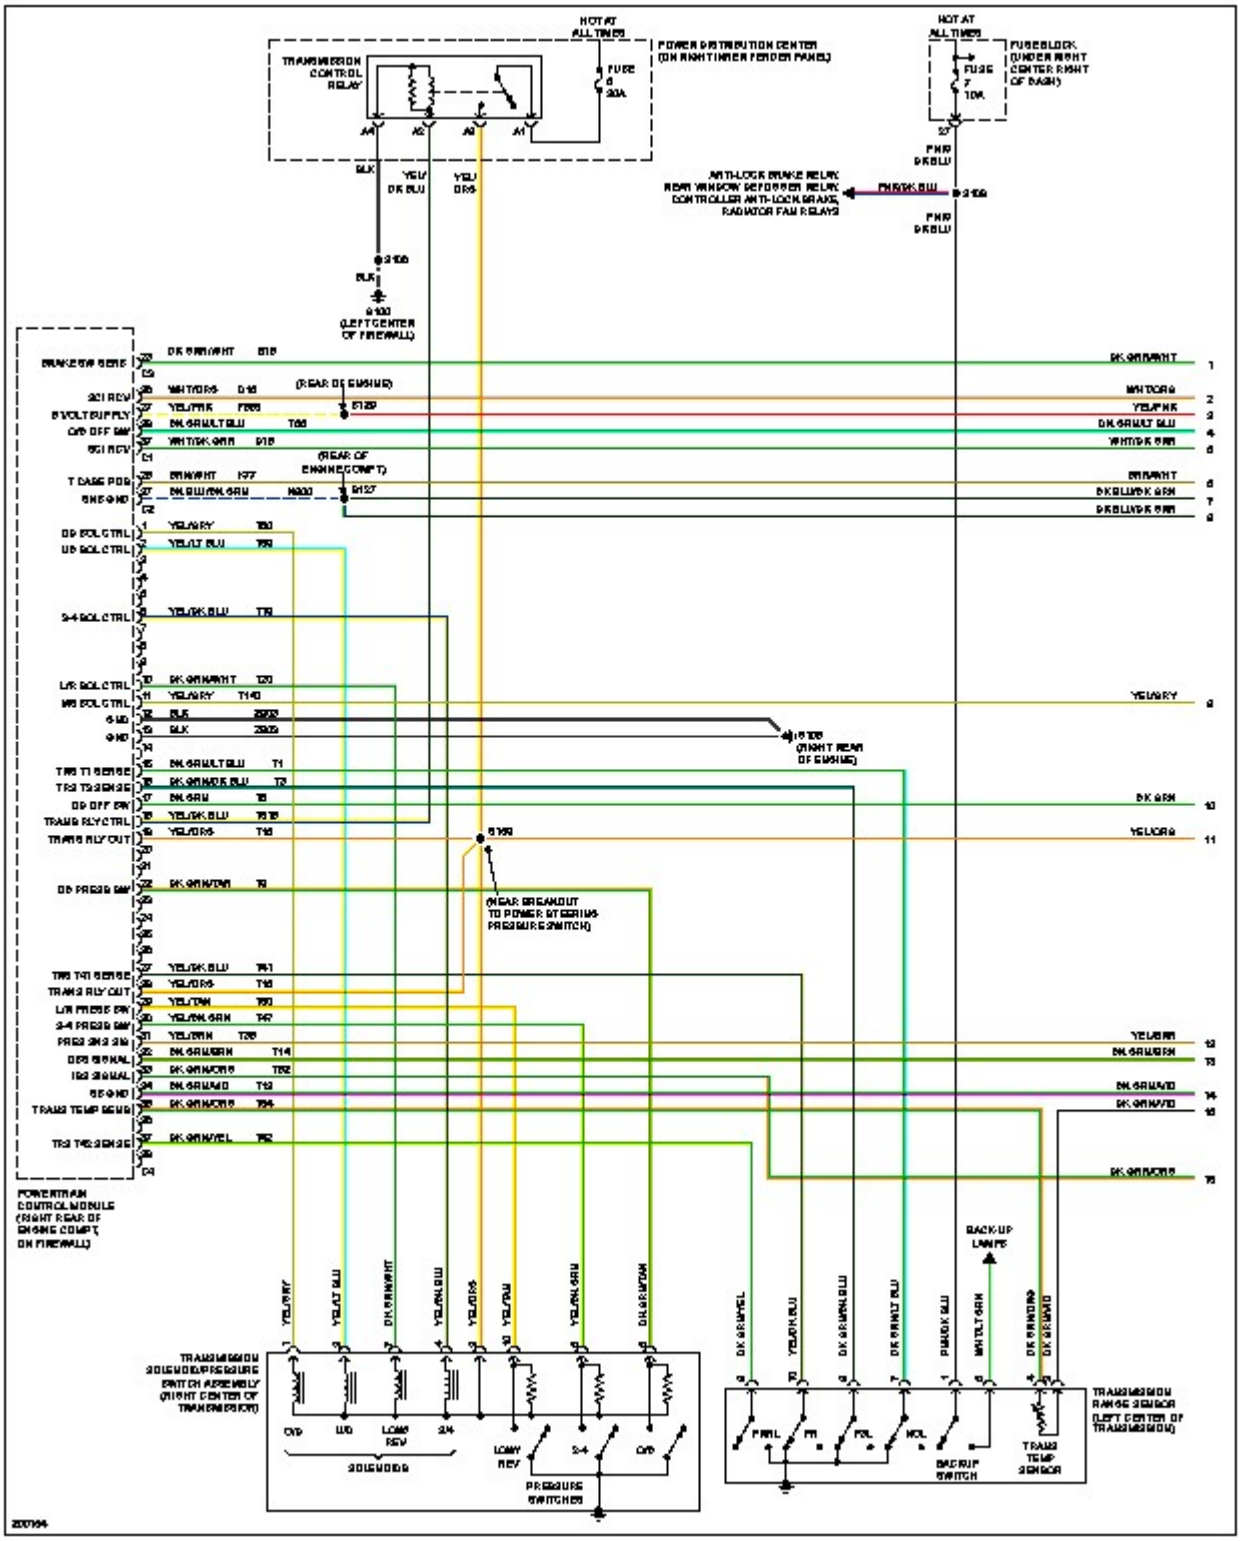
HOT AT ALL TIMES
POWER DISTRIBUTION CENTER (ON RIGHT INNER FENDER PANEL)
TRANSMISSION CONTROL RELAY
FUSE 6 30A
HOT AT ALL TIMES
FUSEBLOCK (UNDER RIGHT CENTER RIGHT OF DASH)
FUSE 7 10A
ANTI-LOCK BRAKE RELAY
REAR WINDOW DEFOGGER RELAY
CONTROLLER ANTI-LOCK BRAKE
RADIATOR FAN RELAYS
G100 (LEFT CENTER OF FIREWALL)
(REAR OF ENGINE COMPT)
(RIGHT REAR OF ENGINE)
(NEAR BREAKOUT TO POWER STEERING PRESSURE SWITCH)
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT, ON FIREWALL)
BRAKE SW SENS
SCI RCV
8 VOLT SUPPLY
CPP OFF SW
SCI XMT
T CASE POS
ENG GND
OD SOL CTRL
UD SOL CTRL
3-4 SOL CTRL
L/R SOL CTRL
M/S SOL CTRL
G-ND
G-ND
TRS T1 SENSE
TRS T2 SENSE
OD OFF SW
TRANS RLY CTRL
TRANS RLY OUT
OD PRESS SW
TRS T4 SENSE
TRANS RLY OUT
L/R PRESS SW
3-4 PRESS SW
PRESS SW G-ND
OSS SIGNAL
TSS SIGNAL
SS G-ND
TRANS TEMP SENSE
TRS T4S SENSE
TRANSMISSION SOLENOID/PRESSURE SWITCH ASSEMBLY (RIGHT CENTER OF TRANSMISSION)
SOLENOIDS
PRESSURE SWITCHES
BACK-UP LAMPS
BACK-UP SWITCH
TRANS TEMP SENSOR
TRANSMISSION RANGE SENSOR (LEFT CENTER OF TRANSMISSION)
200104