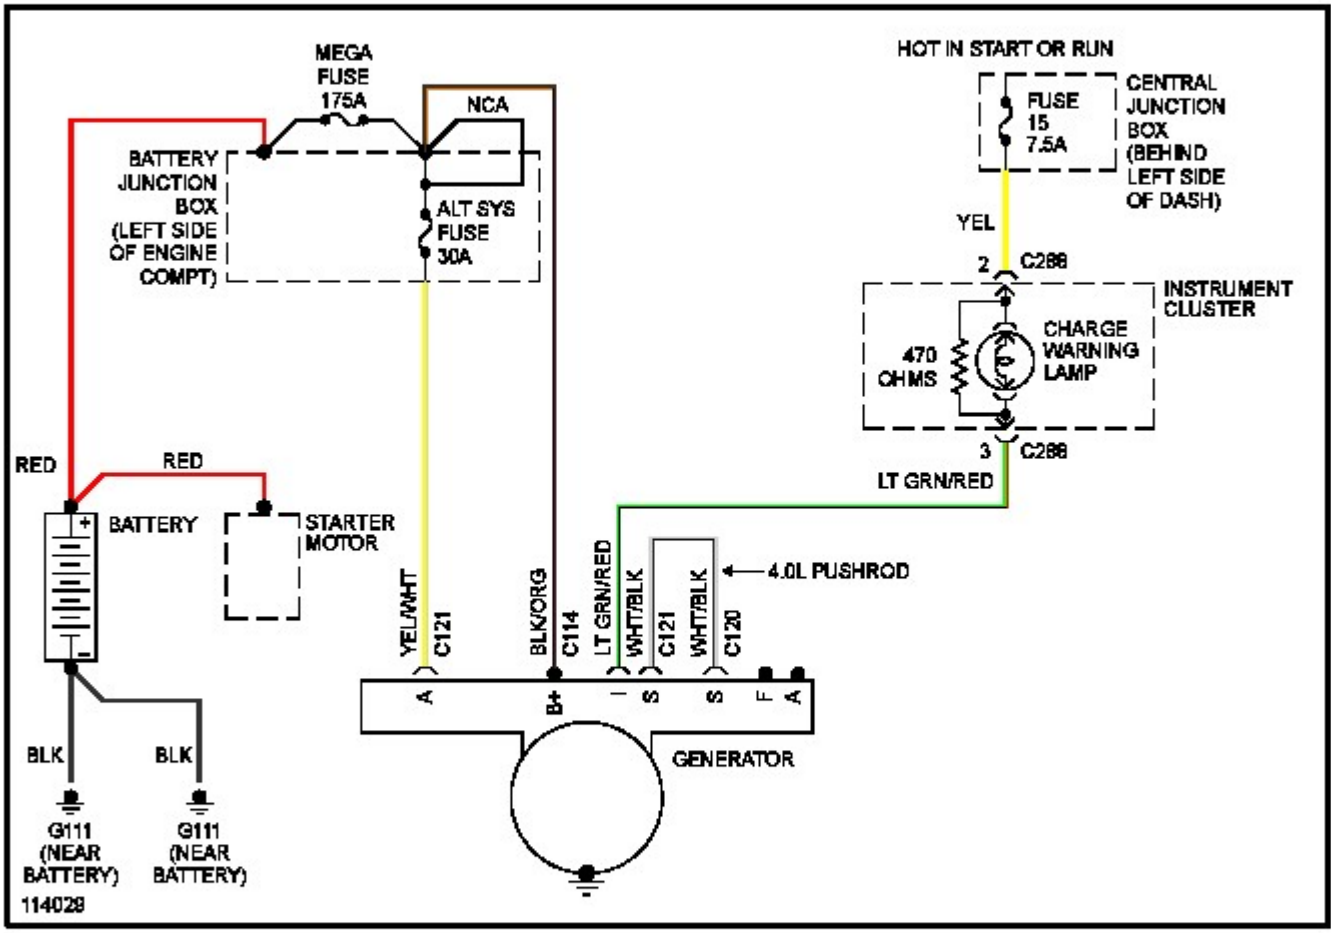
MEGA FUSE 175A
NCA
BATTERY JUNCTION BOX (LEFT SIDE OF ENGINE COMPT)
ALT SYS FUSE 30A
HOT IN START OR RUN
FUSE 15 7.5A
CENTRAL JUNCTION BOX (BEHIND LEFT SIDE OF DASH)
YEL
2
C288
INSTRUMENT CLUSTER
470 OHMS
CHARGE WARNING LAMP
3
C288
LT GRN/RED
RED
RED
BATTERY
STARTER MOTOR
YEL/WHT
C121
BLK/ORG
C114
LT GRN/RED
WHT/BLK
C121
WHT/BLK
C120
4.0L PUSHROD
A
B+
I
S
S
F
A
GENERATOR
BLK
BLK
G111 (NEAR BATTERY)
G111 (NEAR BATTERY)
114028