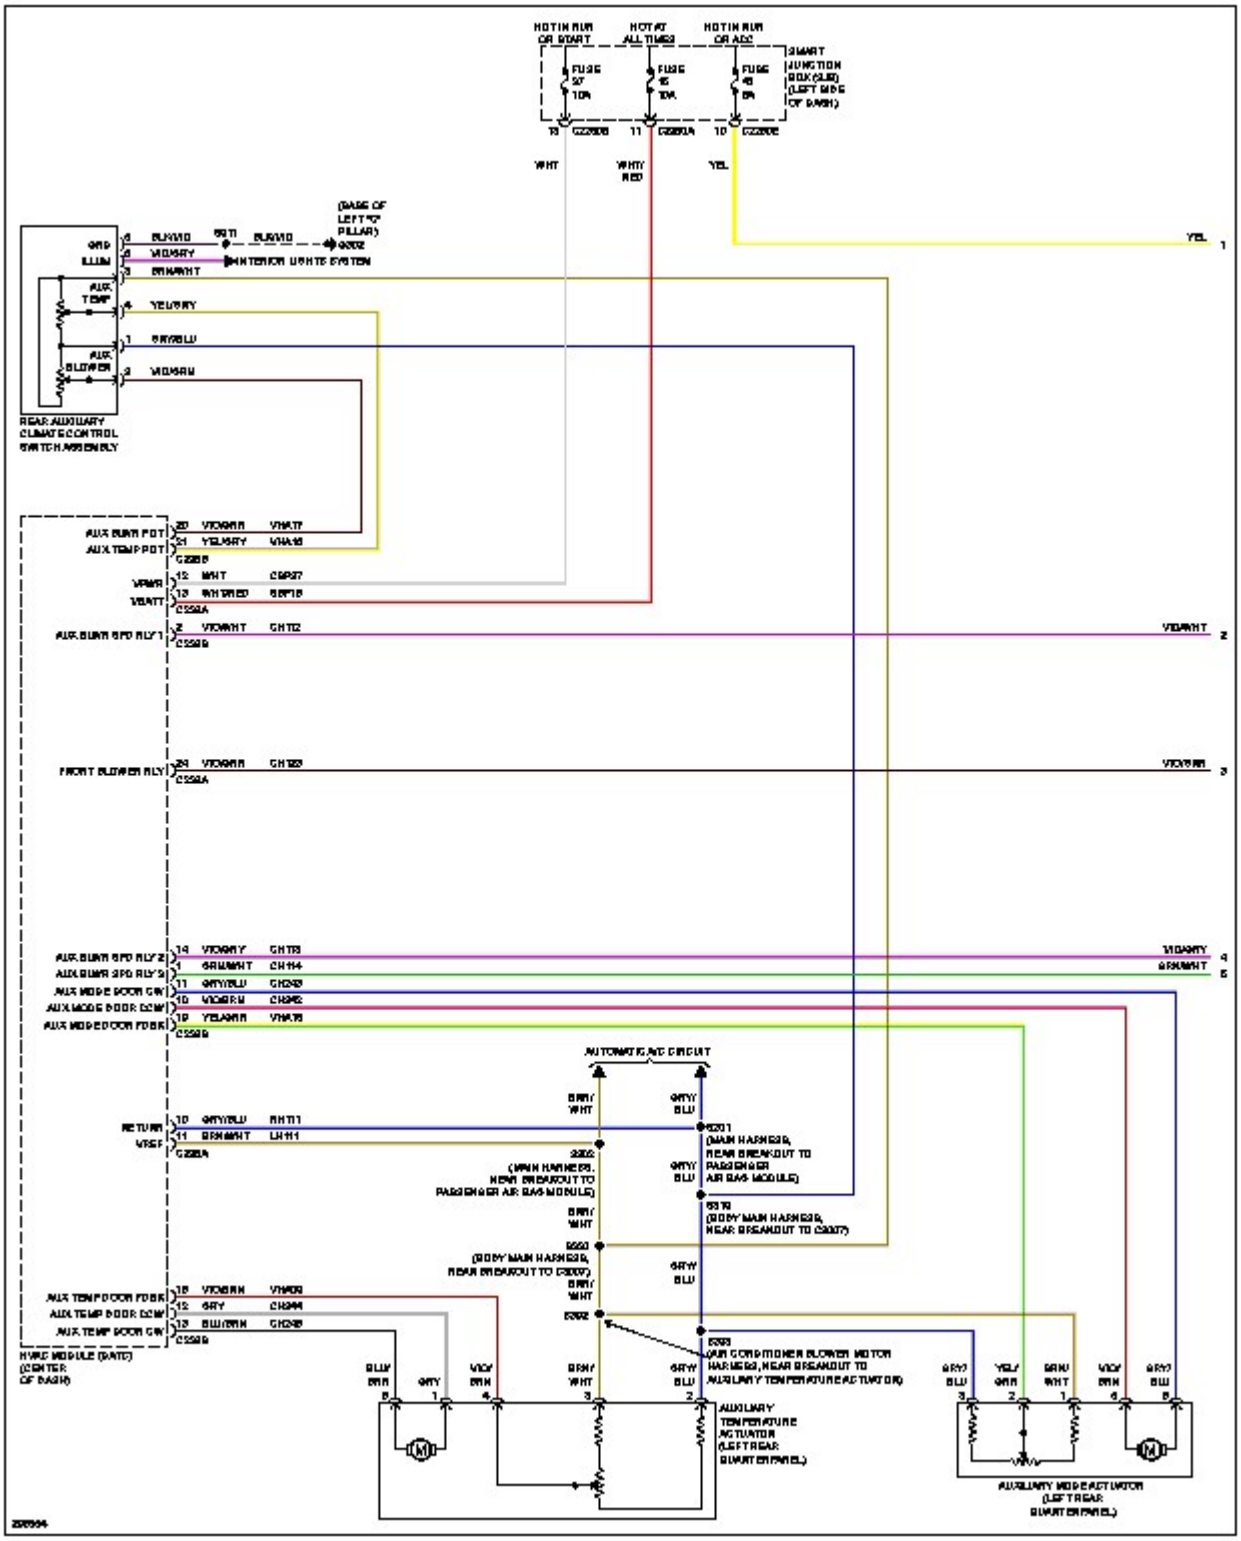
HOT IN RUN OR START
HOT AT ALL TIMES
HOT IN RUN OR ACC
FUSE 57 10A
FUSE 15 10A
FUSE 48 5A
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
WHT
WHT/RED
YEL
(BASE OF LEFT "C" PILLAR)
INTERIOR LIGHTS SYSTEM
AUX TEMP
AUX BLOWER
REAR AUXILIARY CLIMATE CONTROL SWITCH ASSEMBLY
AUX BLWR POT
AUX TEMP POT
VPWR
VSWITT
AUX BLWR SPD RLY 1
FRONT BLOWER RLY
AUX BLWR SPD RLY 2
AUX BLWR SPD RLY 3
AUX MODE DOOR OPN
AUX MODE DOOR CLSD
AUX MODE DOOR FDBK
RETURN
VREF
AUX TEMP DOOR FDBK
AUX TEMP DOOR CLSD
AUX TEMP DOOR OPN
HVAC MODULE (BATT) (CENTER OF DASH)
AUTOMATIC A/C CIRCUIT
(MAIN HARNESS, NEAR BREAKOUT TO PASSENGER AIR BAG MODULE)
(BODY MAIN HARNESS, NEAR BREAKOUT TO C3007)
AIR CONDITIONER BLOWER MOTOR HARNESS, NEAR BREAKOUT TO AUXILIARY TEMPERATURE ACTUATOR
AUXILIARY TEMPERATURE ACTUATOR (LEFT REAR QUARTER PANEL)
AUXILIARY MODE ACTUATOR (LEFT REAR QUARTER PANEL)