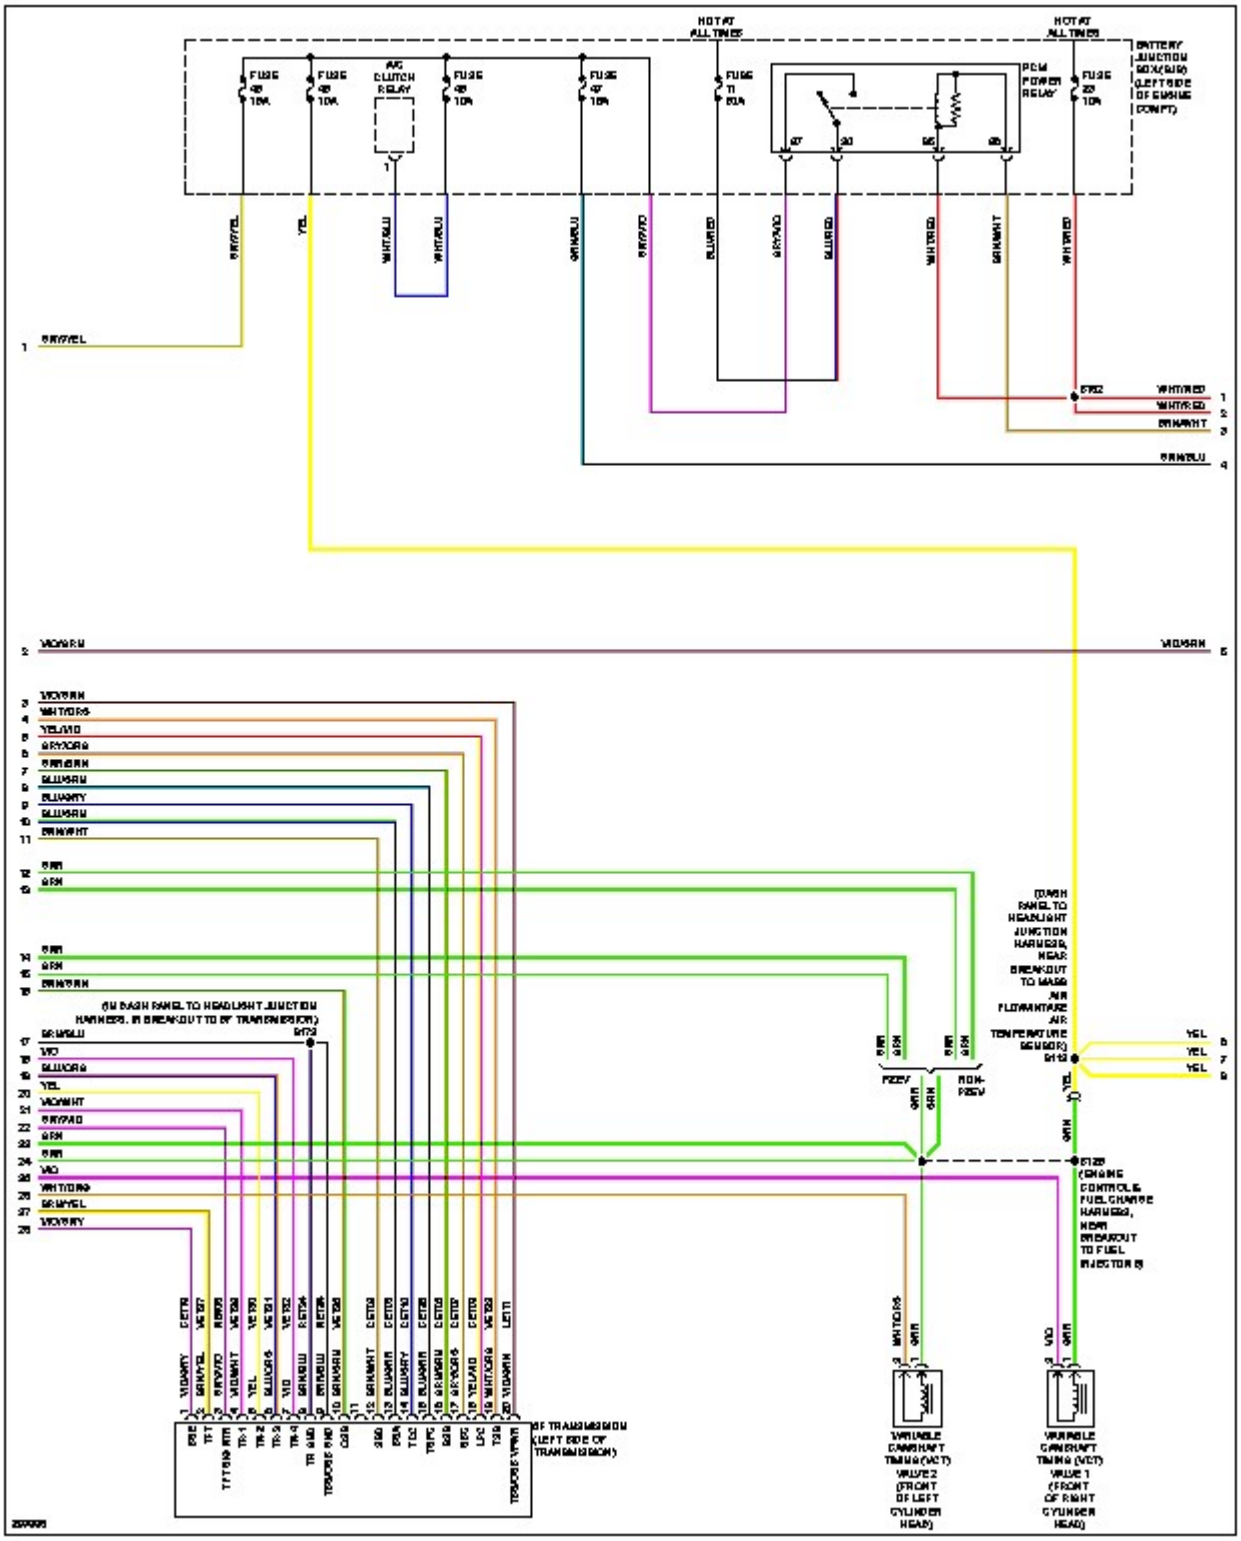
HOT AT ALL TIMES
HOT AT ALL TIMES
BATTERY JUNCTION BOX(BJB) (LEFT SIDE OF ENGINE COMPT)
FUSE 46 10A
FUSE 45 10A
A/C CLUTCH RELAY
FUSE 48 10A
FUSE 47 10A
FUSE 11 60A
PCM POWER RELAY
FUSE 23 10A
87
30
85
86
BRN/YEL
YEL
WHT/BLU
WHT/BLU
BRN/BLU
BRN/RED
BLU/RED
BRN/RED
BLU/RED
WHT/RED
BRN/WHT
WHT/RED
S152
WHT/RED
WHT/RED
BRN/WHT
BRN/BLU
VIO/BRN
VIO/BRN
WHT/ORN
YEL/VIO
BRN/ORN
BRN/GRN
BLU/BRN
BLU/GRY
BLU/BRN
BRN/WHT
GRN
GRN
GRN
GRN
GRN/BRN
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, IN BREAKOUT TO BF TRANSMISSION)
S172
BRN/BLU
VIO
BLU/ORN
YEL
VIO/WHT
BRN/RED
GRN
GRN
VIO
WHT/ORN
BRN/YEL
VIO/BRN
(DASH PANEL TO HEADLIGHT JUNCTION HARNESS, NEAR BREAKOUT TO MASS AIR FLOW/INTAKE AIR TEMPERATURE SENSORS)
S112
YEL
YEL
YEL
PZEV
NON-PZEV
S125
(ENGINE CONTROLS, FUEL CHARGE HARNESS, NEAR BREAKOUT TO FUEL INJECTOR 8)
C2178
C2179
C2180
C2181
C2182
C2183
C2184
C2185
C2186
C2187
C2188
C2189
C2190
C2191
C2192
C2193
C2194
C2195
C2196
C2197
C2198
C2199
C2200
C2201
C2202
C2203
C2204
C2205
C2206
C2207
C2208
C2209
C2210
C2211
C2212
C2213
C2214
C2215
C2216
C2217