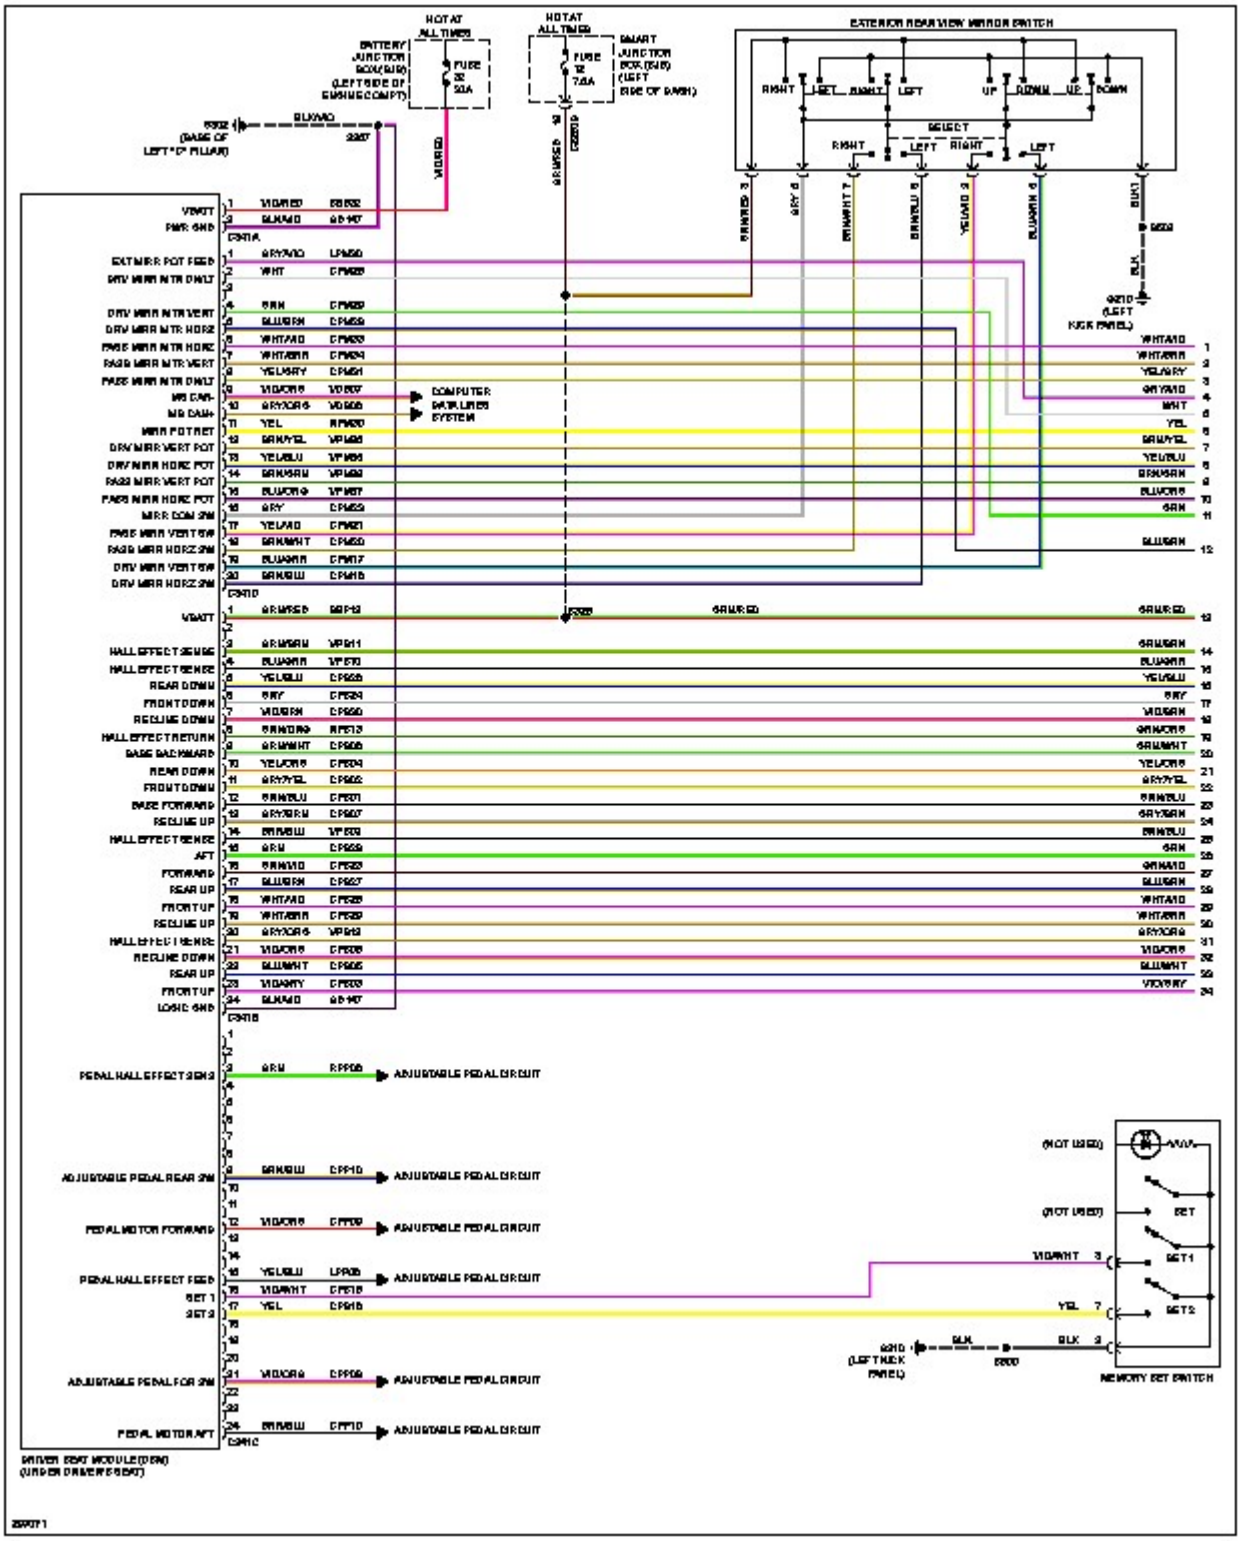

HOT AT ALL TIMES
BATTERY JUNCTION BOX (BJB) (LEFT SIDE OF ENGINE COMPT)
FUSE 32 20A
HOT AT ALL TIMES
SMART JUNCTION BOX (SJB) (LEFT SIDE OF DASH)
FUSE 12 7.5A
EXTERIOR REAR VIEW MIRROR SWITCH
RIGHT
LEFT
RIGHT
LEFT
UP
DOWN
UP
DOWN
SELECT
RIGHT
LEFT
RIGHT
LEFT
BLK/VIO
(BASE OF LEFT "C" PILLAR)
VIO/RED
GRN/RED
VBATT
PWR GND
EXT MIRR POT FEED
DRV MIRR MTR DN/LT
DRV MIRR MTR VERT
DRV MIRR MTR HORZ
PASS MIRR MTR HORZ
PASS MIRR MTR VERT
PASS MIRR MTR DN/LT
MS CAN-
MS CAN+
MIRR POT RET
DRV MIRR VERT POT
DRV MIRR HORZ POT
PASS MIRR VERT POT
PASS MIRR HORZ POT
MIRR COM SW
PASS MIRR VERT SW
PASS MIRR HORZ SW
DRV MIRR VERT SW
DRV MIRR HORZ SW
COMPUTER DATA LINES SYSTEM
VBATT
HALL EFFECT SENSE
HALL EFFECT SENSE
REAR DOWN
FRONT DOWN
RECLINE DOWN
HALL EFFECT RETURN
BASE BACKWARD
REAR DOWN
FRONT DOWN
BASE FORWARD
RECLINE UP
HALL EFFECT SENSE
AFT
FORWARD
REAR UP
FRONT UP
RECLINE UP
HALL EFFECT SENSE
RECLINE DOWN
REAR UP
FRONT UP
LOGIC GND
PEDAL HALL EFFECT SENS
ADJUSTABLE PEDAL REAR SW
PEDAL MOTOR FORWARD
PEDAL HALL EFFECT FEED
SET 1
SET 2
ADJUSTABLE PEDAL FOR SW
PEDAL MOTOR AFT
ADJUSTABLE PEDAL CIRCUIT
DRIVER SEAT MODULE (DSM) (UNDER DRIVER'S SEAT)
(NOT USED)
(NOT USED)
SET
SET 1
SET 2
VIO/WHT
YEL
BLK
(LEFT KICK PANEL)
MEMORY SET SWITCH