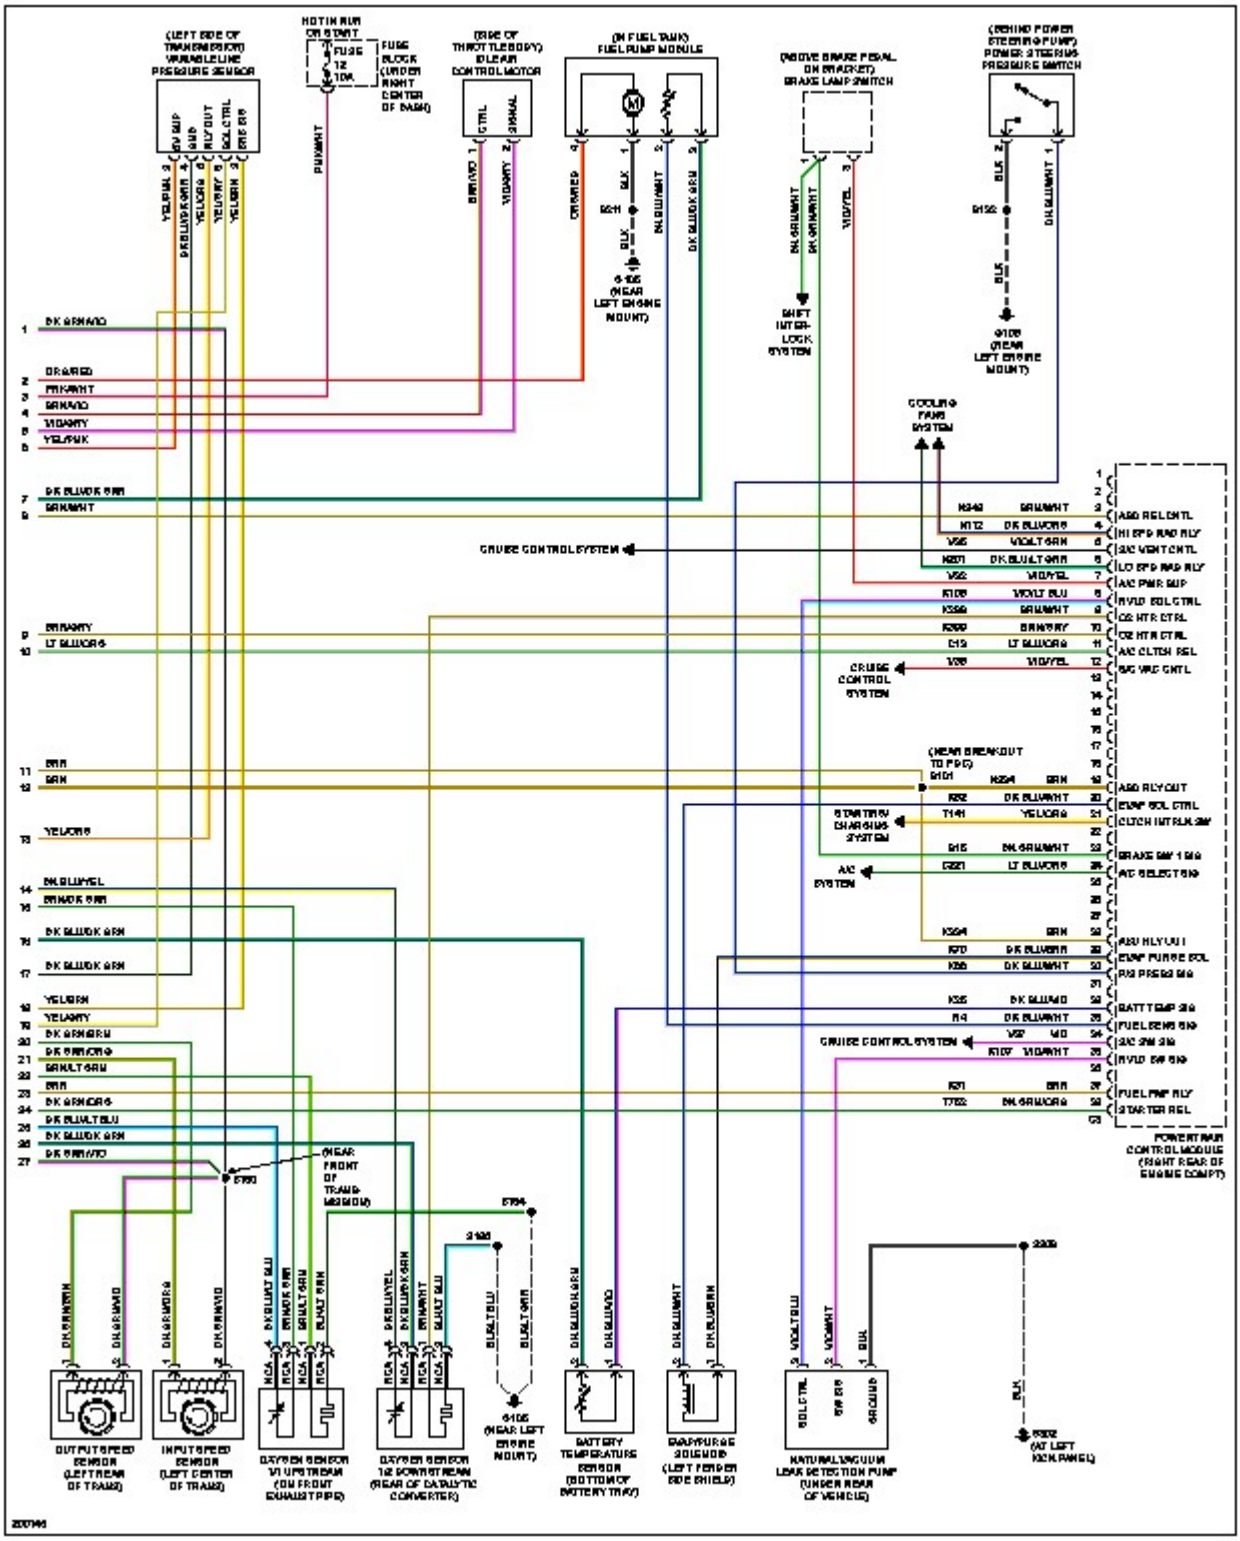
(LEFT SIDE OF TRANSMISSION) VARIABLE LINE PRESSURE SENSOR
HOT IN RUN OR START
FUSE 12 10A
FUSE BLOCK (UNDER RIGHT CENTER OF DASH)
(SIDE OF THROTTLE BODY) IDLE AIR CONTROL MOTOR
(IN FUEL TANK) FUEL PUMP MODULE
(ABOVE BRAKE PEDAL ON BRACKET) BRAKE LAMP SWITCH
(BEHIND POWER STEERING PUMP) POWER STEERING PRESSURE SWITCH
G105 (NEAR LEFT ENGINE MOUNT)
G108 (NEAR LEFT ENGINE MOUNT)
SHIFT INTER-LOCK SYSTEM
COOLING FANS SYSTEM
CRUISE CONTROL SYSTEM
STARTER/CHARGING SYSTEM
A/C SYSTEM
(NEAR BREAKOUT TO PDC)
G101
POWERTRAIN CONTROL MODULE (RIGHT REAR OF ENGINE COMPT)
G104 (NEAR FRONT OF TRANSMISSION)
OUTPUT SPEED SENSOR (LEFT REAR OF TRANS)
INPUT SPEED SENSOR (LEFT CENTER OF TRANS)
OXYGEN SENSOR 1/1 UPSTREAM (ON FRONT EXHAUST PIPE)
OXYGEN SENSOR 1/2 DOWNSTREAM (REAR OF CATALYTIC CONVERTER)
G105 (NEAR LEFT ENGINE MOUNT)
BATTERY TEMPERATURE SENSOR (BOTTOM OF BATTERY TRAY)
EVAP/PURGE SOLENOID (LEFT FENDER SIDE SHIELD)
NATURAL VACUUM LEAK DETECTION PUMP (UNDER REAR OF VEHICLE)
S302 (AT LEFT KICK PANEL)
220746